



Samsung WF1752WPW Washing Machine Door Seal/ Diaphragm Replacement

Door Seal / diaphragm replacement on Samsung washing machine.

Written By: exomen



INTRODUCTION

If your washing machine became leaky the problem might be with the door seal.



TOOLS:



- [Phillips #0 Screwdriver](#) (1)



PARTS:

- [Door Seal / Diaphragm](#) (1)

Step 1 — Remove Top lid

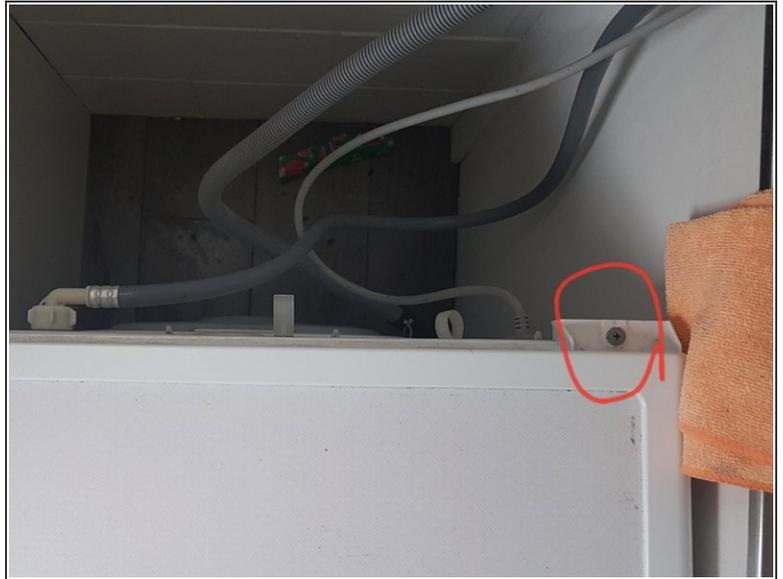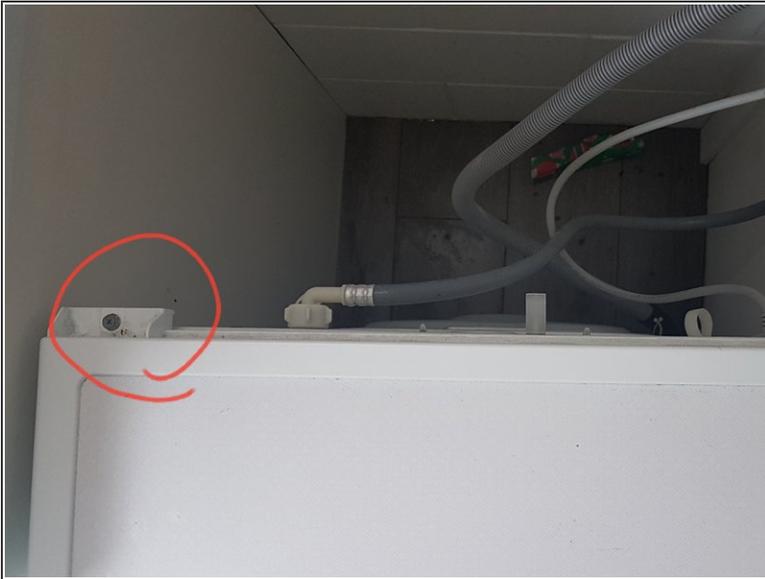

- Unscrew the top lid
- Take it off by sliding it towards back side of the washing machine

Step 2 — Remove loading bay



- Take out loading bay

Step 3 — Remove Control Panel



- Remove 5 screws

Step 4 — Unclip Control Panel



- carefully unclip control panel
- place it on top of your washing machine

Step 5 — Unscrew Front Panel



- Remove 5 screws

Step 6 — Remove Front Panel



- Remove the front rim
- Unclip Front Panel
- Unclip the door lock controller
- Remove Front Panel

Step 7 — Remove the



- Unscrew 2nd rim
- Remove 2nd rim
- Replace Door Seal

To reassemble your device, follow these instructions in reverse order.