




# Dell Inspiron 14 M4040 Display Assembly Replacement

Written By: Terrence15

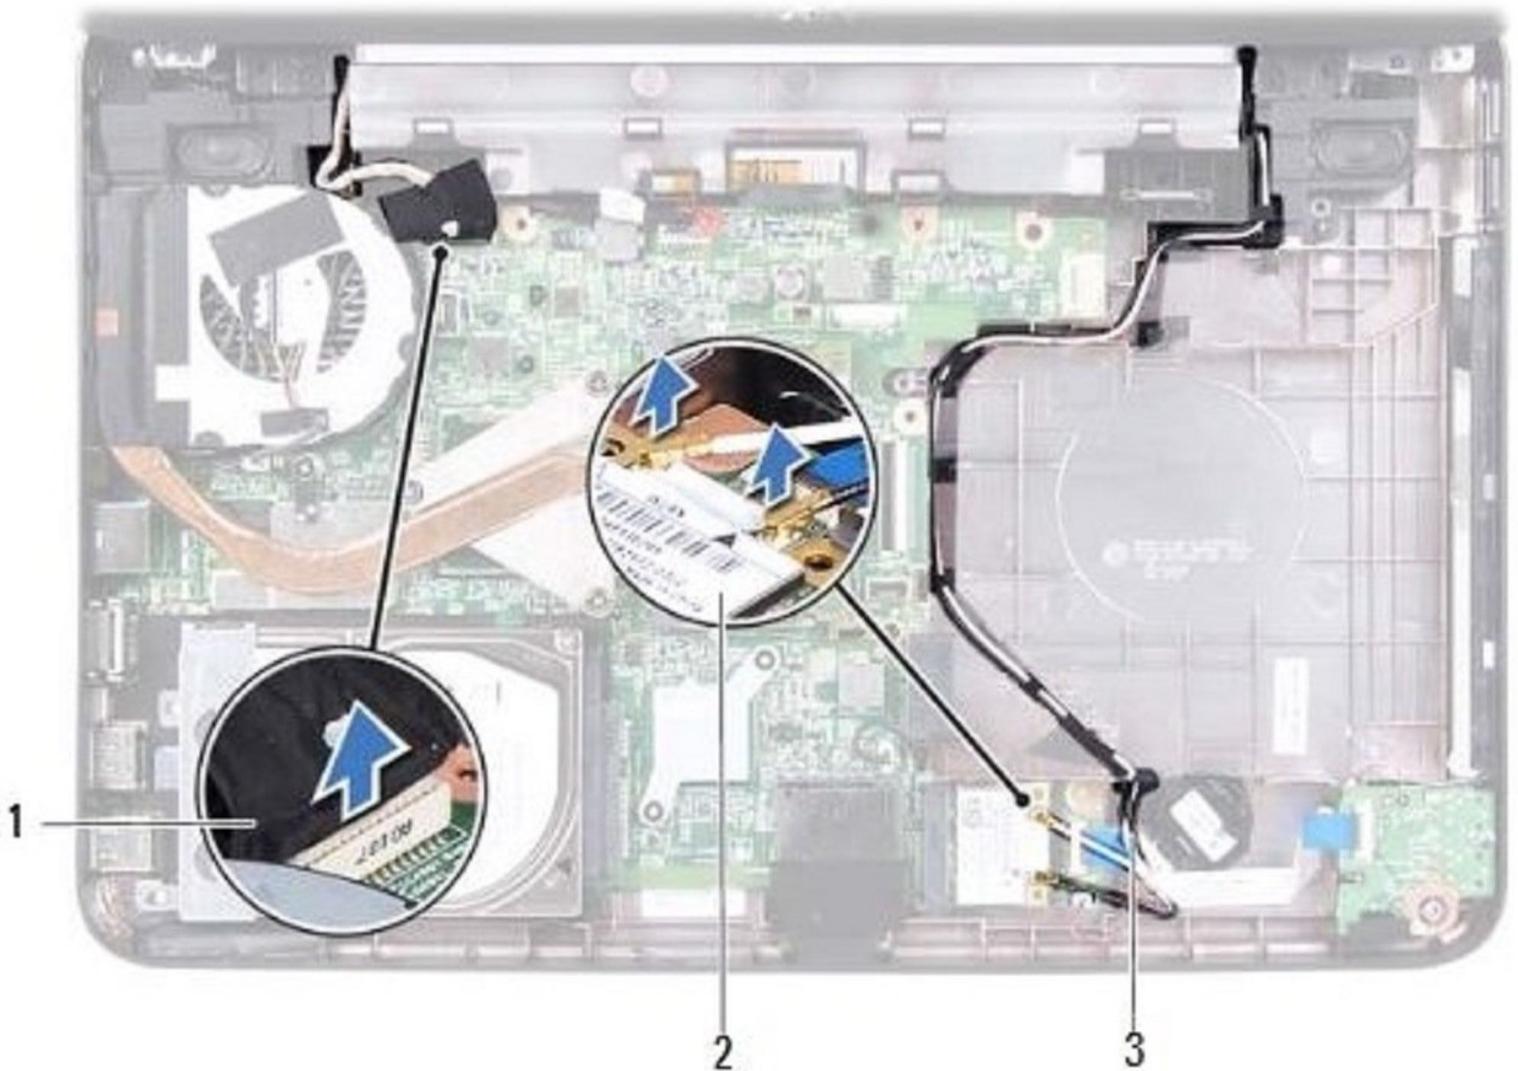

---

## INTRODUCTION

In this guide, we will show you how to remove and replace the Display Assembly.

---

### TOOLS:

- [Phillips #0 Screwdriver](#) (1)
-

## Step 1 — Disconnecting the Display Cable



**⚠ WARNING:** Before working inside your computer, read the safety information that shipped with your computer.

**⚠ CAUTION:** To avoid electrostatic discharge, ground yourself by using a wrist grounding strap or by periodically touching an unpainted metal surface (such as a connector on your computer).

- Disconnect the display cable from the connector on the system board.

## Step 2 — Disconnect the Cables




- Disconnect the Mini-Card antenna cables from the connectors on the Mini-Card.

### Step 3 — Remove the Cables



- Make a note of the display cable and Mini-Card antenna cables routing and remove the cables from the routing guides.

### Step 4 — Remove the Screws

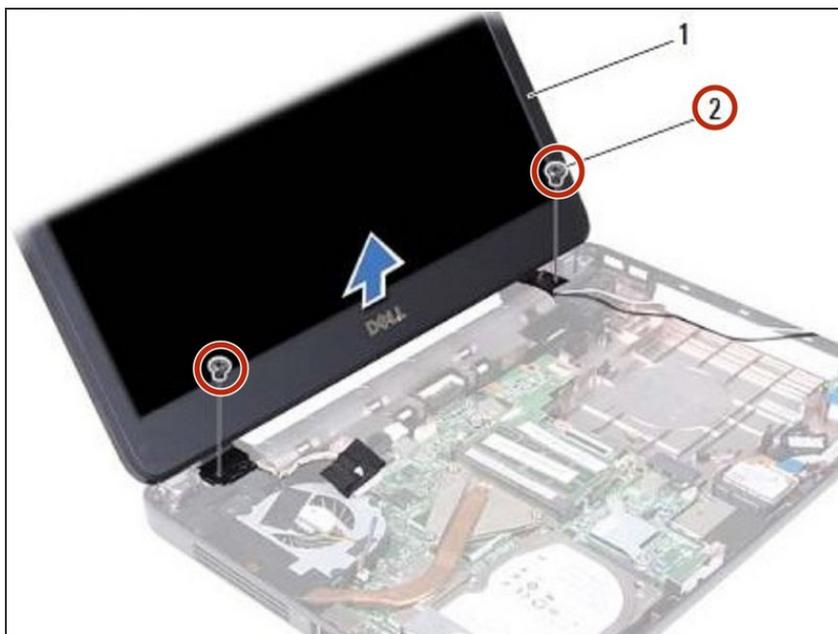


- Remove the two screws that secure the display assembly to the computer base.

## Step 5 — Removing the Display Assembly



- Lift and remove the display assembly out of the computer base.

## Step 6 — Placing the Display Assembly

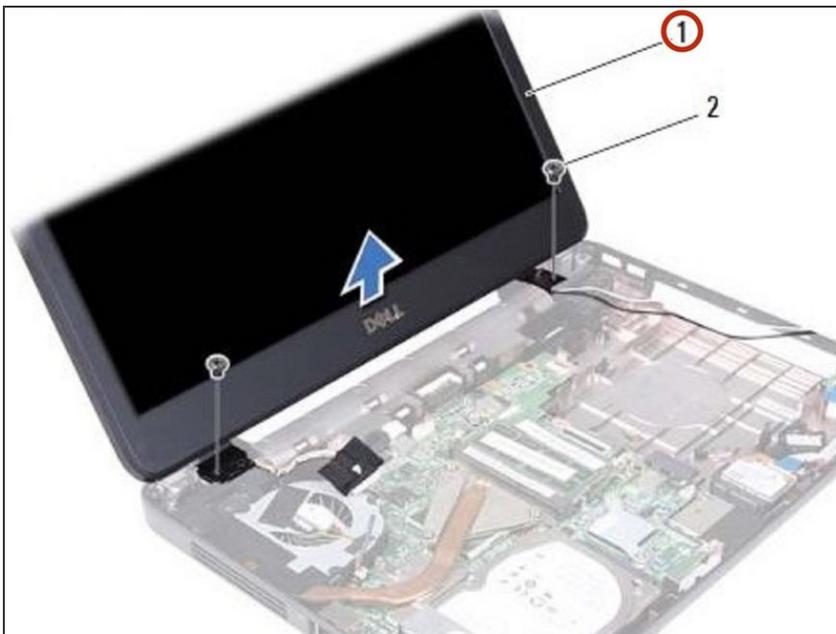

- Place the **NEW** display assembly in position and replace the two screws that secure the display assembly to the computer base.

## Step 7 — Routing the Cable



- Route the display cable and Mini-Card antenna cables through the routing guides.

## Step 8 — Connect the Display Cable



- Connect the display cable to the connector on the system board.