



# Acer Aspire V5-571P-6815 Device Battery Replacement

Follow this guide to replace the battery on your Acer Aspire V5-571P-6815 laptop.

Written By: Brianna Sinder



---

## INTRODUCTION

The Acer Aspire V5-571P-6815's 4-cell battery locks in securely on the back underside of the computer. Its removal is often the first step in repair.

---

### TOOLS:

- [Spudger](#) (1)
-

## Step 1 — Battery



- Turn off the computer and unplug all power.

## Step 2



- Slide the locking latch to the right and hold while pulling the battery out with your other hand.

To replace the battery, slide it back into its slot until it gently clicks into place.