




# Kicker CXA300.1 Lights Replacement

A guide on how to replace the green and red LEDs on the Kicker CXA 300.1

Written By: Tim Keptya

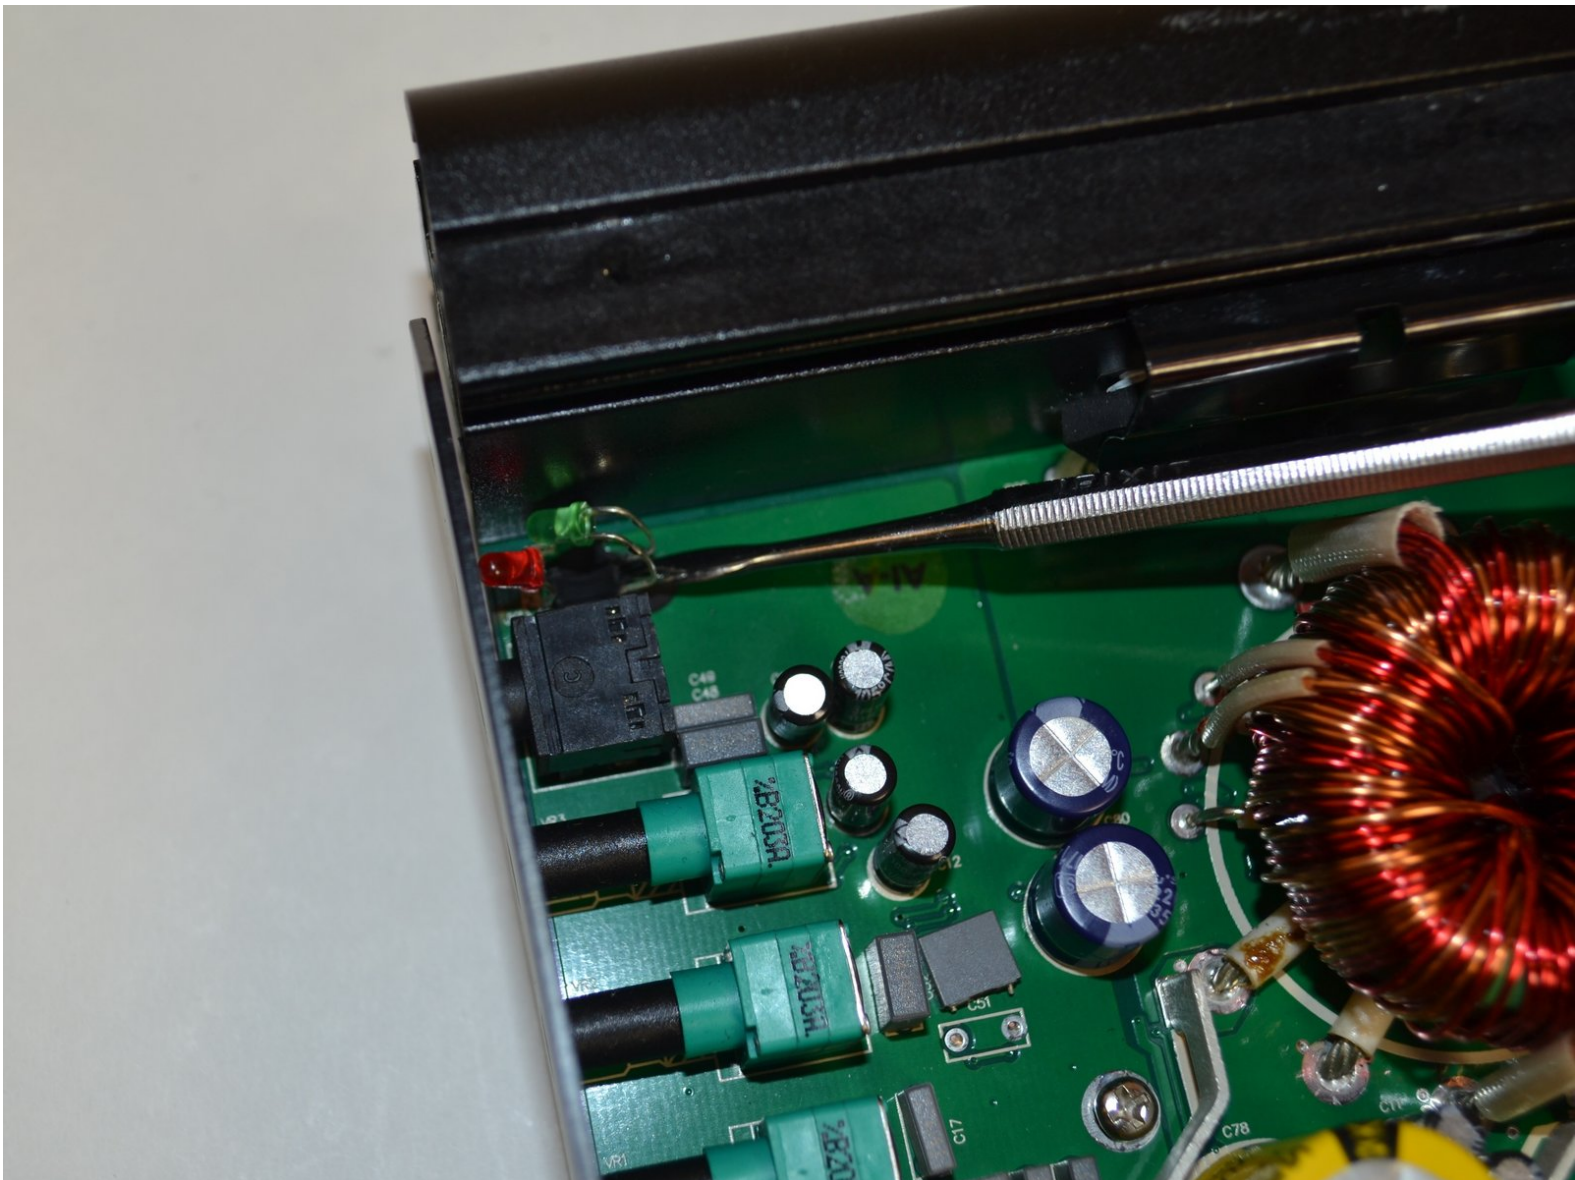

# INTRODUCTION

In this guide, you will learn how to take apart the Kicker CX300.1 and replace the lights on the amplifier.

---

## TOOLS:


- [2mm Hex Key](#) (1)
  - [T10 Torx Screwdriver](#) (1)
  - [Prying and Opening Tool Assortment](#) (1)
  - [Portable Soldering Iron](#) (1)
-

## Step 1 — Lights




- Remove the five T10 Torx screws from the silver face plate.

## Step 2

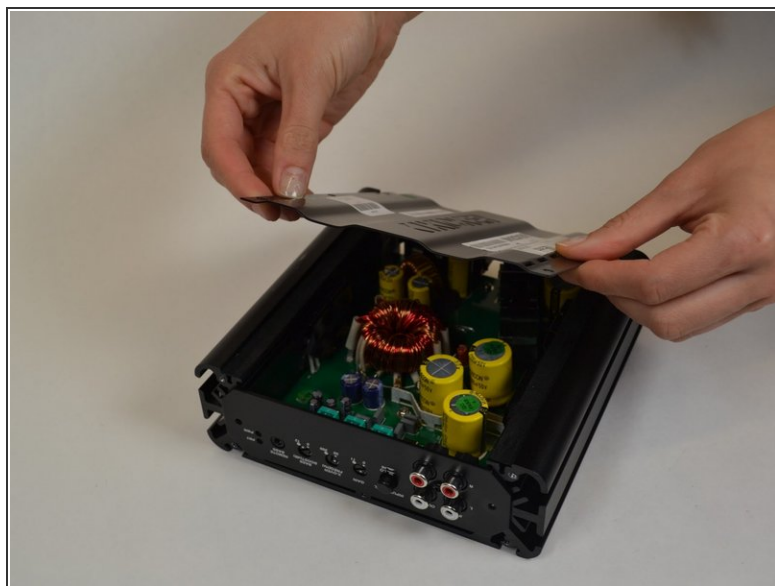

- Remove the two T10 Torx screws from the bottom.
- Remove bottom plate

## Step 3

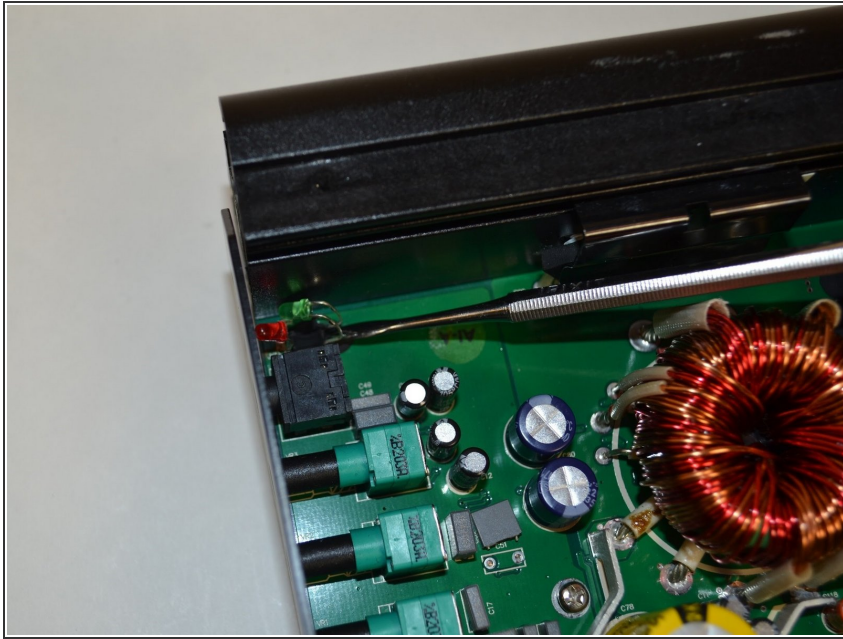

- Desolder the LED's

To reassemble your device, follow these instructions in reverse order.