




Kicker CXA300.1 Speaker Output Parts Replacement

A guide on how to replace the speaker output connector cables in the Kicker CXA 300.1

Written By: Tim Keptya

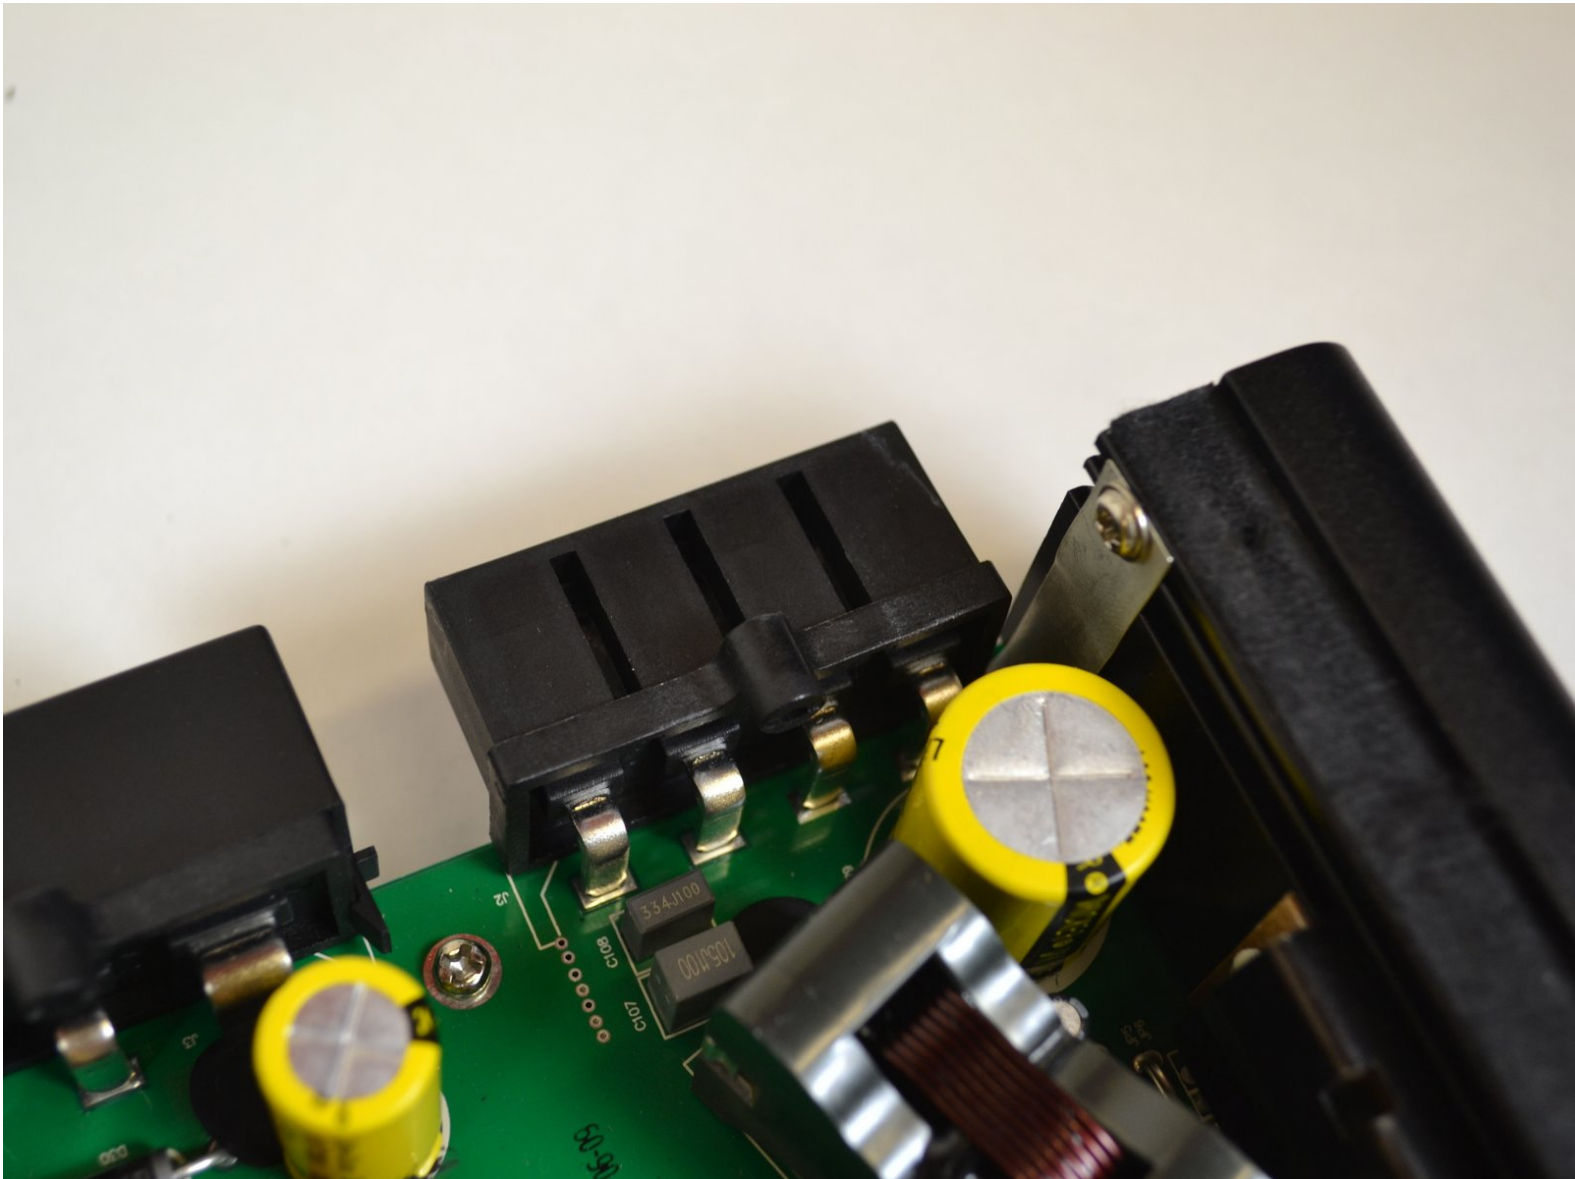

INTRODUCTION

A guide on how to replace the speaker output connector cables in the Kicker CXA 300.1



TOOLS:

- [2mm Hex Key](#) (1)
 - [T10 Torx Screwdriver](#) (1)
 - [Portable Soldering Iron](#) (1)
-

Step 1 — Speaker Output Parts




- Remove the five T10 Torx screws on silver plate.
- remove silver face plate

Step 2




- Remove the two T10 Torx screws.

Step 3

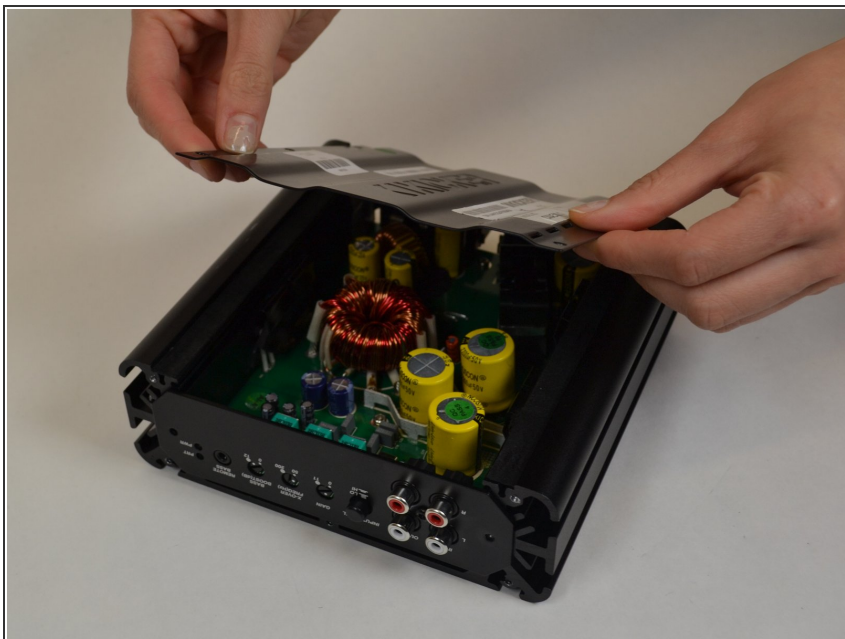


- Remove the six T10 Torx screws from the bottom.
- Remove the bottom cover.

Step 4

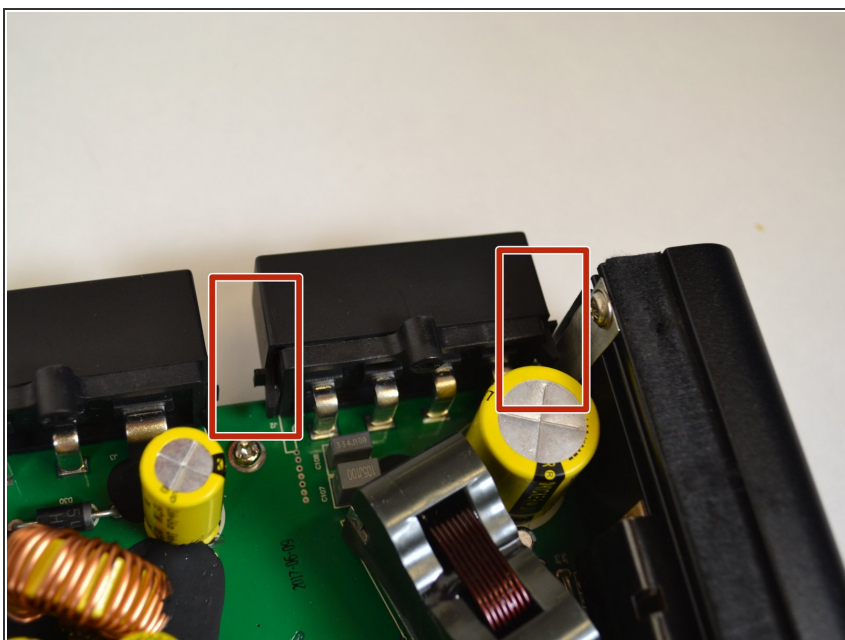

- Pull apart black tabs on plastic housing for output connections.

Step 5

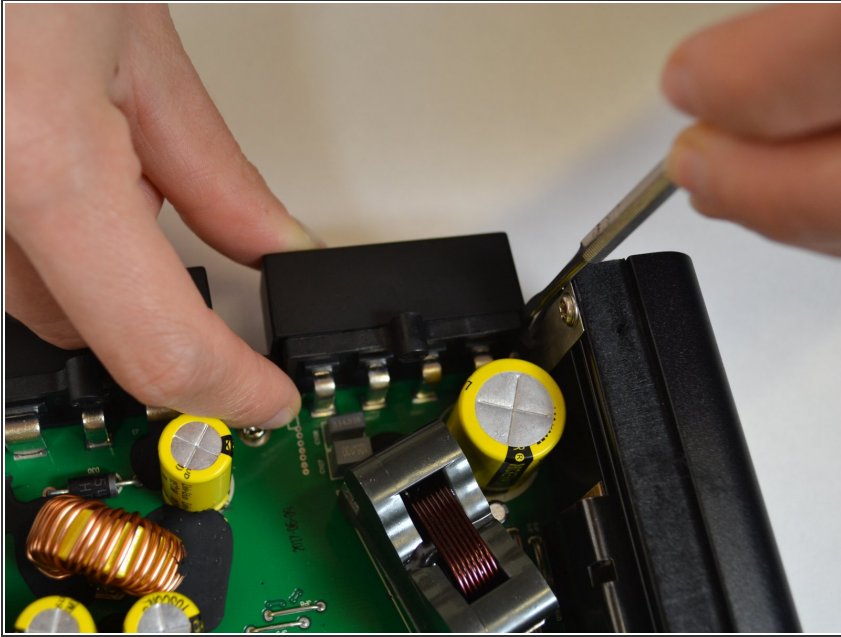

- Desolder the four audio jack connectors from the motherboard.

To reassemble your device, follow these instructions in reverse order.