




# Kicker CXA300.1 Bass Remote Replacement

A guide on how to replace the bass remote in the Kicker CXA300.1

Written By: Tim Keptya

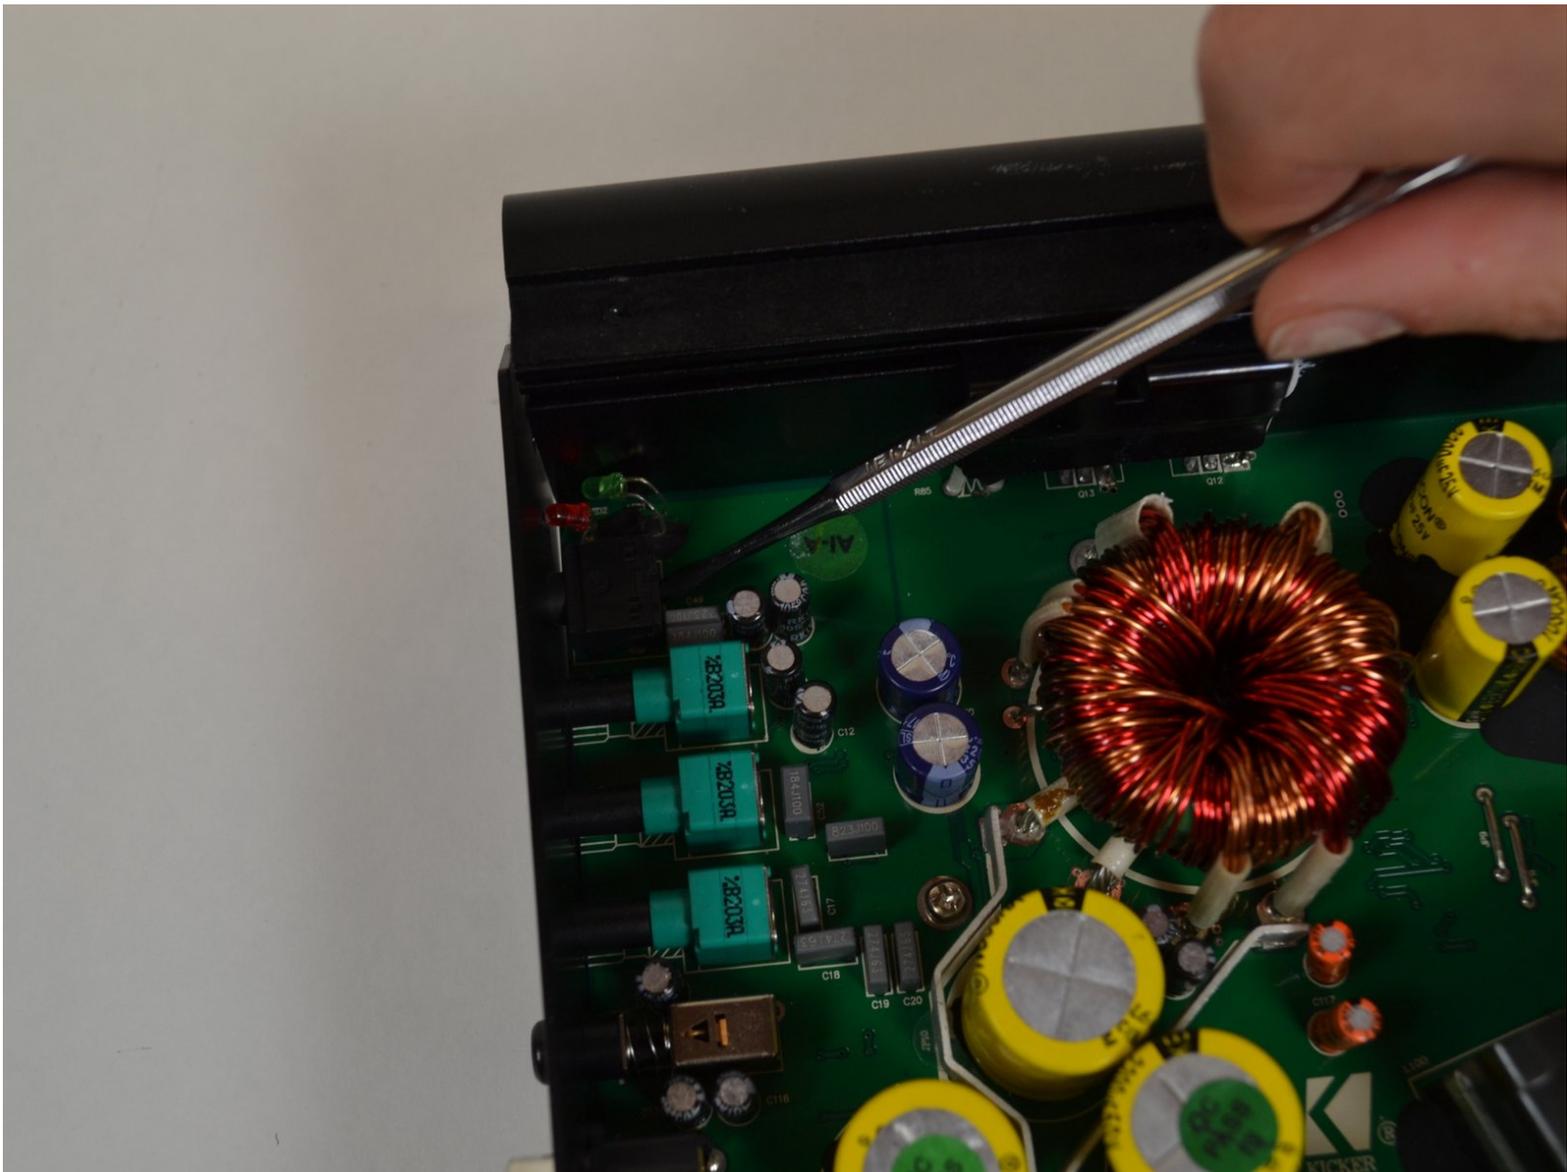

---

## INTRODUCTION

A guide on how to replace the bass remote in the Kicker CXA300.1

---

### TOOLS:

- [2mm Hex Key](#) (1)
  - [T10 Torx Screwdriver](#) (1)
  - [Portable Soldering Iron](#) (1)
-

## Step 1 — Bass Remote





- Remove the five T10 Torx screws on silver plate.

## Step 2




- Remove the two T10 Torx screws from the faceplate.

### Step 3

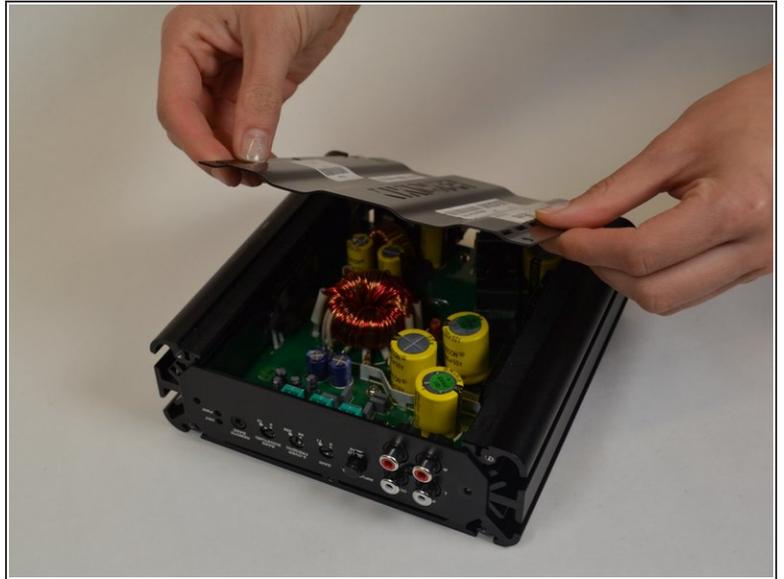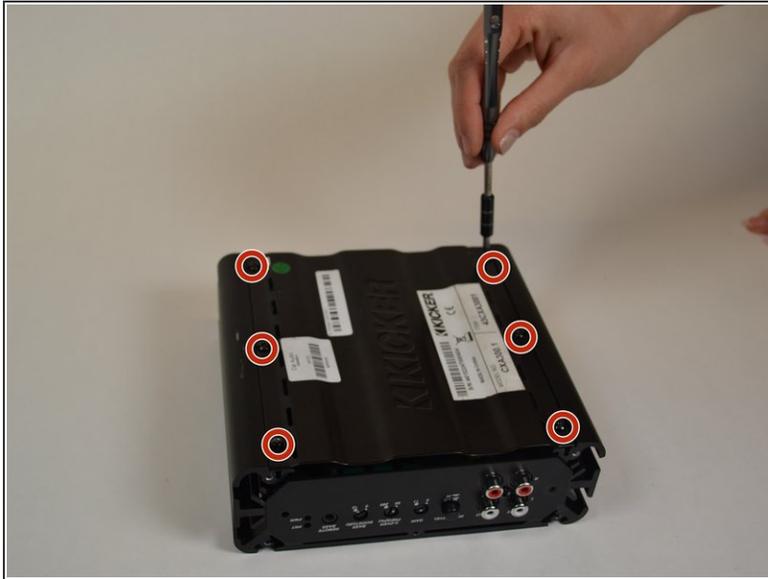

- Remove the six T10 Torx screws from the bottom.
- Remove bottom panel.

### Step 4

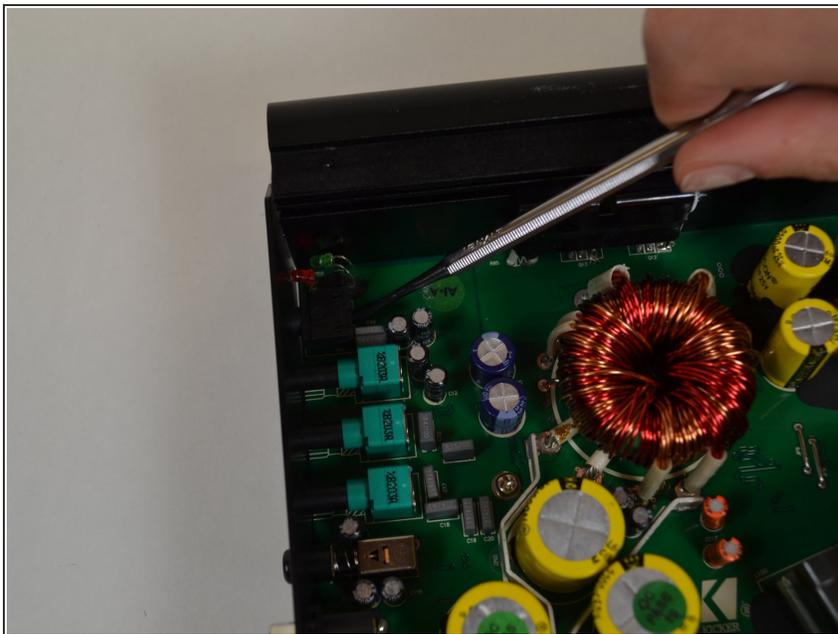

- Desolder the remote receiver from the motherboard.

To reassemble your device, follow these instructions in reverse order.