


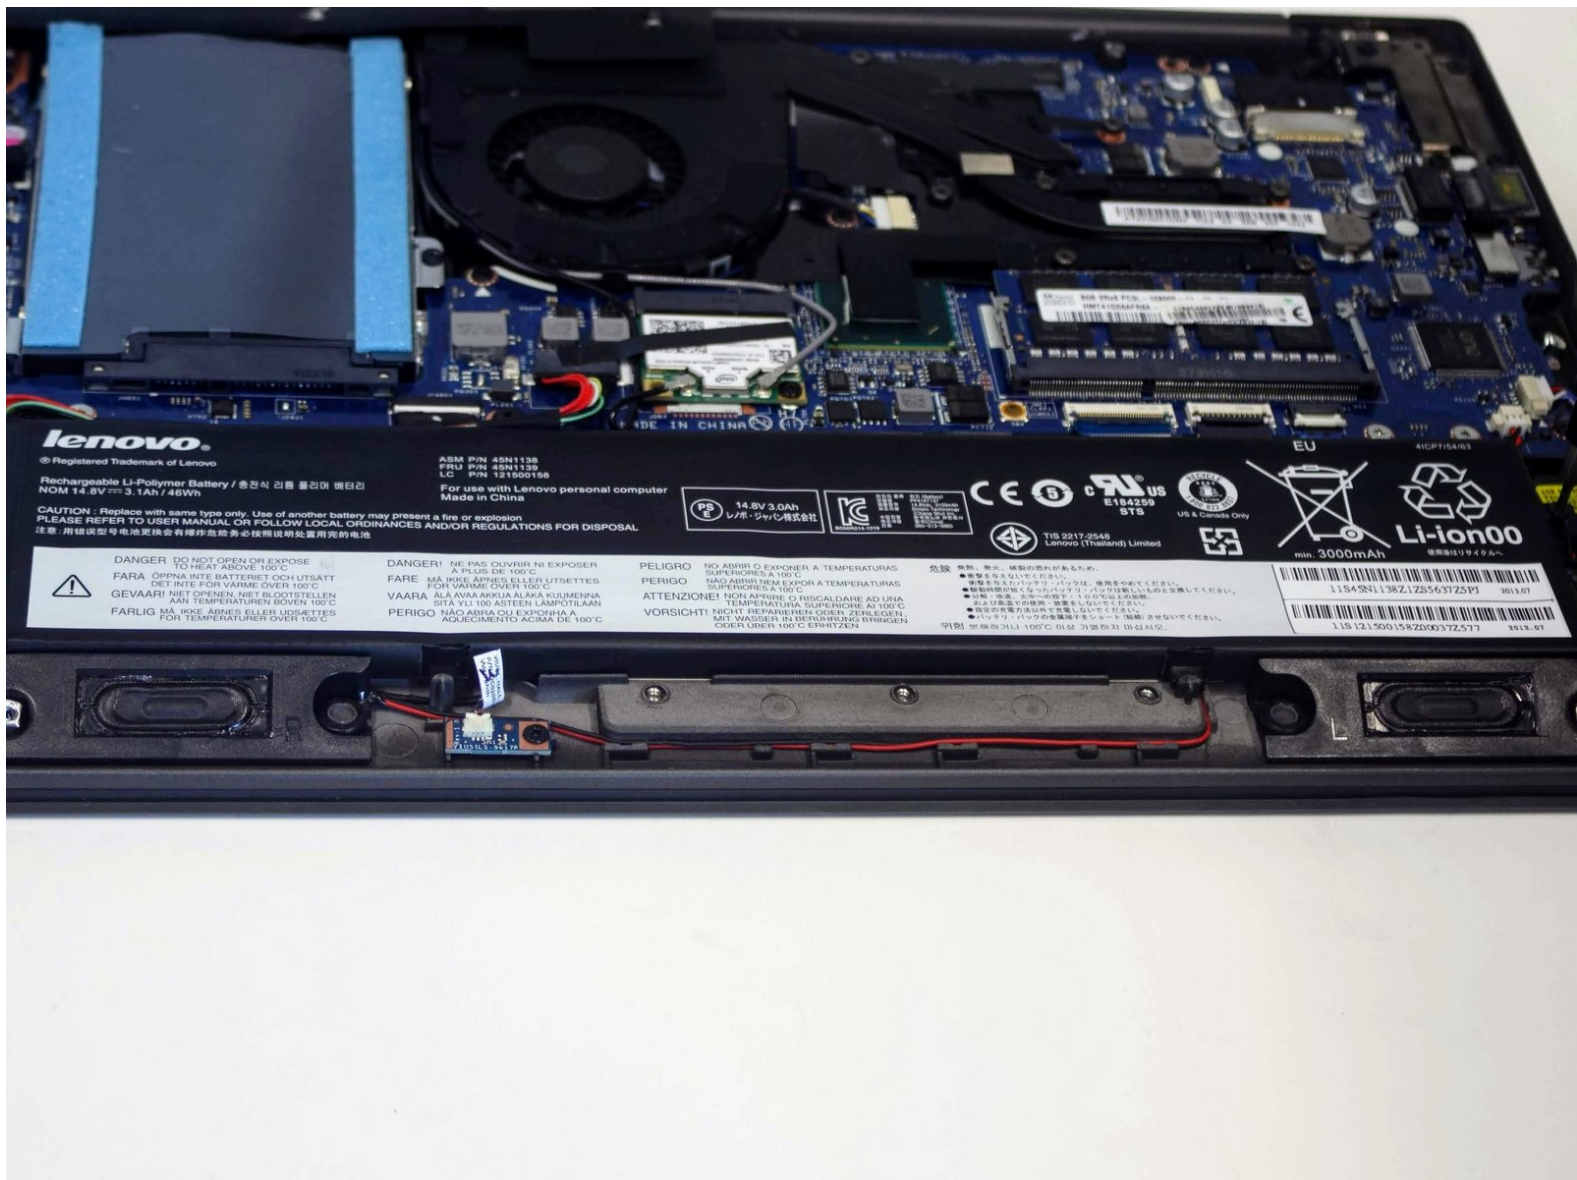

# Lenovo ThinkPad S431 Battery Replacement

How to remove the faulty battery from the Lenovo ThinPad S431.

Written By: Mohammed AlManai



## INTRODUCTION



This guide will give you step-by-step instructions on how to safely remove your Battery. The Battery is a device that stores energy for your laptop.

---

### TOOLS:



- [Phillips #000 Screwdriver](#) (1)
  - [iFixit Opening Tools](#) (1)
-

## Step 1 — Battery

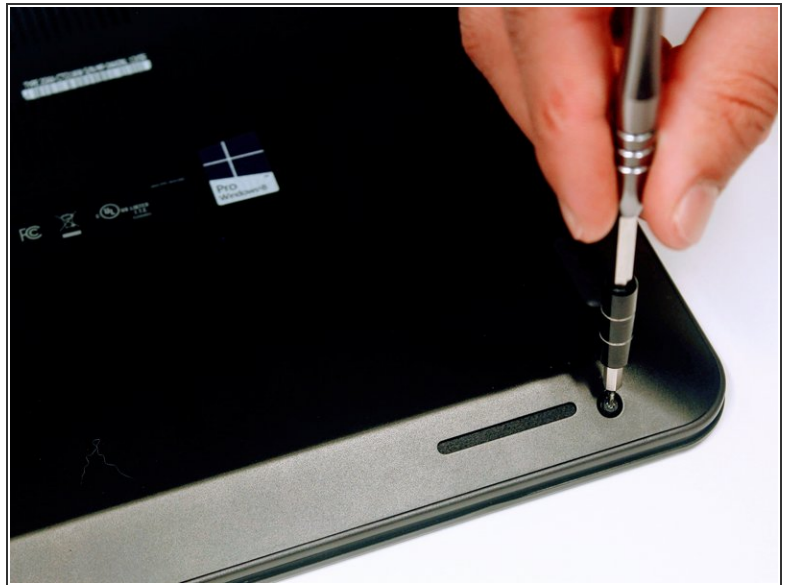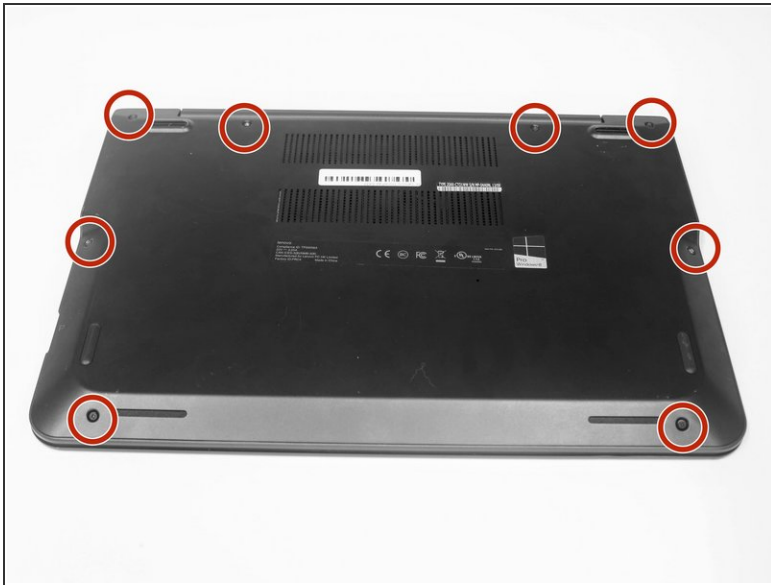

- Remove the 8 screws holding down the back panel, using the Phillips screw driver #000.


## Step 2

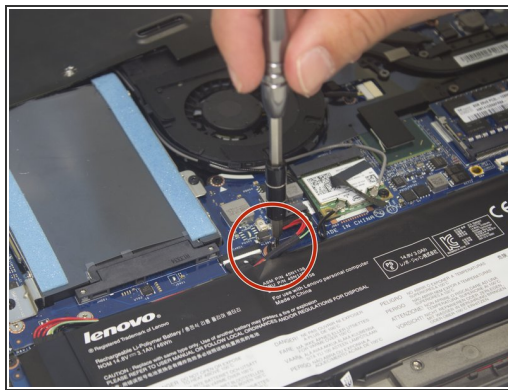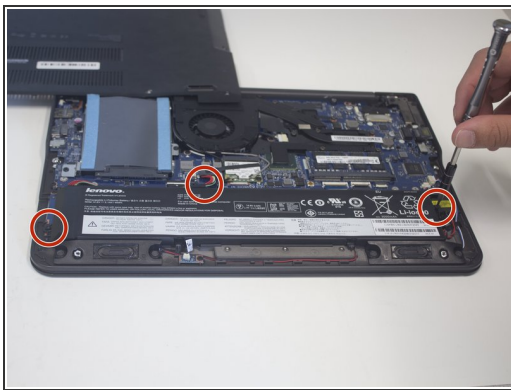

- Remove the 3 screws using the Phillips screwdriver #000. The screws are wafer-heads, size m2x4mm.



### Step 3

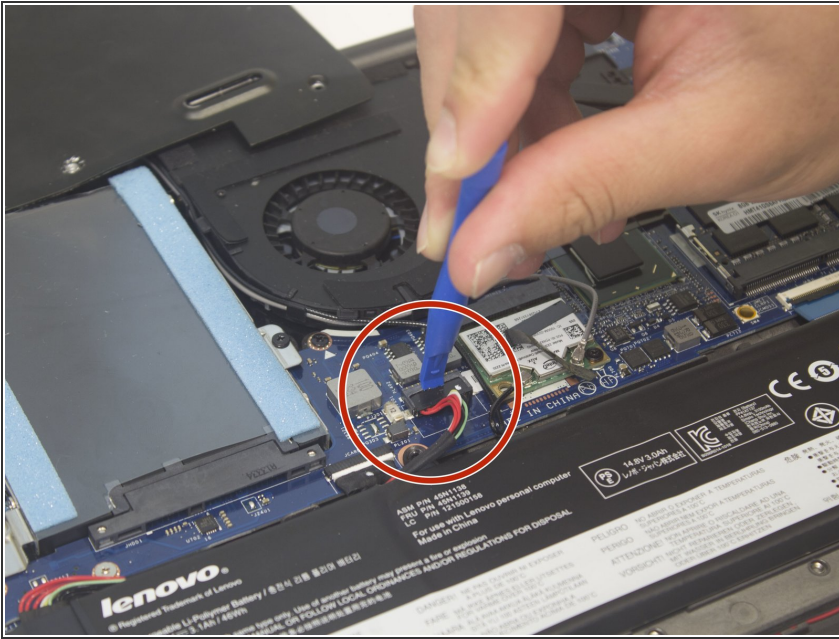

- Unplug the battery's cable.

### Step 4



- Carefully, lift up the battery-pack to remove it.

To reassemble your device, follow these instructions in reverse order.