


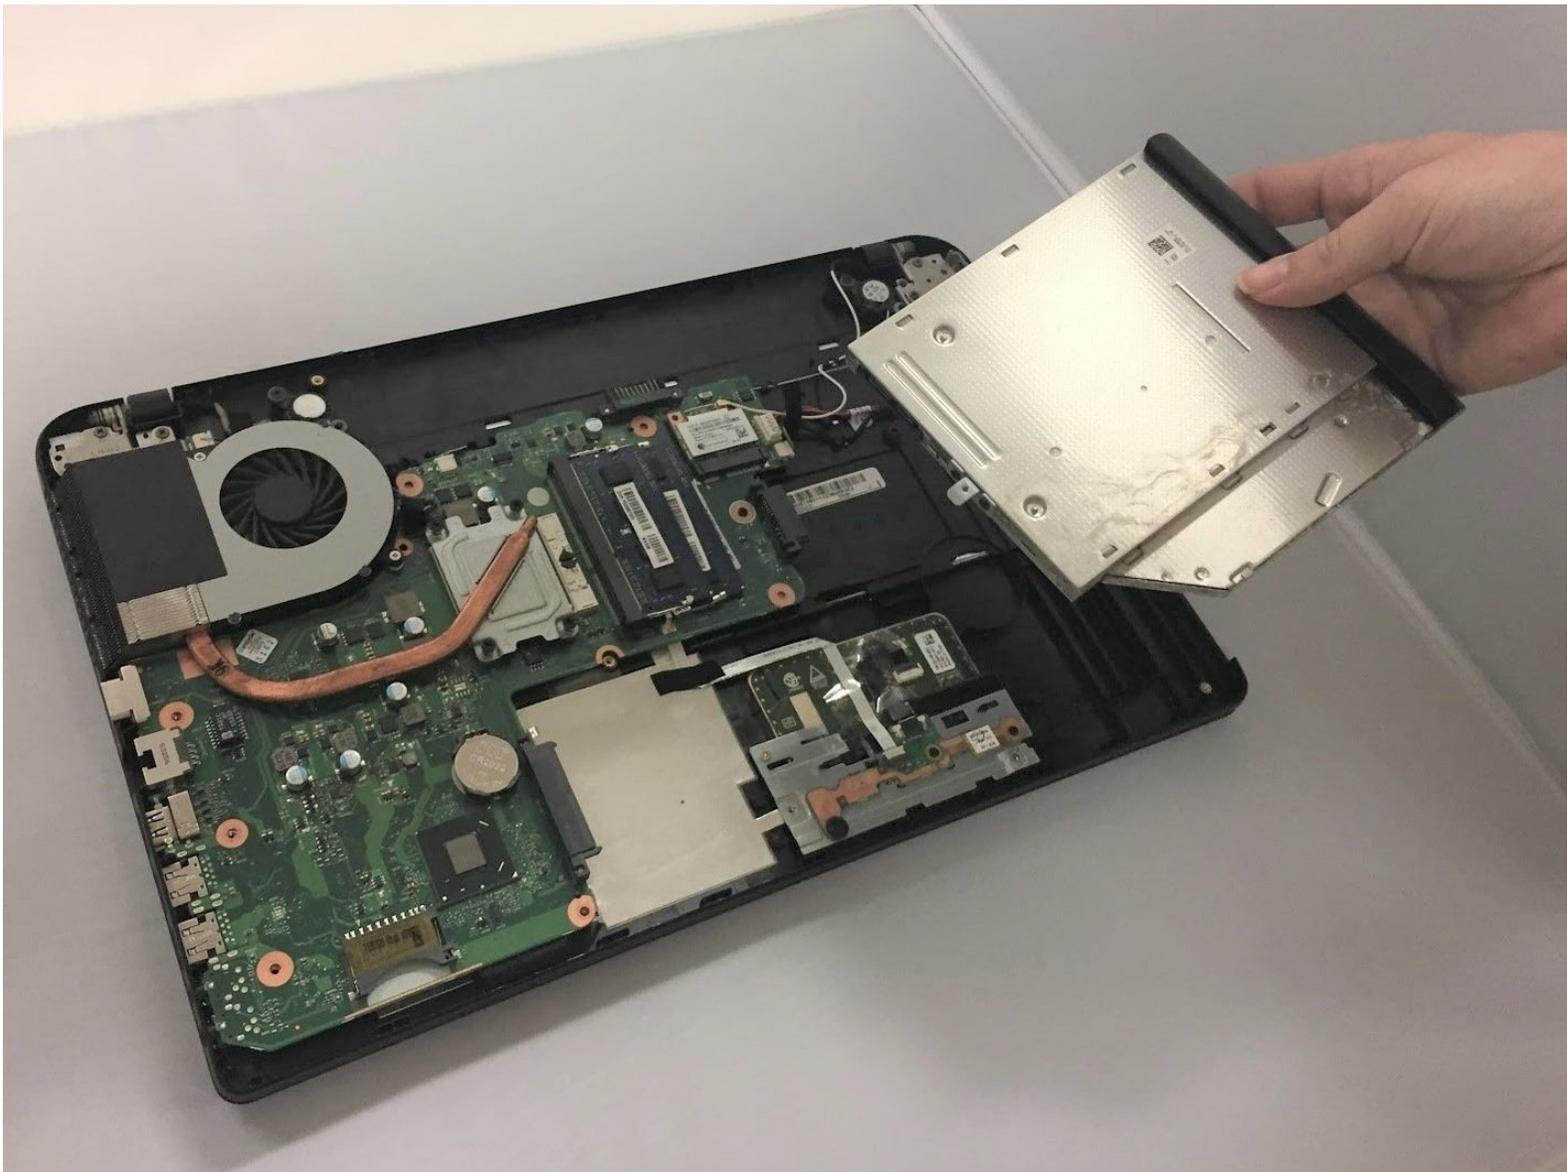

Toshiba Satellite C55-A5302 ODD Replacement

This guide will show you how to replace the optical disk drive on the Toshiba Satellite C55-A5302.

Written By: Nicole Hague



INTRODUCTION

This guide will show you how to disassemble the Toshiba Satellite C55-A5302 to remove and replace the ODD.

TOOLS:

- [Phillips #1 Screwdriver](#) (1)
 - [Metal Spudger](#) (1)
-

Step 1 — Battery



- Power down the laptop and remove all power cords. After this is done, turn the laptop over.

Step 2



- Slide the battery latches outwards away from the center of the device.
- ⓘ The right latch will slide to the right, and left latch to the left.

Step 3



- Lift and remove the battery from the device.

Step 4 — Hard Drive




- Use the Phillips #1 screwdriver to unscrew the thirteen screws on the back of your device.

Step 5




- Remove the middle plastic cover to expose the hard drive.

Step 6

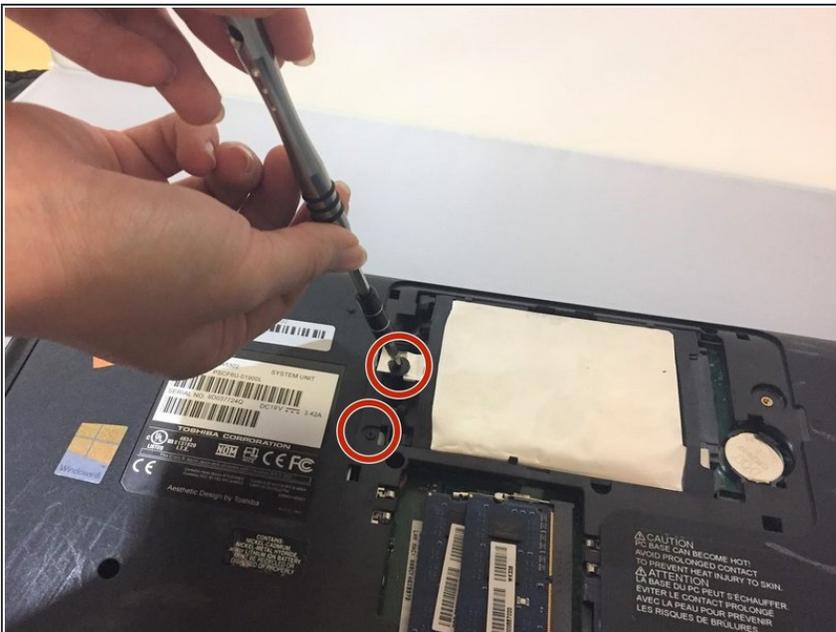


- Using the Phillips #1 screwdriver, remove the two screws holding the hard drive in place.

Step 7

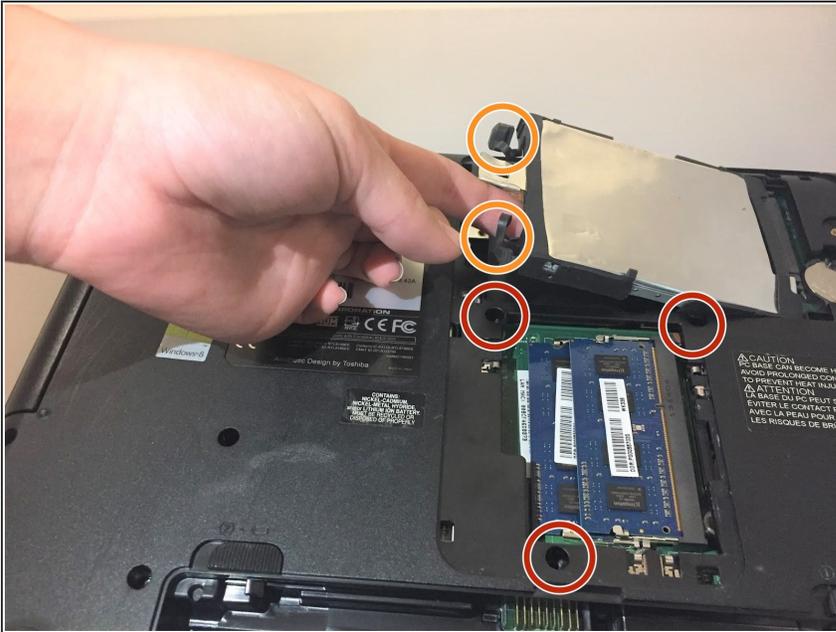

- Remove the three screws using the Phillips #1 screwdriver.
- Insert your fingers into the rubber ends and gently pull the hard drive out of the device.

Step 8 — Optical Disk Drive

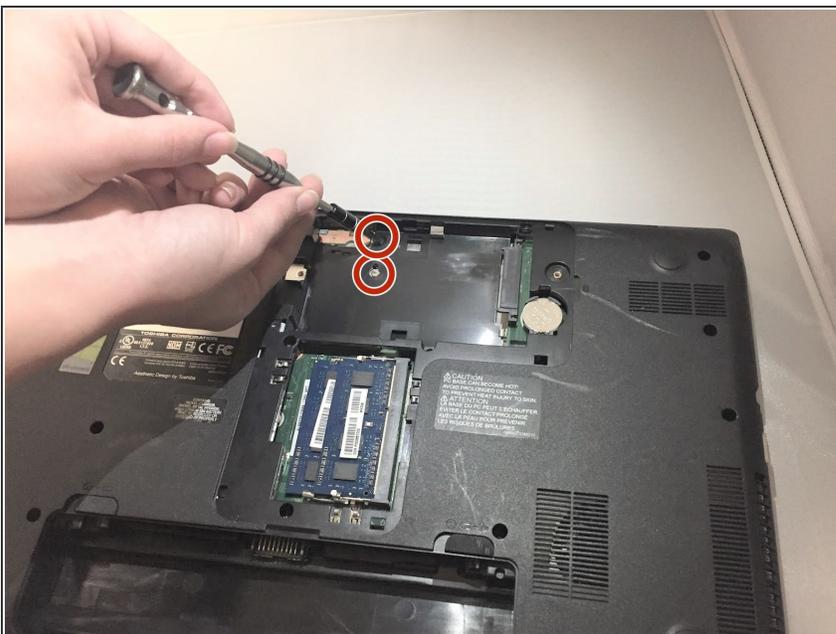


- Use the Phillips #1 screwdriver to remove the two screws under the hard drive.

Step 9




- Use a metal spudger and run it along the edges of the computer to take off the plastic back cover. (Starting near a port usually allows more space for the spudger to be inserted)

Step 10

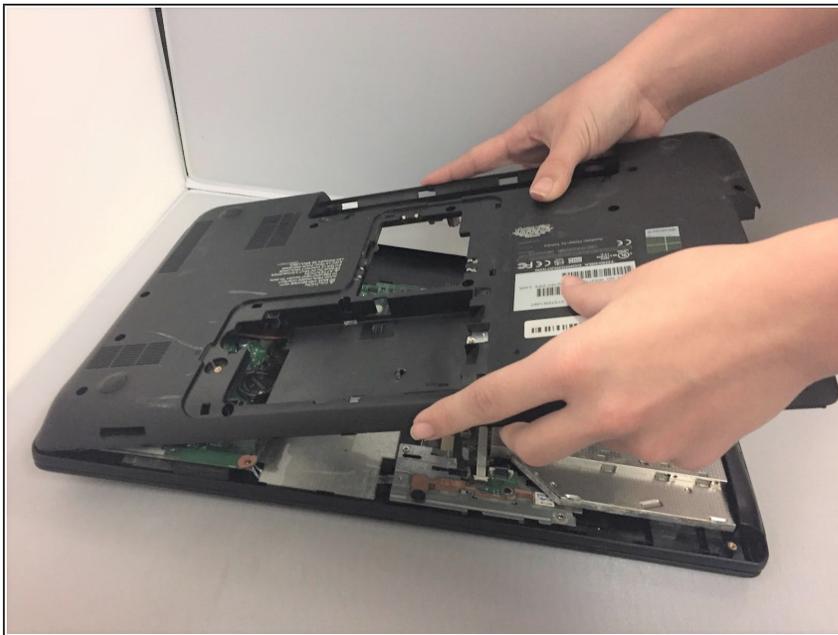

- Slowly work from one end to the other to lift the back cover off.

Step 11

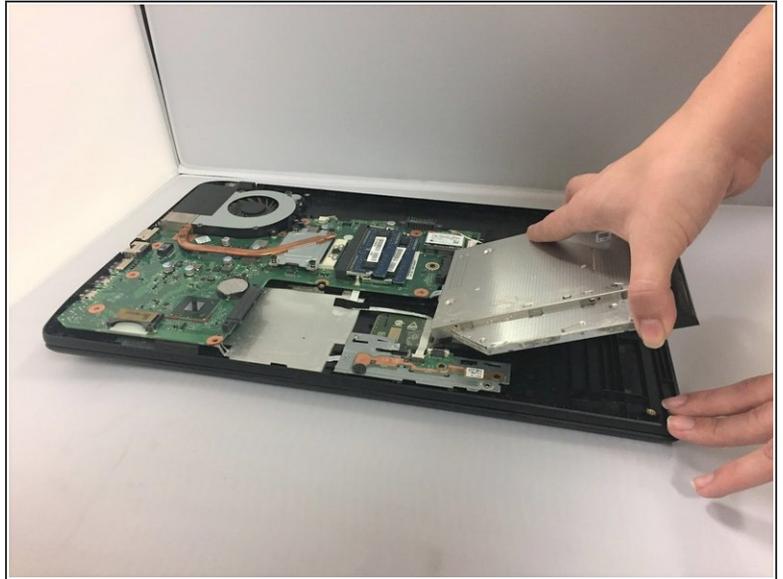

- Grab hold of the optical drive and elevate it slightly and remove it from the computer.

To reassemble your device, follow these instructions in reverse order.