


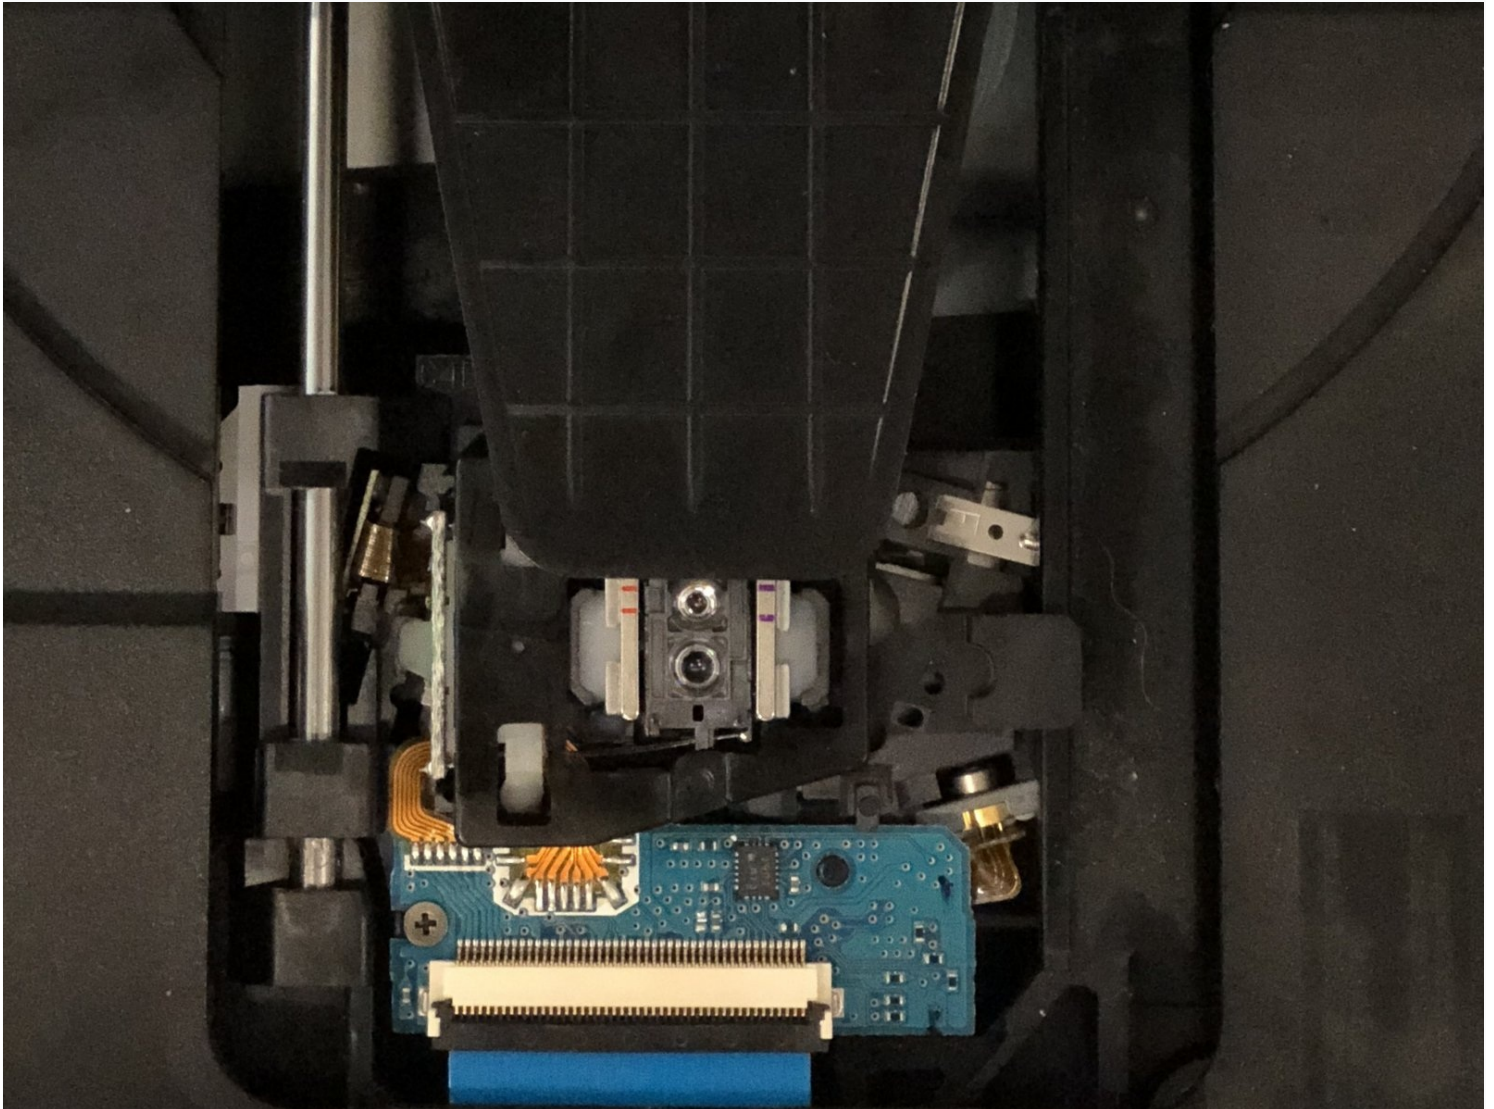

Dynex DX-WBRDVD1 Cleaning The Optical Lens

Cleaning your optical drive is standard...

Written By: Caleigh Firth



INTRODUCTION



Cleaning your optical drive is standard maintenance especially if your movies wont play. Here is how you get to it and clean it properly.

TOOLS:

Phillips #1 Screwdriver (1)

Microfiber Cleaning Cloths (1)

Step 1 — Top Cover

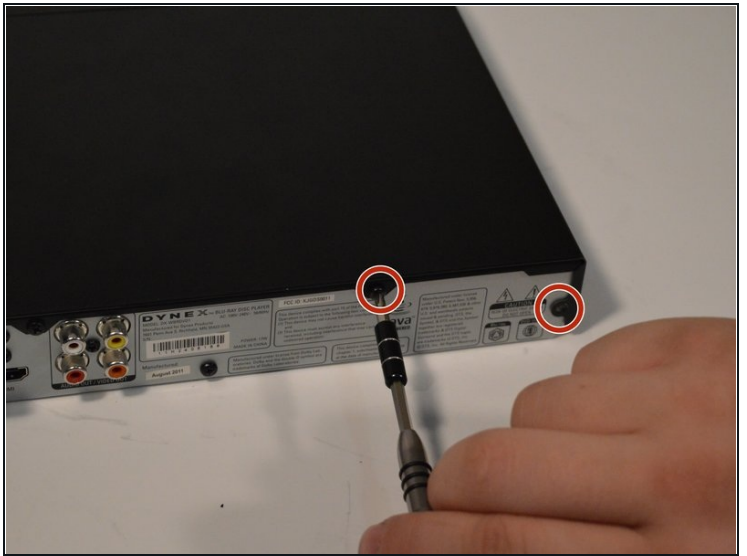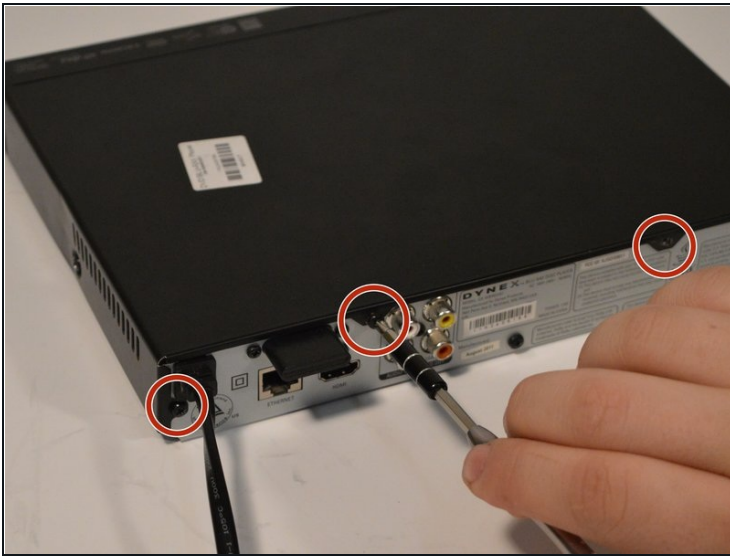


- Remove the four 5mm Phillips #1 screws that connect the black outer shell to the silver back of the device.

Step 2




- Remove the two 5mm screws on the left and right side panels.
- ① There is one screw on each side that secures the cover to the body of the device.

Step 3

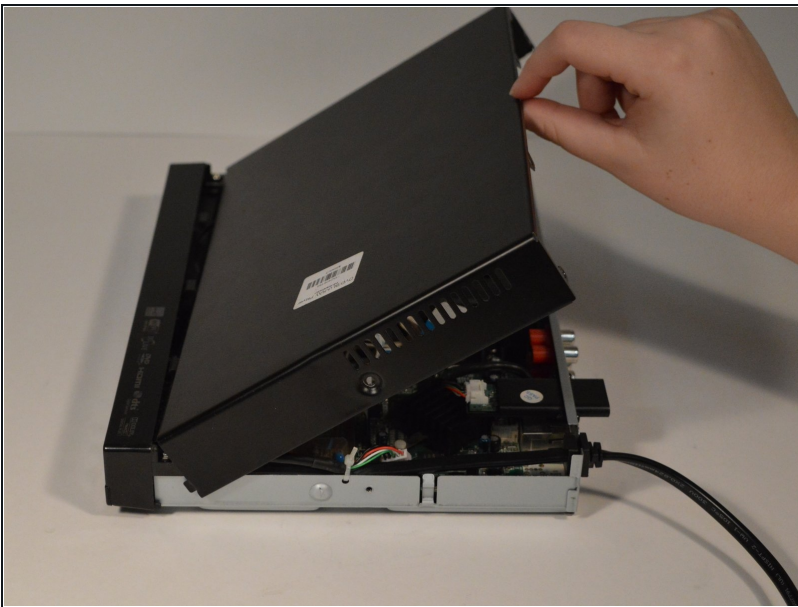


- Lift the black cover to a 45 degree angle from the rear of the device and pull the cover away entirely.
- ⚠ Check that the power cord is not preventing the device from opening or closing.

Step 4 — Dynex DX-WBRDVD1 Cleaning The Optical Lens

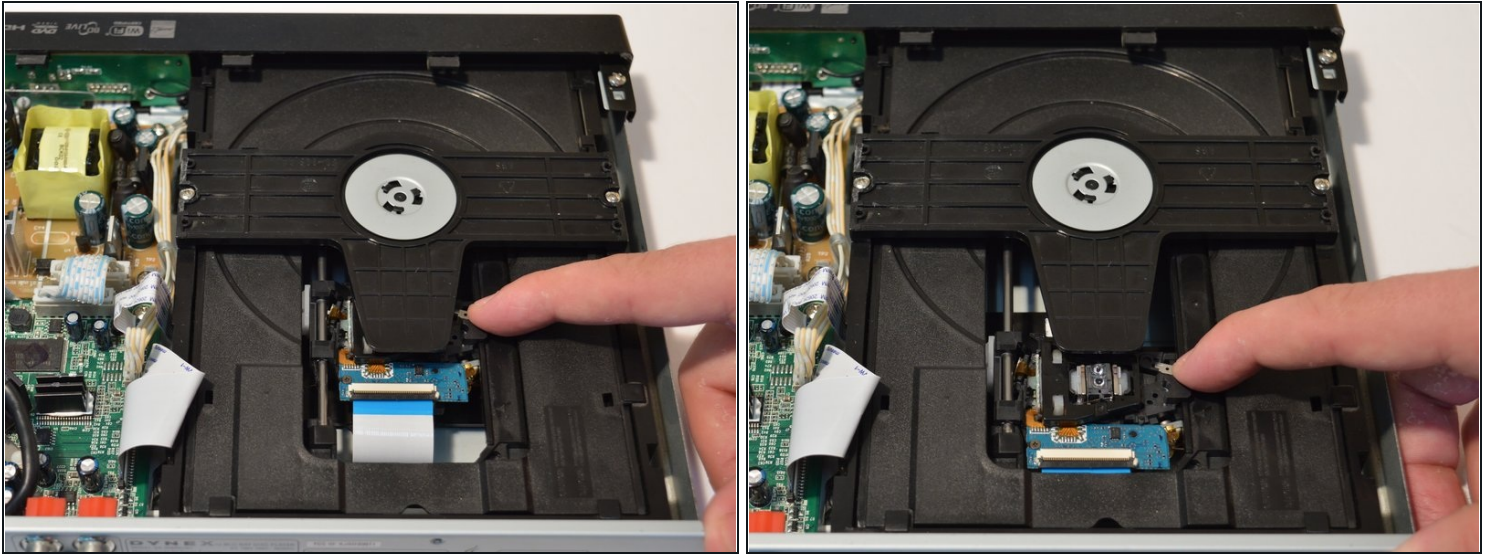

- To access the optical lens, pull back the optical drive as shown in the pictures located on the two metal rails.

Step 5

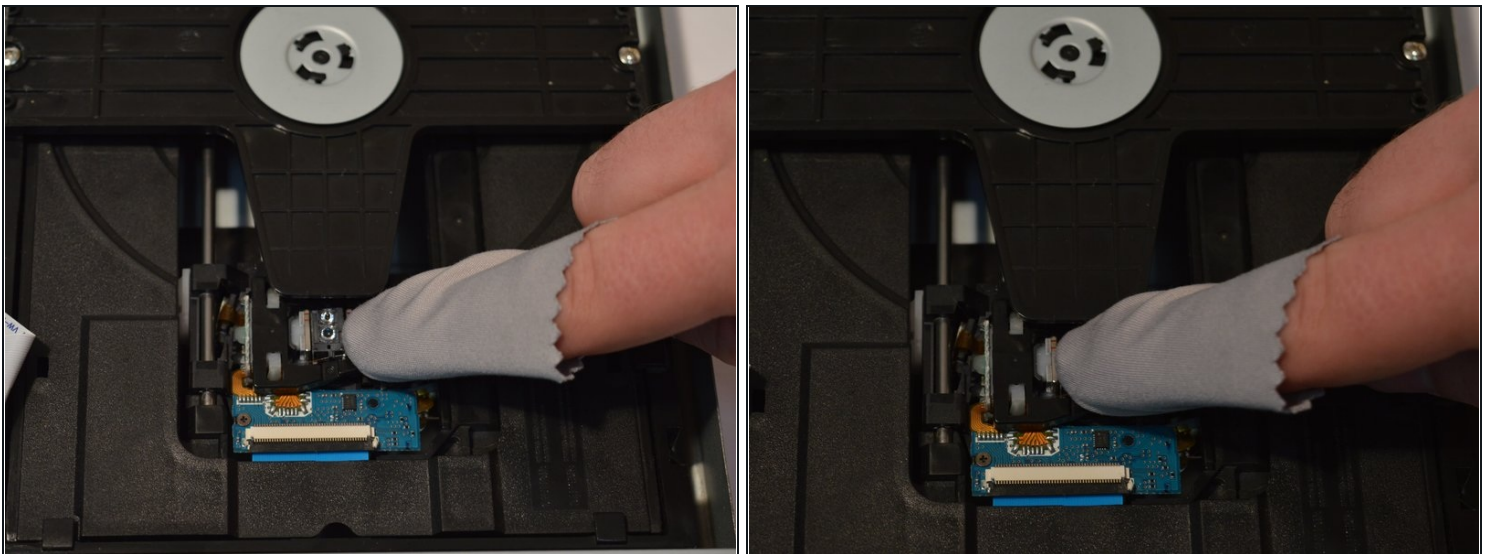

⚠ Clean the optical lens by rubbing gently with a [microfiber cloth](#).

To reassemble your device, follow these instructions in reverse order.