



Carburetor Disassembly

Disassemble the carburetor on a Briggs and Stratton 5.5hp engine

Written By: Jacob Micallef



INTRODUCTION

Disassemble the carburetor on a Briggs and Stratton 5.5hp engine



TOOLS:

- [3/8" Socket](#) (1)
 - [5/16" Socket](#) (1)
 - [Hose Pliers](#) (1)
-

Step 1 — Remove air filter + housing



- Use a 5/16 socket or flat head screwdriver to remove the first bolt. Pull the cover off and remove the air filter.
- Remove the 3 bolts using a 5/16 socket. In addition, pull the breather hose off the assembly at the bottom left. Now pull the cover off.

Step 2 — Remove carburetor



- Remove the two bolts holding the carburetor to the engine with a 3/8 socket or wrench.
- Remove the spring boxed in red from the hole. Pull to left of carburetor, towards the link the other end of the spring is around.
- The link will be connected to the carburetor. Pull the carburetor off in an "S" motion and remove it.

To reassemble your device, follow these instructions in reverse order.