



# Engine Cover

Remove the engine cover. Necessary for servicing the gas tank, flywheel, starting cord, and other parts.

Written By: Jacob Micallef





## TOOLS:

- [5/16" Socket](#) (1)
- [Phillips #2 Screwdriver](#) (1)

## Step 1 — Remove covers



- Remove 2 Phillips screws holding the plastic engine shroud. Pull the cover up and off the engine.
- Remove 3 bolts with a 5/16 socket, then pull the plastic cover off the engine

To reassemble your device, follow these instructions in reverse order.