




# Dell Inspiron 1564 Battery Replacement


Written By: Terrence15

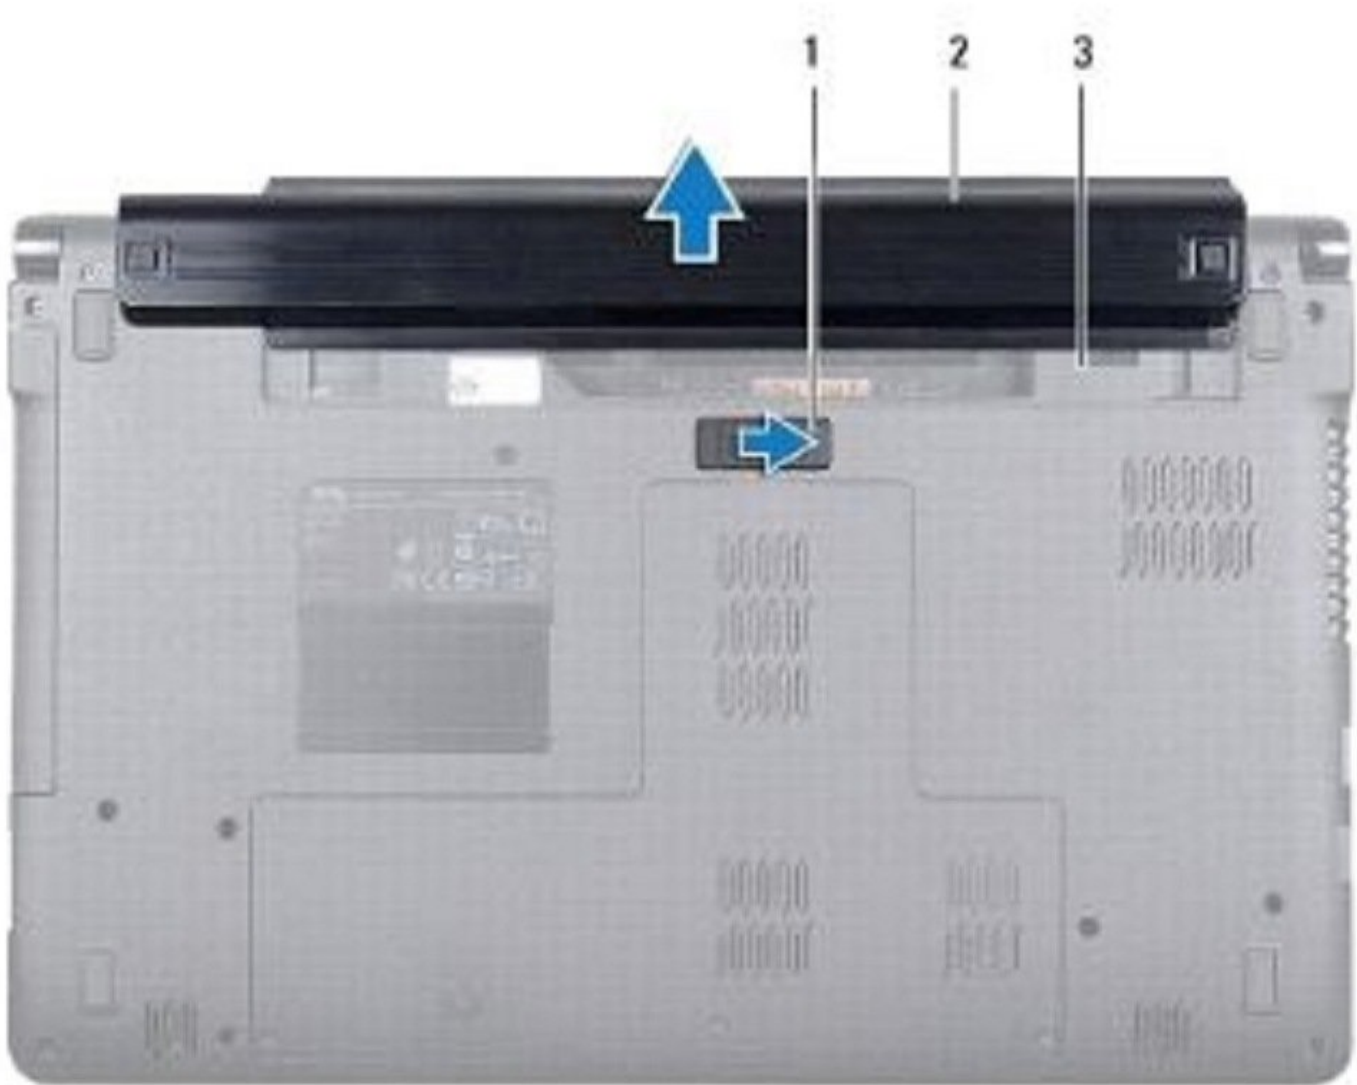

# INTRODUCTION

In this guide, we will be showing you how to remove and replace the Battery.

## Step 1 — Turn over the Computer

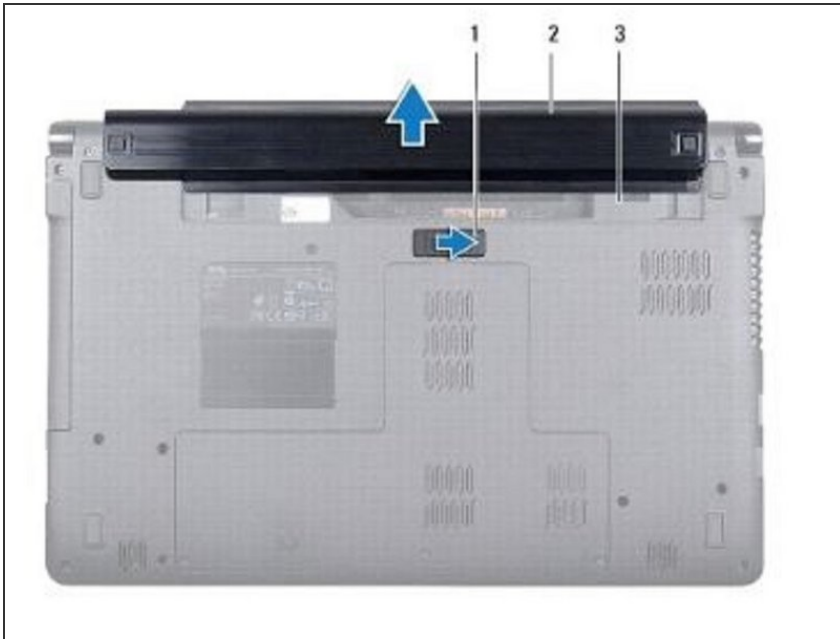


**⚠ WARNING:** Before working inside your computer, read the safety information that shipped with your computer. Follow the procedures in [Before You Begin](#).

**⚠ CAUTION:** To avoid electrostatic discharge, ground yourself by using a wrist grounding strap or by periodically touching an unpainted metal surface.


- Turn the computer upside down on a clean, flat surface.

## Step 2 — Clicking the Battery Release Latch

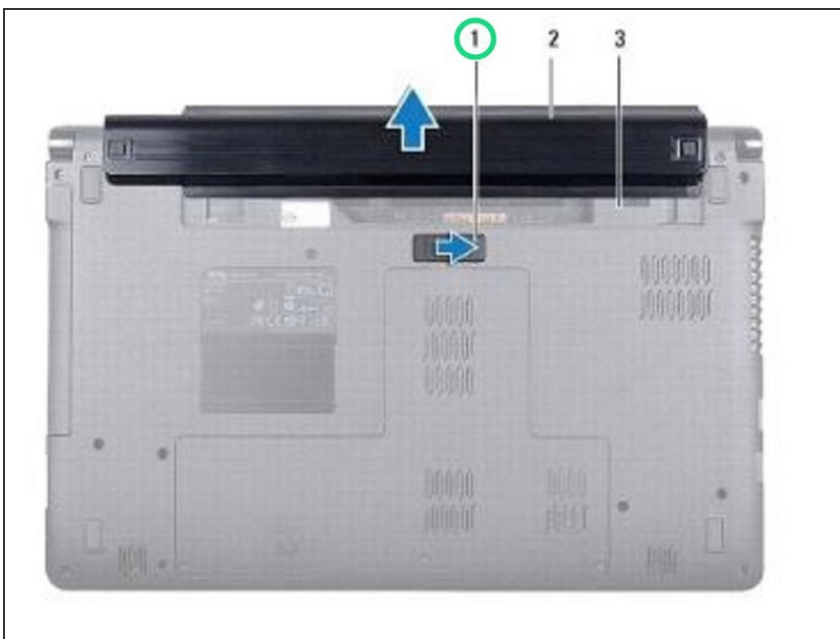


- Slide and click the battery release latch.

### Step 3 — Sliding the Battery

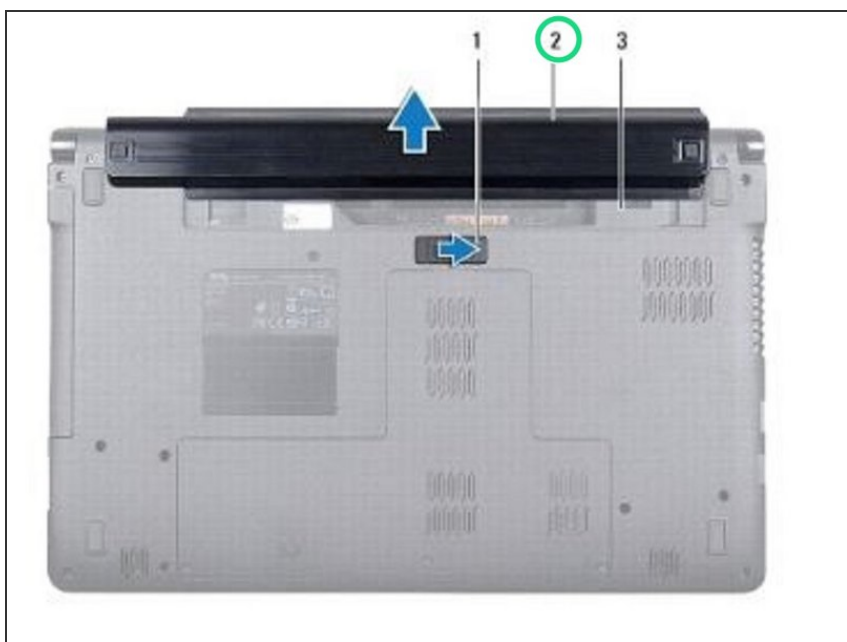

- Slide the battery out of the battery bay.

### Step 4 — Sliding the Battery

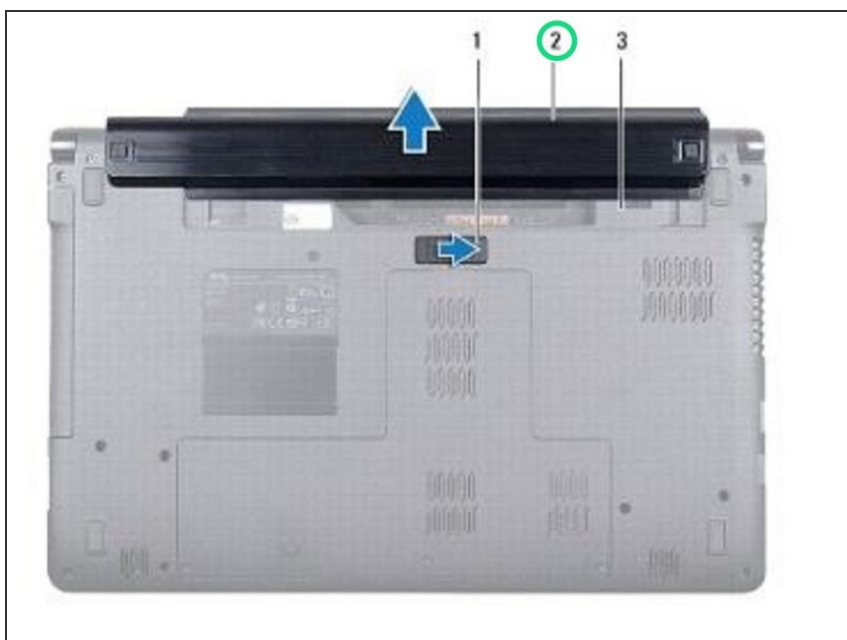

- Slide the **NEW** battery into the battery bay, and push to click the battery into place.