




Dynex DX-WBRDVD1 Top Cover Replacement

This is the guide to crack into your device,...

Written By: Caleigh Firth

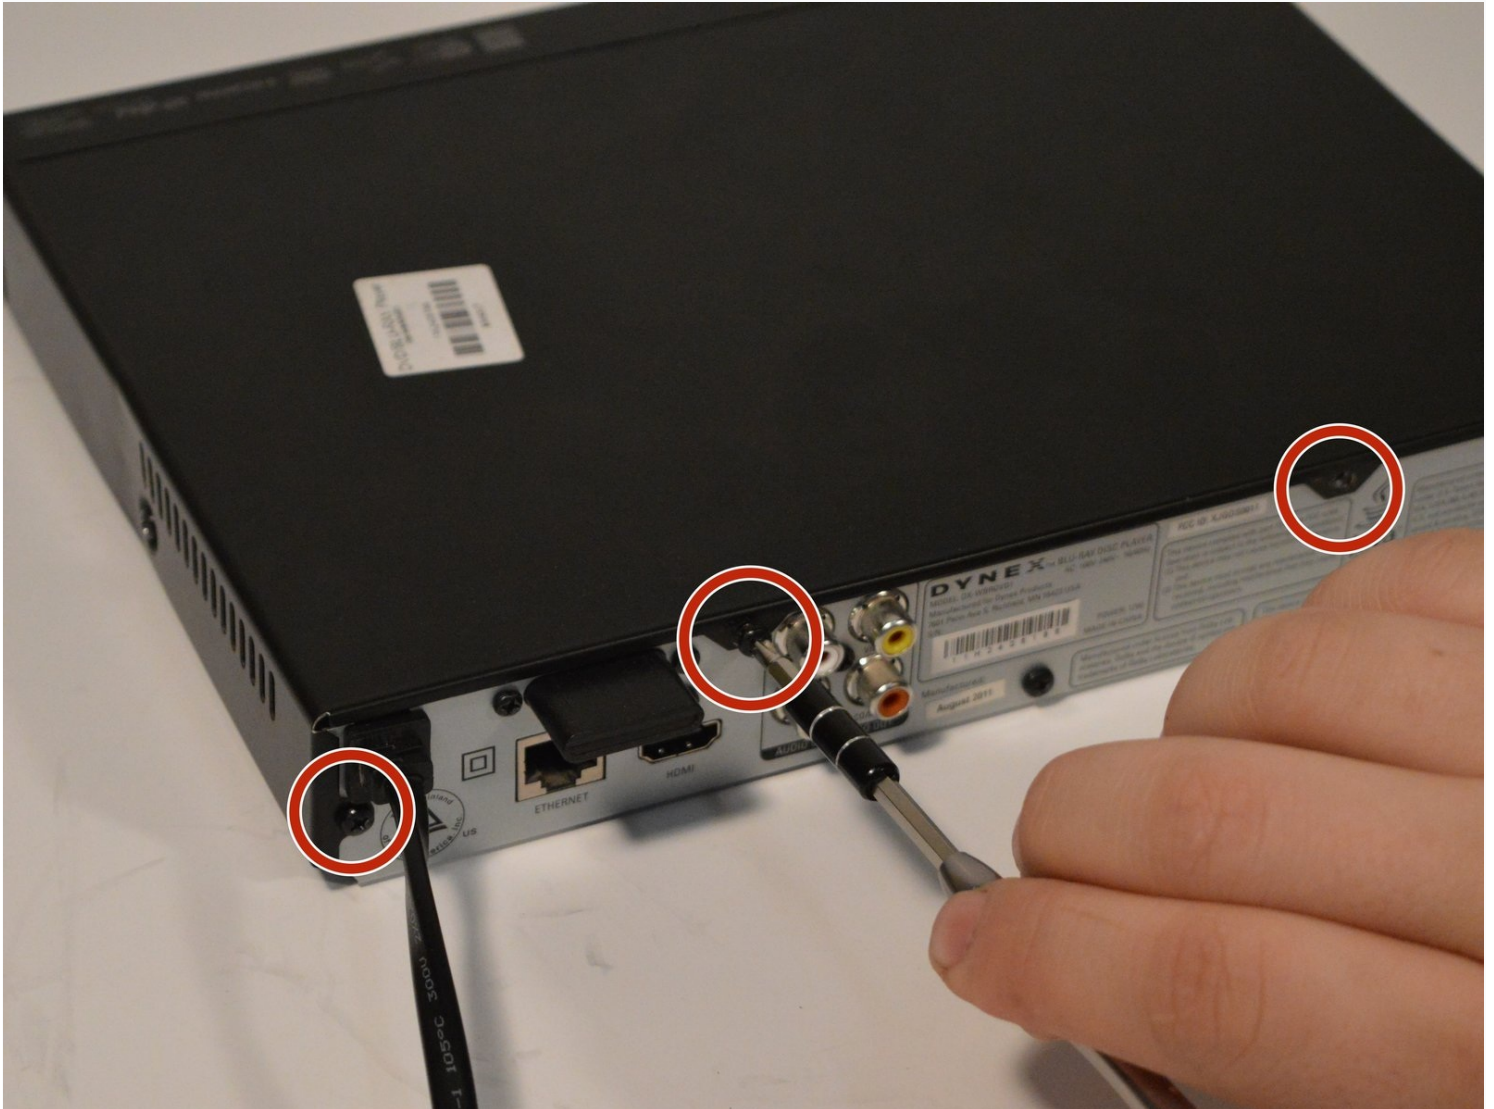


INTRODUCTION

This is the guide to crack into your device, almost every repair guide will need this completed first before being able to tear into the hardware below.

TOOLS:

Phillips #1 Screwdriver (1)

Step 1 — Top Cover

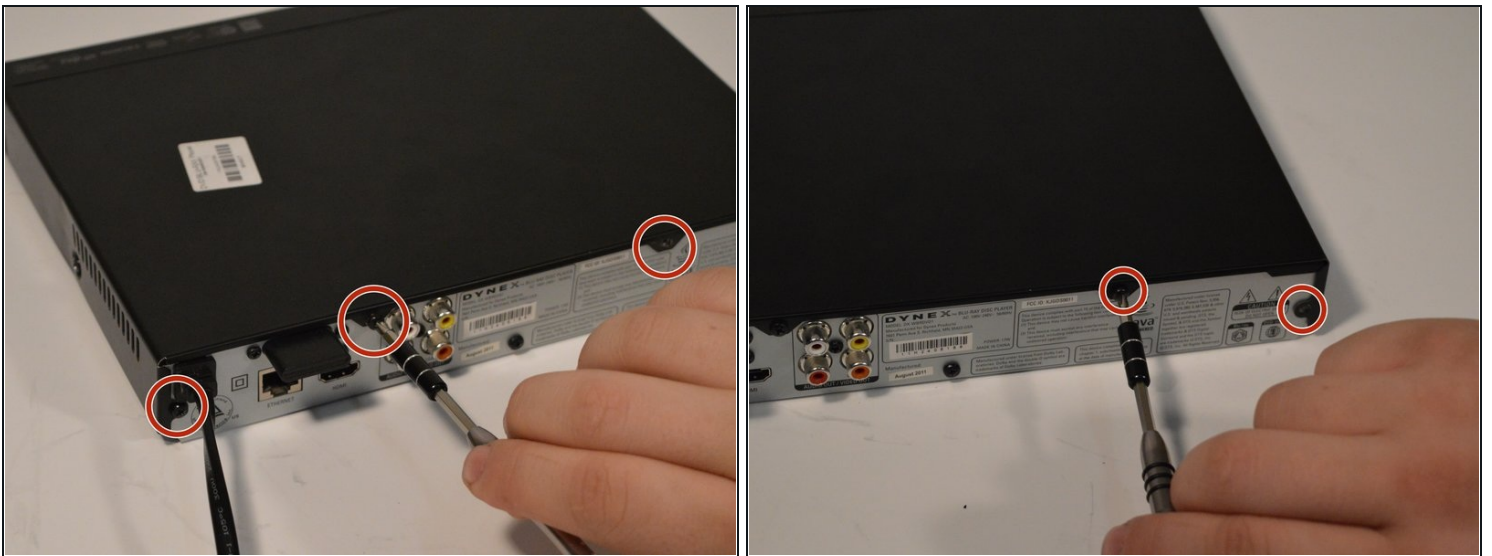


- Remove the four 5mm Phillips #1 screws that connect the black outer shell to the silver back of the device.

Step 2



- Remove the two 5mm screws on the left and right side panels.
- ⓘ There is one screw on each side that secures the cover to the body of the device.

Step 3

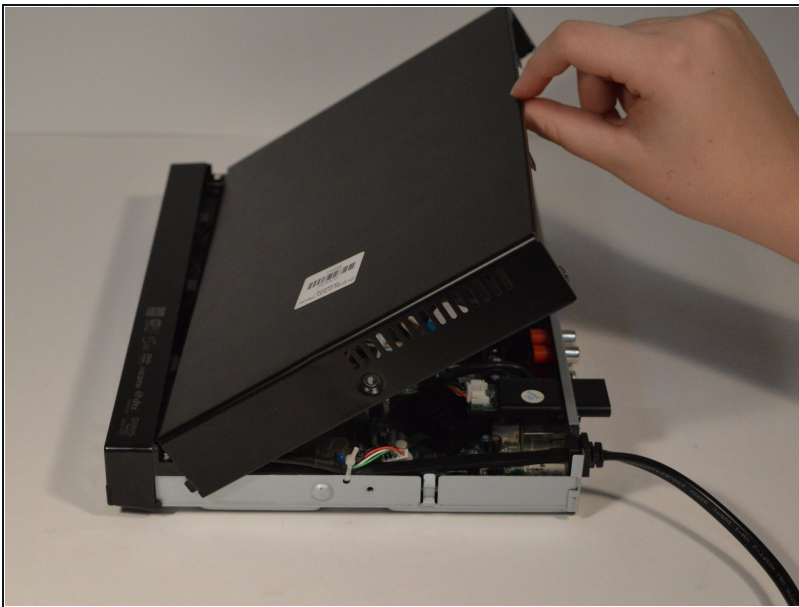

- Lift the black cover to a 45 degree angle from the rear of the device and pull the cover away entirely.
- ⚠ Check that the power cord is not preventing the device from opening or closing.

To reassemble your device, follow these instructions in reverse order.