



# Panasonic Compact Shaver ES4815 Battery Replacement

A guide to replace batteries for a Panasonic Compact Shaver ES4815.

Written By: muhammad samsulsham



---

## INTRODUCTION

If your shaver is not working, the first troubleshooting step is to check for dead batteries. Replacing the batteries is very easy, and it just takes a few steps.



### PARTS:

- [AA, Alkaline Battery](#) (2)
-

## Step 1 — Battery



- Twist the release cap to expose the batteries.

## Step 2



- Remove the batteries.

To reassemble your device, follow these instructions in reverse order.