


Archived

# Dell Inspiron 15 5565 Battery Replacement

In this guide, we will be showing you how to...

Written By: Terrence15

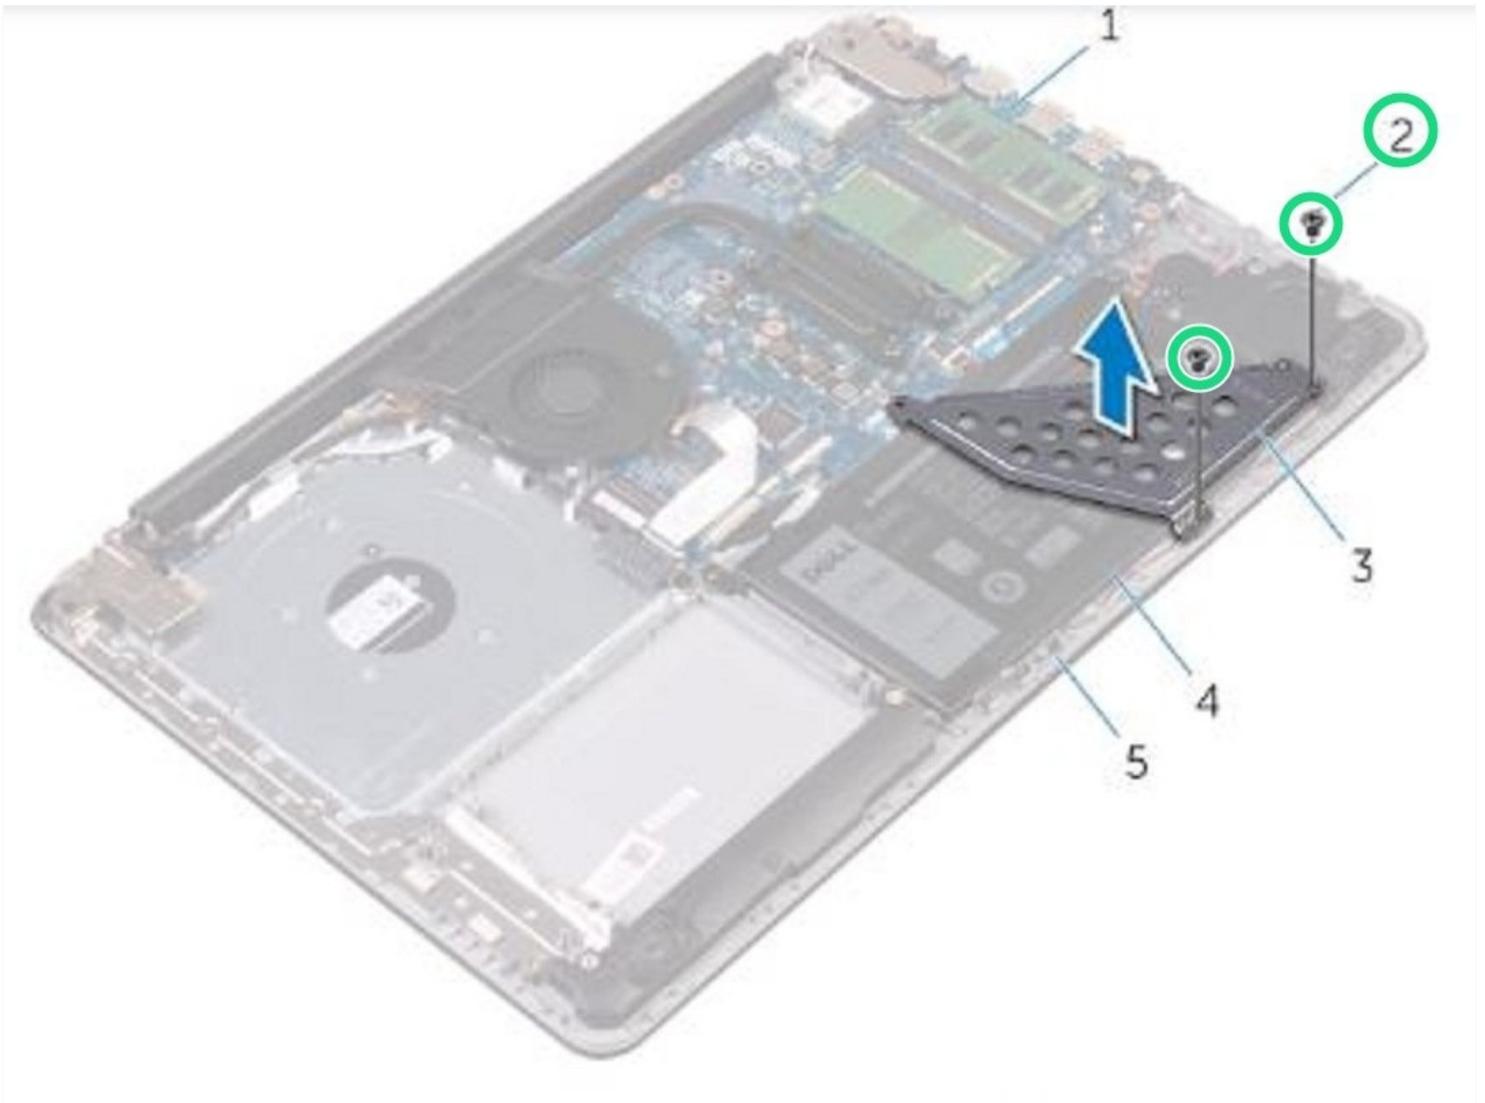


# INTRODUCTION

In this guide, we will be showing you how to remove and replace the Battery.

## TOOLS:

Phillips #0 Screwdriver (1)


### Step 1 — Remove the Screws

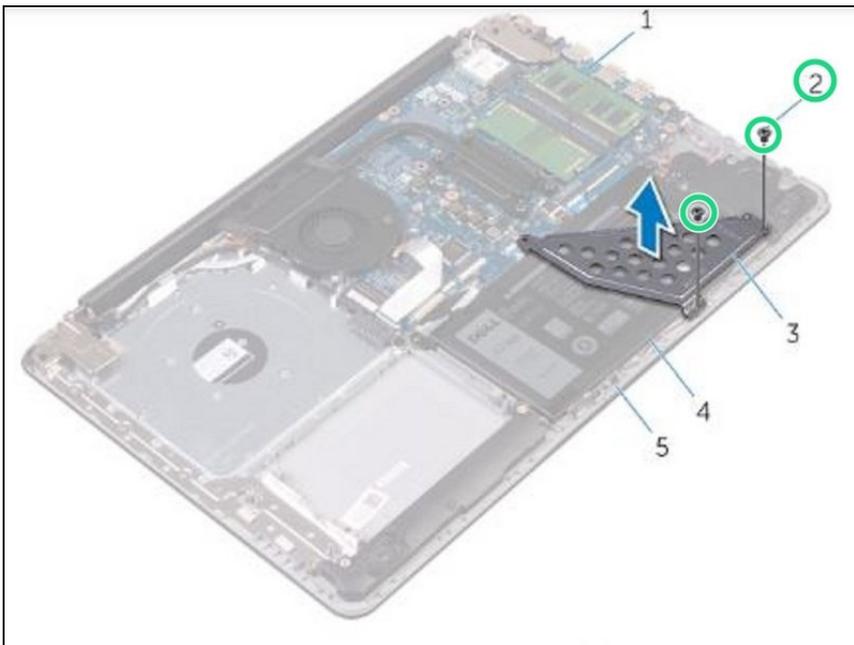

**⚠ WARNING:** Before working inside your computer, read the safety information that shipped with your computer and follow the steps in [Before Working Inside Your Computer](#). After working inside your computer, follow the instructions in [After Working Inside Your Computer](#).


- Remove the screws that secure the battery bracket to the system board and palm rest and keyboard assembly.

## Step 2 — Removing the Battery Bracket

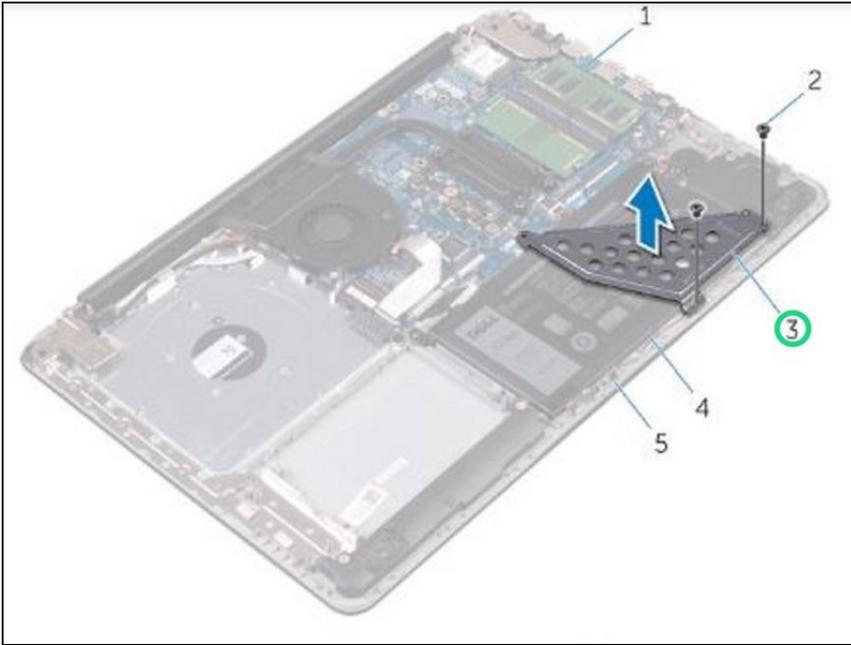


- Lift and remove the battery bracket.

## Step 3 — Remove the Screw

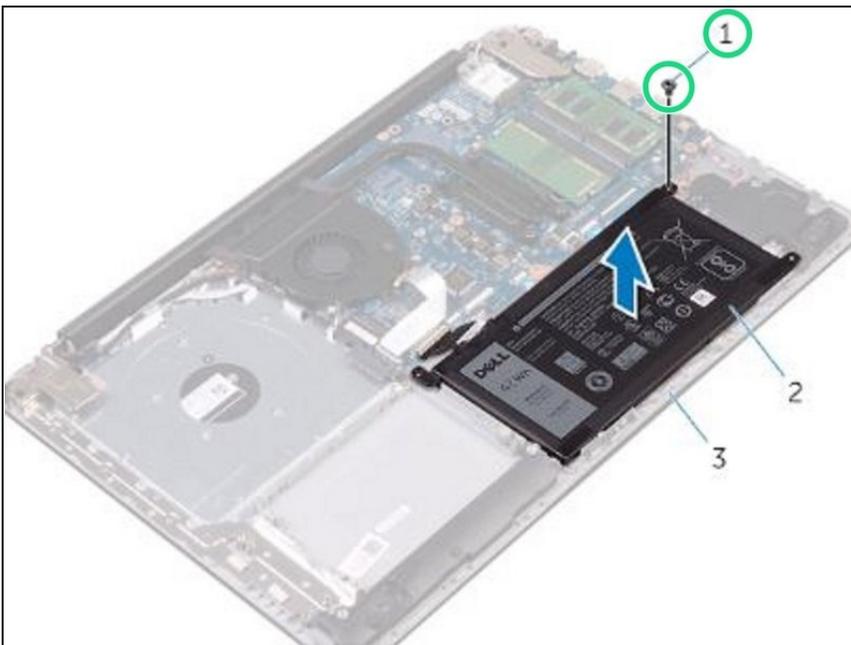


- Remove the screw that secures the battery to the palm rest and keyboard assembly.
- ⓘ NOTE: Note the location of the screw that secures the battery to the palm rest and keyboard assembly.

## Step 4 — Lifting the Battery

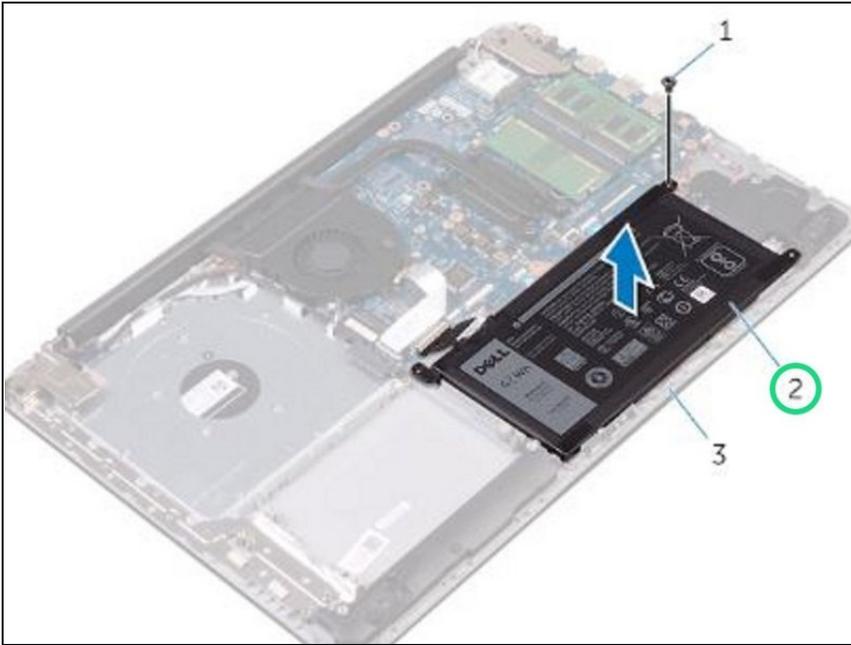


- Lift the battery off the palm rest and keyboard assembly.

## Step 5 — Align the Screw Holes

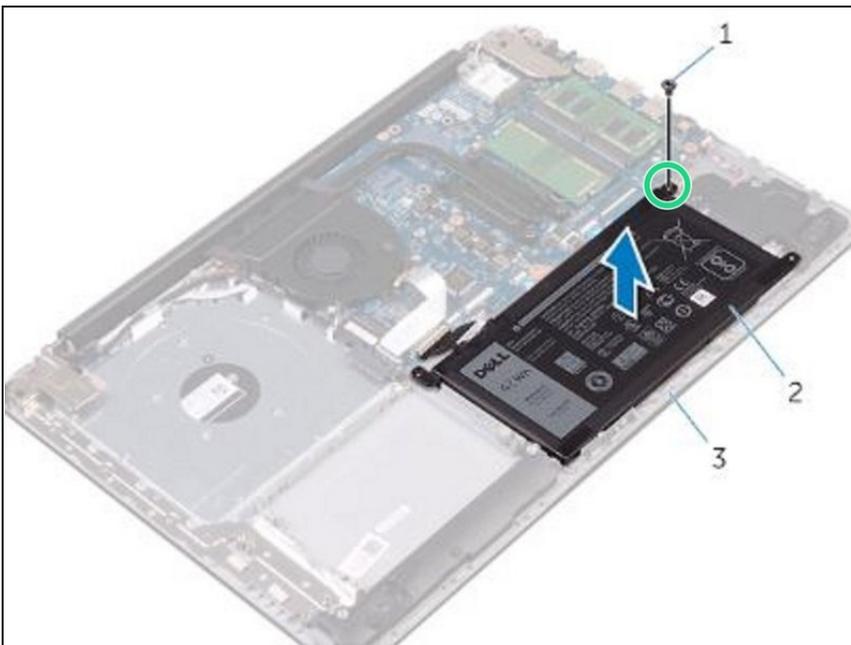


- Align the screw holes on the **NEW** battery with the screw holes on the palm rest and keyboard assembly.

## Step 6 — Replace the Screw

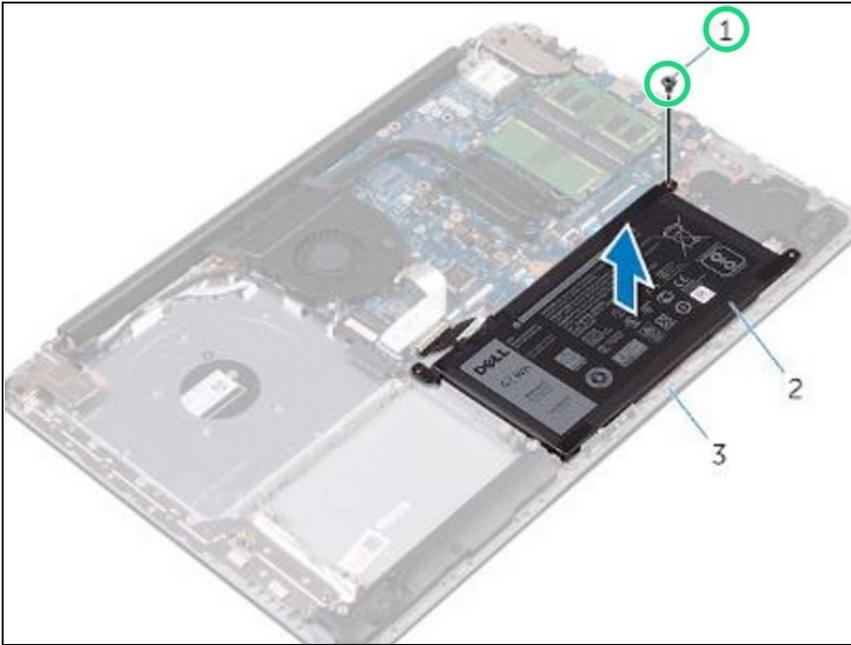


- Replace the screw that secures the battery to the palm rest and keyboard assembly.

## Step 7 — Align the Screw Holes

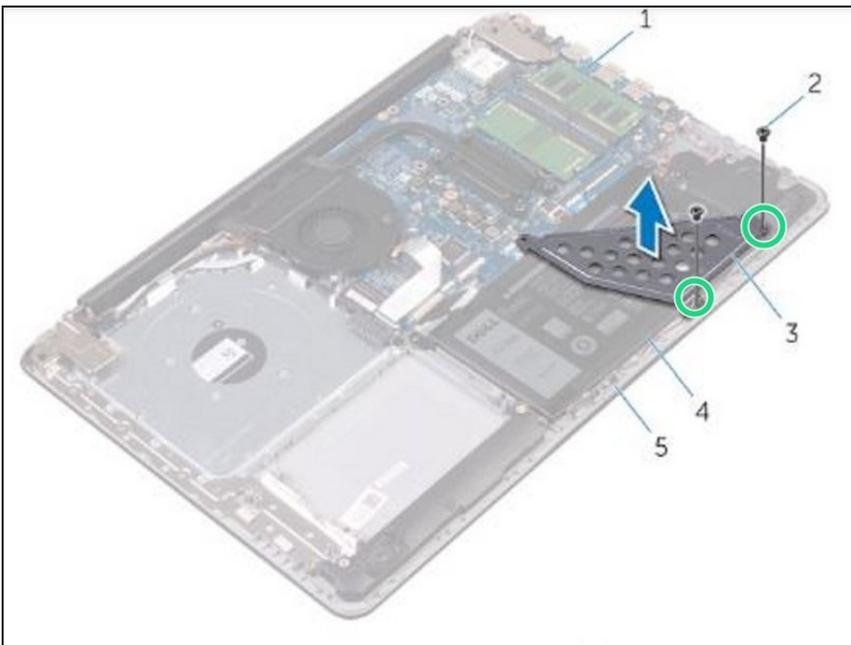

- Align the screw holes on the battery bracket with the screw holes on the system board and palm rest and keyboard assembly.

## Step 8 — Replace the Screws

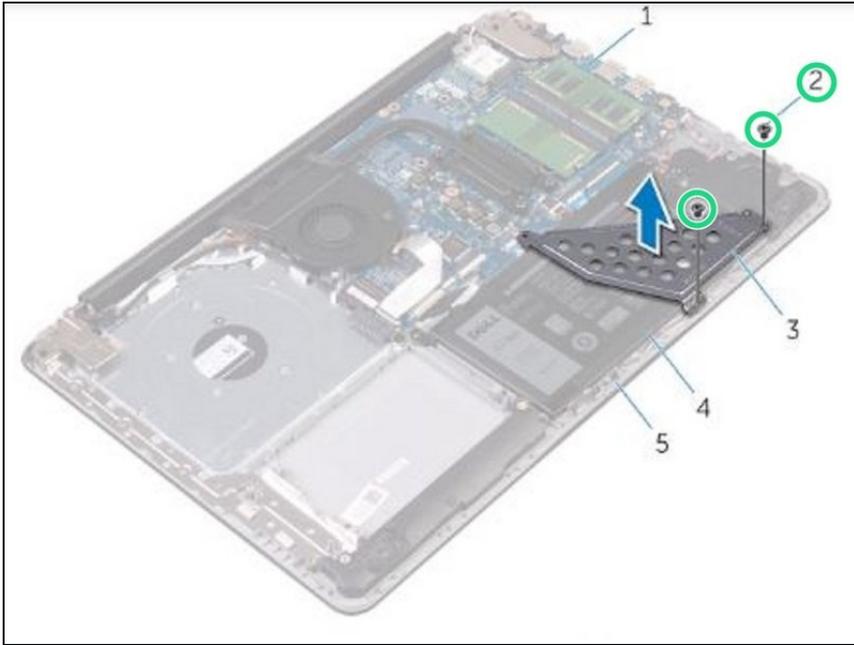

- Replace the screws that secure the battery bracket to the system board and palm rest and keyboard assembly.