



How to disassemble a pellet mill?

To maintain or replace components of a pellet mill, you need to disassemble it in right order.

Written By: Ronny Wei



TOOLS:

- [Smart Wrench](#) (1)
- [Screw Driver](#) (1)

Step 1 — How to disassemble a pellet mill?



- Please disassemble it in right order. From accessories to main part, from outside to inside. Disassemble the whole machine into assembly first, then assemble the assembly into components, next disassemble the components into smaller parts.

Step 2



- Prepare for assemble during disassembly. To facilitate assembly, you should check all components and mark them separately.

Step 3



- Classify the components according to the materials and precisions.

Step 4



- Clear up the dirt and oil on the [pellet machine](#). Keep the components clean during disassembly.

Step 5



- Use suitable tools. Don't hit it violently, or it would damage the components.

Step 6



- Disassemble it according to your needs. Disassemble as less as possible. Don't disassemble the parts where disassembly is not allowed.

To reassemble your device, follow these instructions in reverse order.