



# 1996-1998 Acura TL Rear Speaker Replacement

This guide explains how to access the rear speaker by removal from the back seat and trunk.

Written By: Brayden



---

## INTRODUCTION


This guide will show you how to access the rear speaker located behind the back seat headrest.

---

### TOOLS:

- [Phillips #2 Screwdriver](#) (1)
  - [Socket Wrench](#) (1)
-

## Step 1 — Rear Speaker

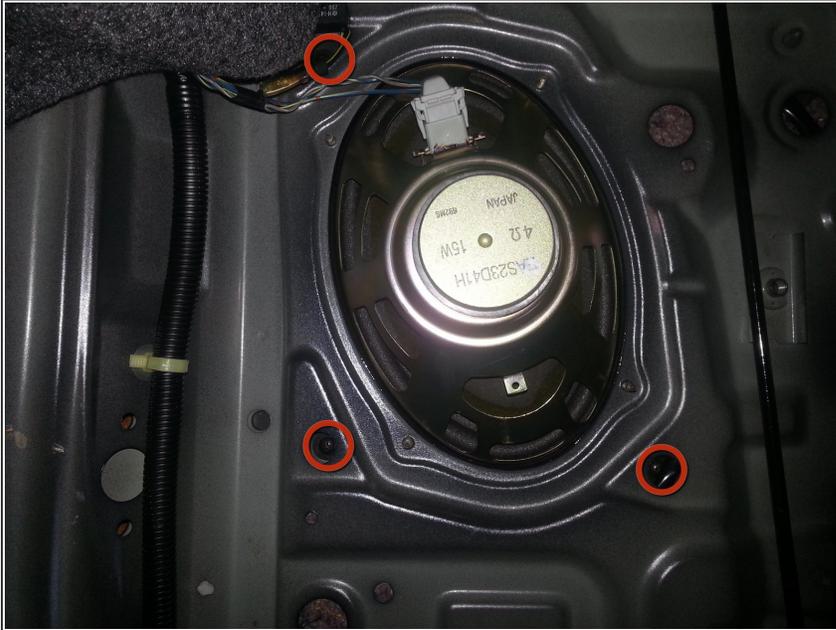

- Remove the three screws holding the speaker panel in place.

## Step 2



- Disconnect the wiring harness in trunk.

### Step 3



- Slide the speaker panel towards the center of car and pull it out.

### Step 4



- Remove the four screws holding the speaker in.
- Lift the speaker out and removal is complete.

To reassemble your device, follow these instructions in reverse order.