


# Dell Inspiron 15 M5030 Display Assembly Replacement

Written By: Terrence15

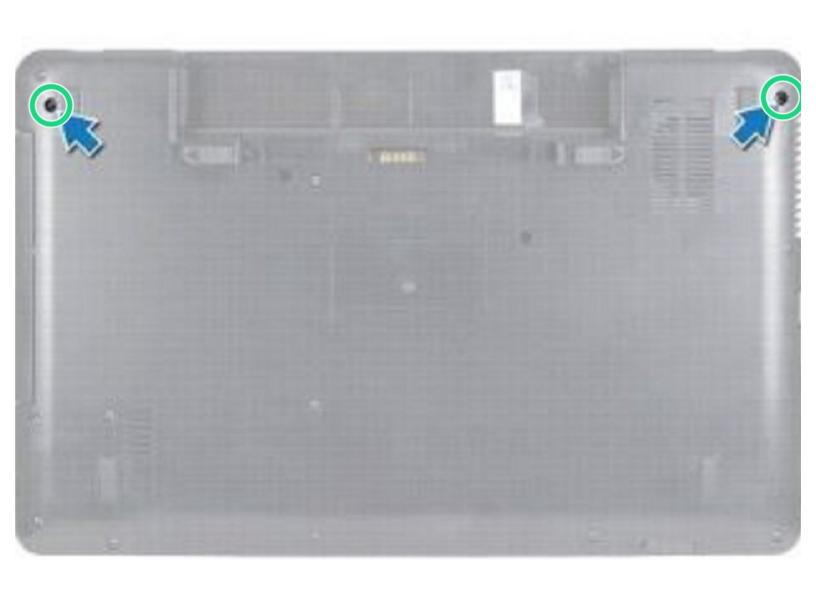

## **INTRODUCTION**


In this guide, we will be showing you how to remove and replace the Display Assembly.



# **TOOLS:**


• Phillips #0 Screwdriver (1)

#### Step 1 — Remove the Screws

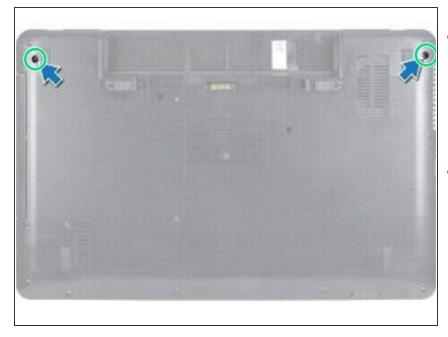


- MARNING: Before working inside your computer, read the safety information that shipped with your computer. Follow the instructions in Before You Begin.
- CAUTION: To avoid electrostatic discharge, ground yourself by using a wrist grounding strap or by periodically touching an unpainted metal surface (such as a connector on your computer).
- Remove the two screws that secure the display assembly to the base of the computer.

#### Step 2 — Open the Display

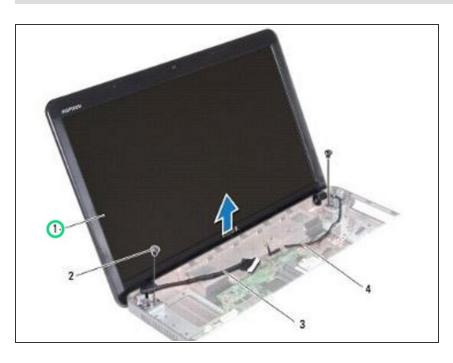

 Turn the computer over and open the display as far as possible.

#### **Step 3** — **Disconnecting the Antenna Cable**

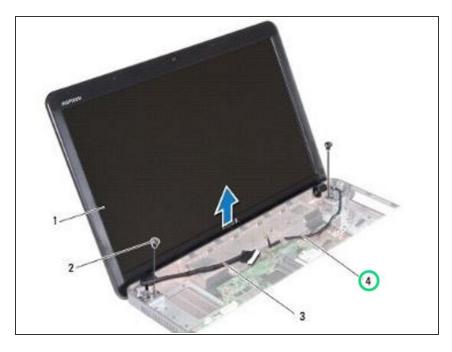


 Make a note of the Wireless Mini-Card antenna cable routing and disconnect the Wireless Mini-Card antenna cable from the Wireless Mini- Card.

## **Step 4** — **Disconnect the Display Cable**



 Disconnect the display cable from the connector on the system board and remove it from the routing guide.

## Step 5 — Remove the Screws

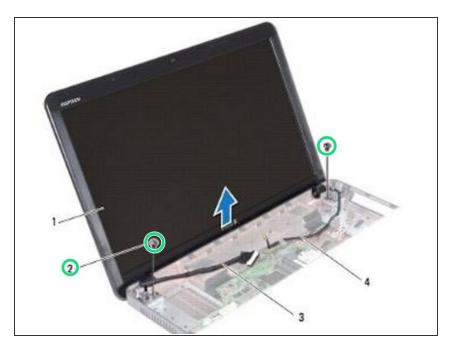

 Remove the two screws (one on each side) that secure the display assembly to the computer base.

#### Step 6 — Removing the Display Assembly



 Lift and remove the display assembly out of the computer base.

## Step 7 — Placing the Display Assembly




 Place the **NEW** display assembly in position and replace the two screws (one on each side) that secure the display assembly to the computer base.

## Step 8 — Routing the Display Cable




 Route the display cable into the routing guide and connect the display cable to the connector on the system board.

## **Step 9** — Routing the Cable

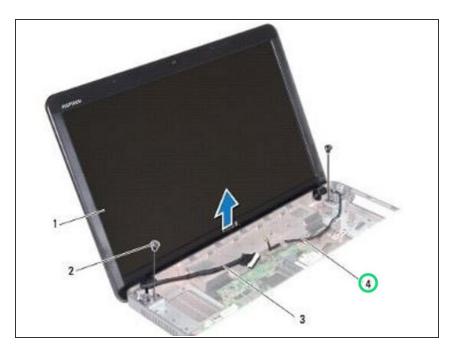

 Route the Mini-Card antenna cable into the routing guide and connect the Mini-Card antenna cable to the connector on the Mini-Card.

#### Step 10 — Replace the Screws

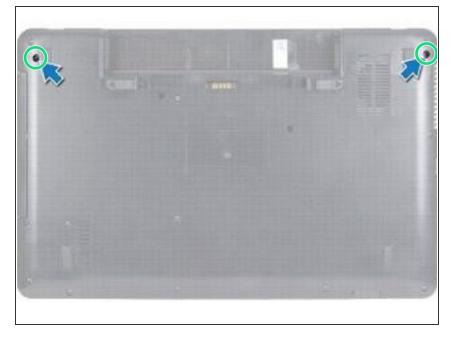

 Turn the computer over and replace the two screws at the base of the computer.