



# Dell Inspiron 15R 5521 Battery Replacement

In this guide, we will be showing you how to...

Written By: Terrence15



# INTRODUCTION

In this guide, we will be showing you how to remove the replace the Battery.

## ⚙️ PARTS:

Dell DL-I5521X4 Battery (1)

### Step 1 — Sliding the Latches



**⚠️ WARNING:** Before working inside your computer, read the safety information that shipped with your computer and follow the steps in ["Before You Begin"](#).

- Close the display and turn the computer over.
- Slide the battery latches on each end of the battery bay to the unlock position. You will hear a click when the battery is unlocked.

## Step 2 — Remove the Battery



- Lift and remove the battery off the computer base to disconnect it from the computer.

## Step 3 — Align the Tabs



- Align the tabs on the battery with the slots on the battery bay and snap the battery into place.