




Dell Inspiron 15R N5110 Memory Module Replacement

Written By: Terrence15

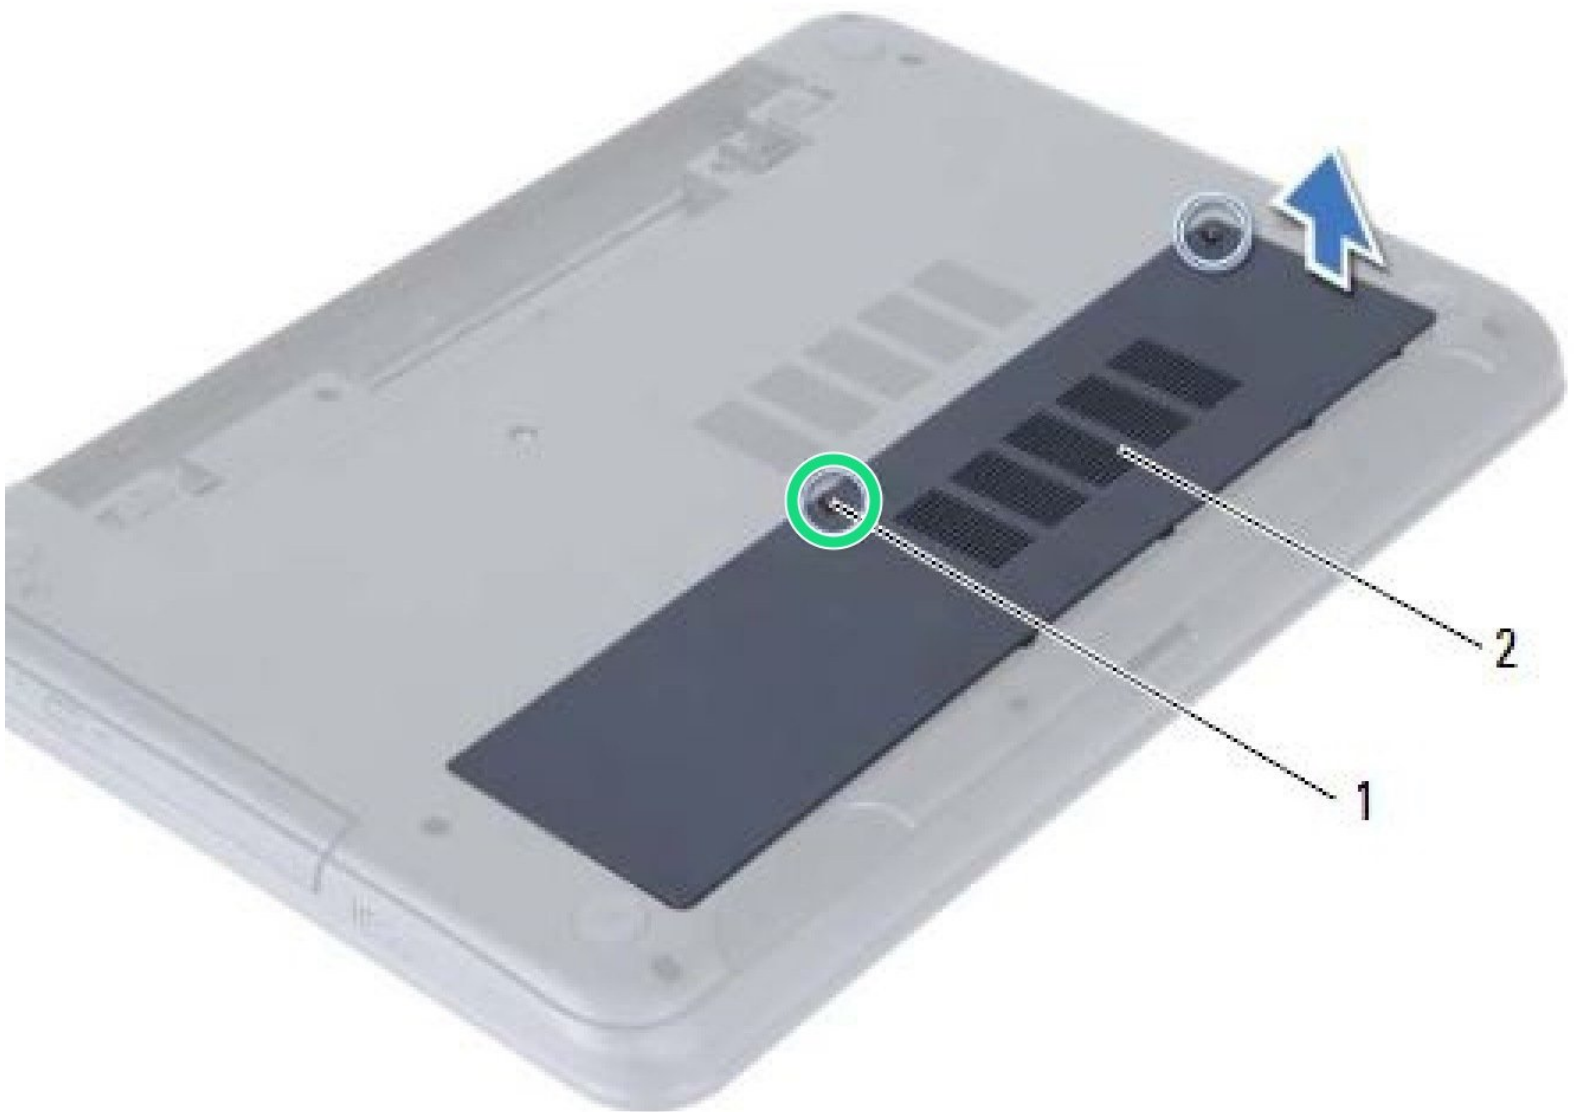


INTRODUCTION

In this guide, we will be showing you how to remove and replace the Memory Module.

TOOLS:

- [Anti-Static Wrist Strap](#) (1)
 - [Essential Electronics Toolkit](#) (1)
-

Step 1 — Loosen the Screw

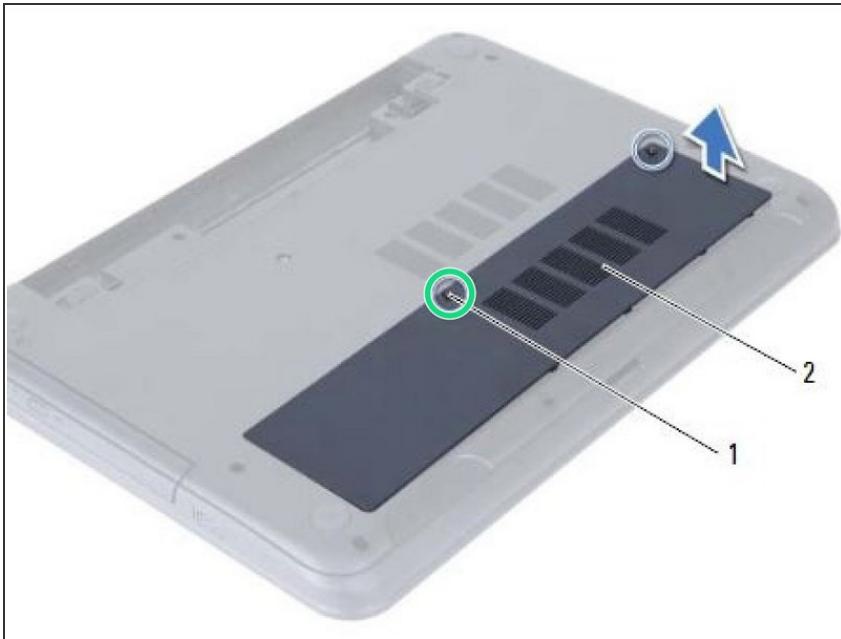

⚠ WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in ["Before You Begin"](#).



- Loosen the captive screw that secures the memory-module cover to the computer base.

Step 2 — Lifting the Memory Module Cover




- Using your fingertips, lift the memory-module cover out of the slots on the computer base.

Step 3 — Popping up the Memory Module

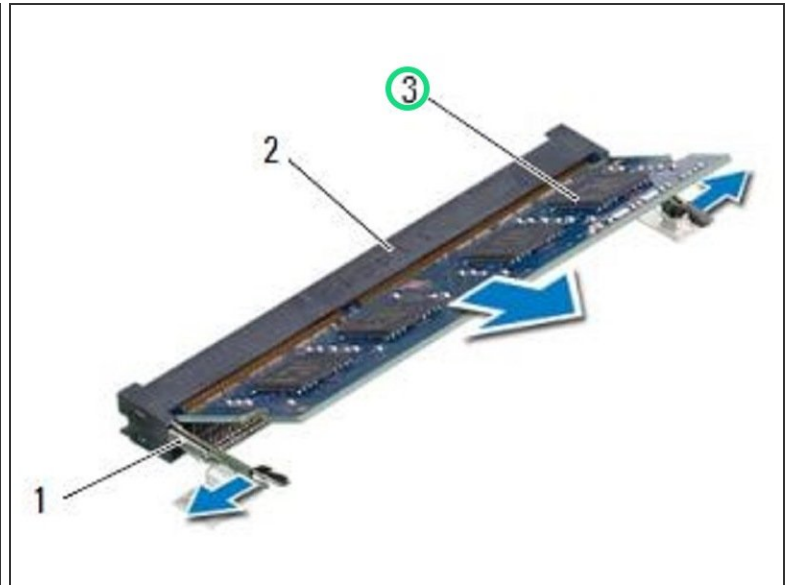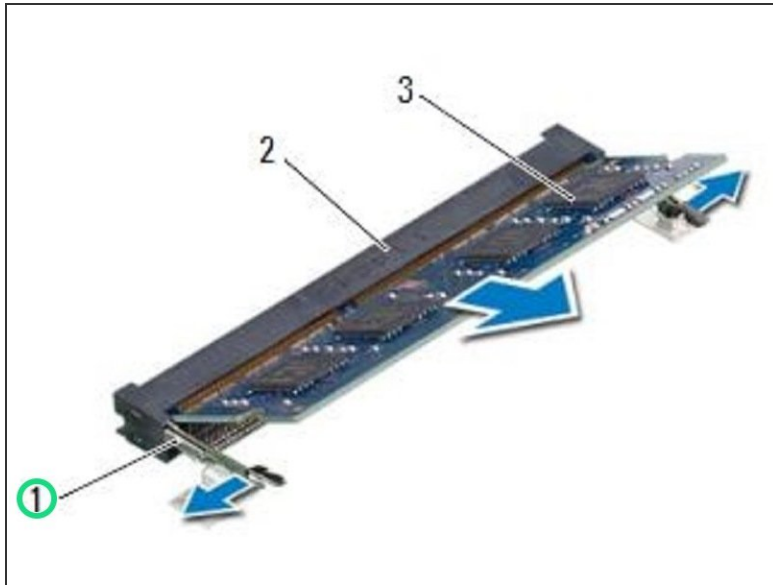

- Use your fingertips to carefully spread apart the securing clips on each end of the memory-module connector until the memory module pops up.

Step 4 — Remove the Memory Module

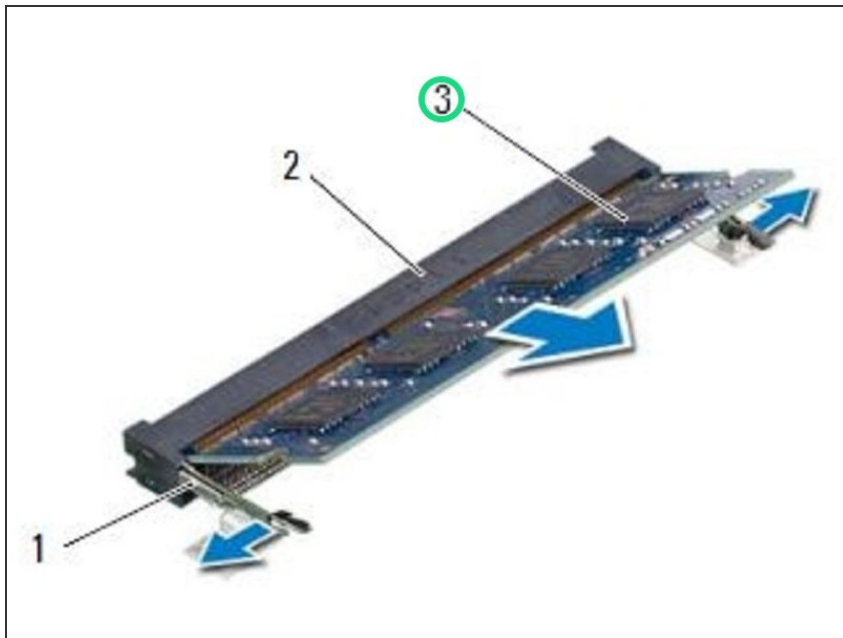


- Remove the memory module from the memory-module connector.

Step 5 — Align the Notch



- Align the notch on the **NEW** memory module with the tab on the memory-module connector.


Step 6 — Sliding the Memory Module

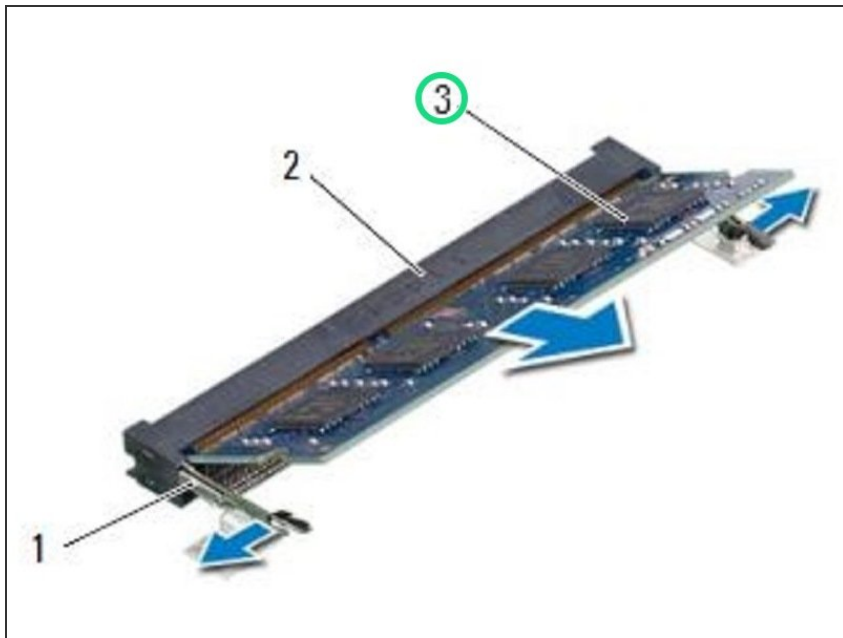

- Slide the memory module firmly into the connector at a 45-degree angle and press the memory module down until it clicks into place.

i NOTE: If you do not hear the click, remove the memory module and reinstall it.

Step 7 — Slide the Tabs

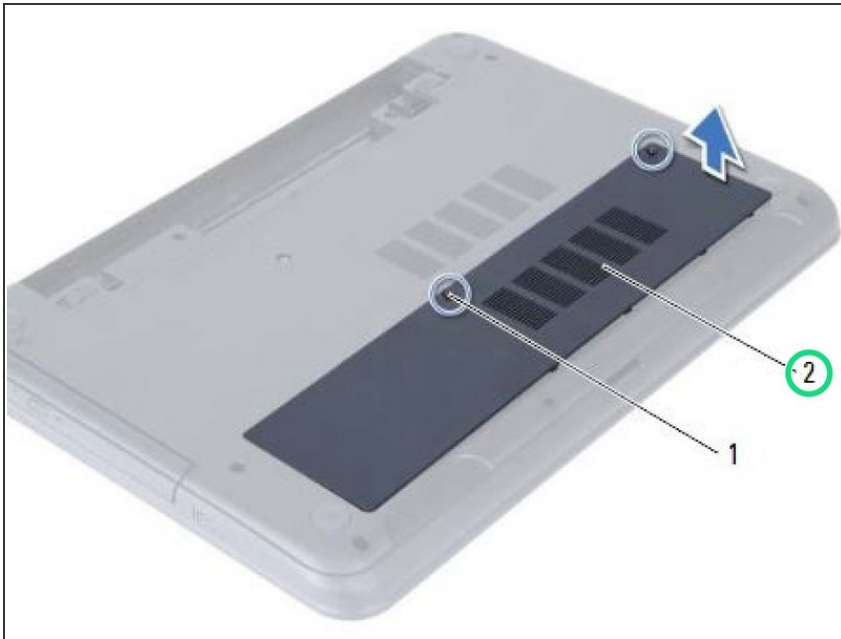

- Slide the tabs on the memory-module cover into the slots on the computer base and snap the memory-module cover into place.

Step 8 — Tighten the Screw



- Tighten the captive screw that secures the memory-module cover to the computer base.