




# Dell Inspiron 15z 5523 Battery Replacement

Written By: Terrence15

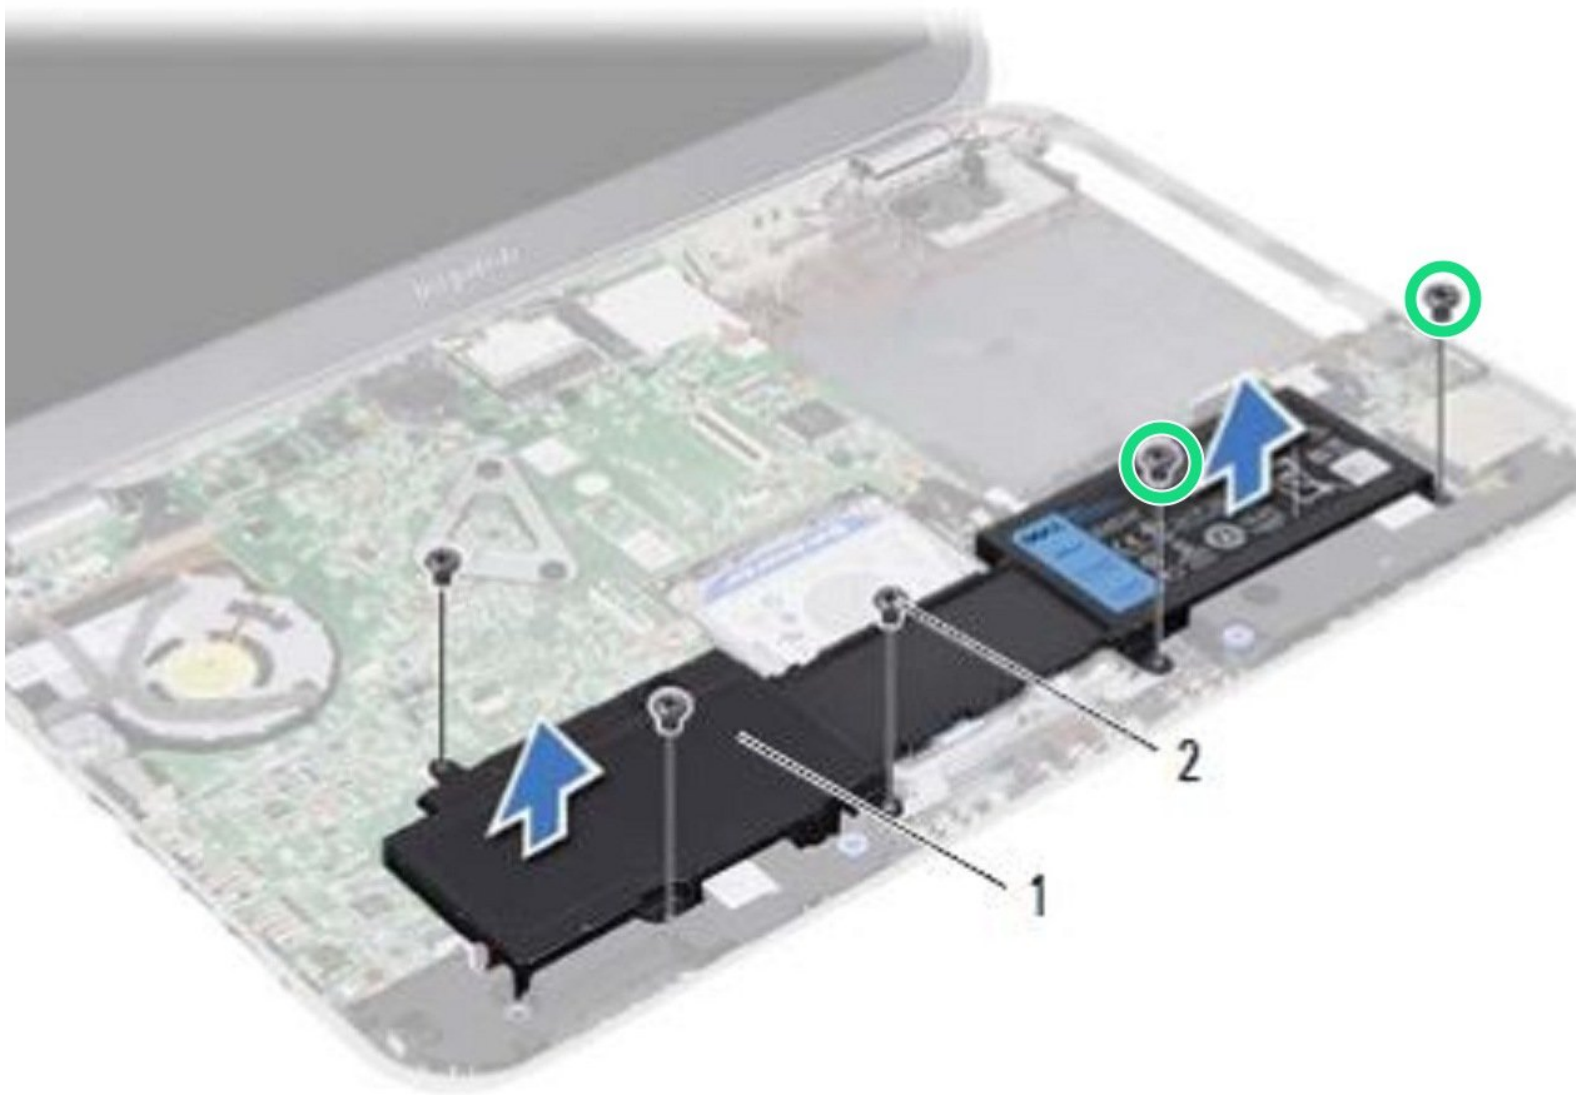

---

## INTRODUCTION


In this guide, we will be showing you how to remove and replace the Battery.



### TOOLS:

- [Phillips #0 Screwdriver](#) (1)
-


## Step 1 — Remove the Screws

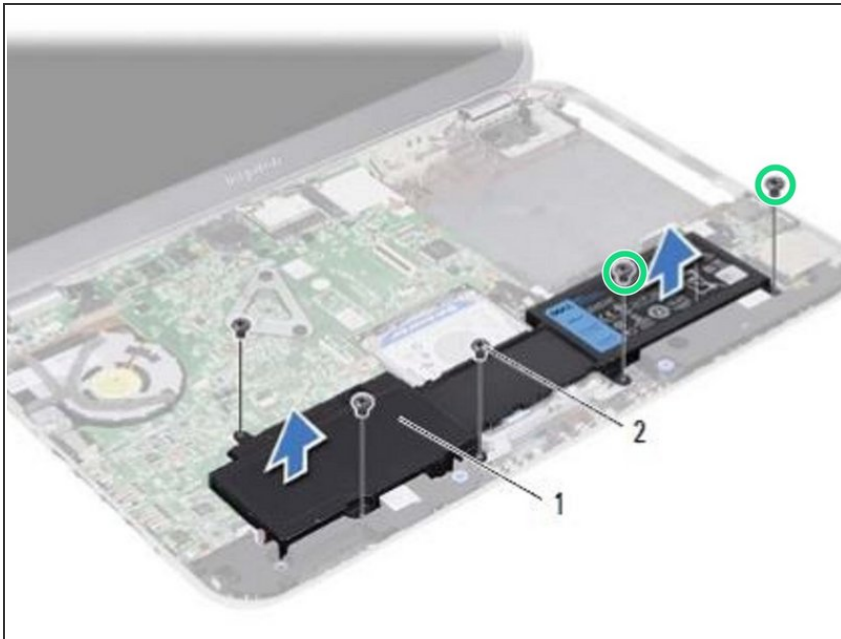

**WARNING:** Before working inside your computer, read the safety information that shipped with your computer and follow the steps in ["Before You Begin"](#).


- Remove the screws that secure the battery to the computer base.

## Step 2 — Lifting the Battery

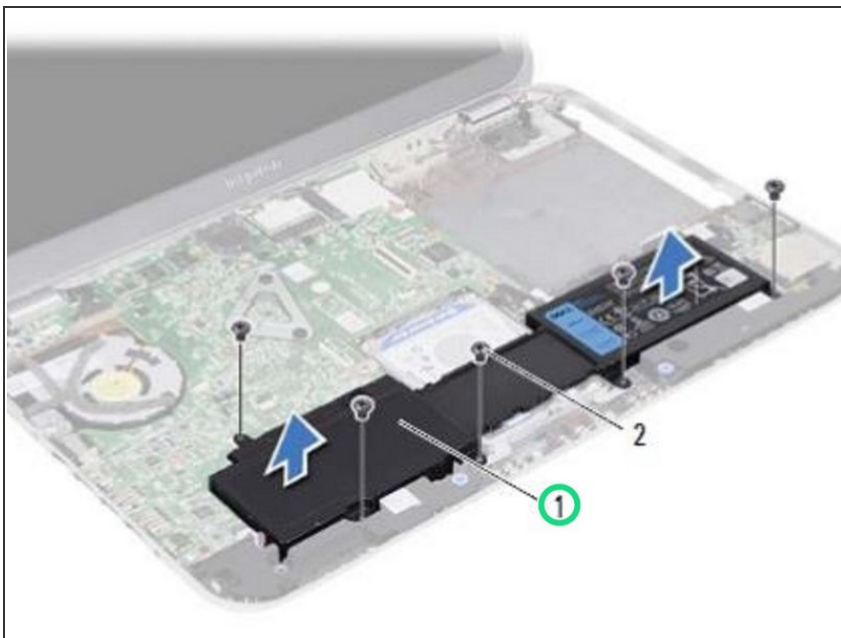


- Lift the battery to disconnect it from the system board and remove the battery from the computer base.

### Step 3 — Align the Screw Holes

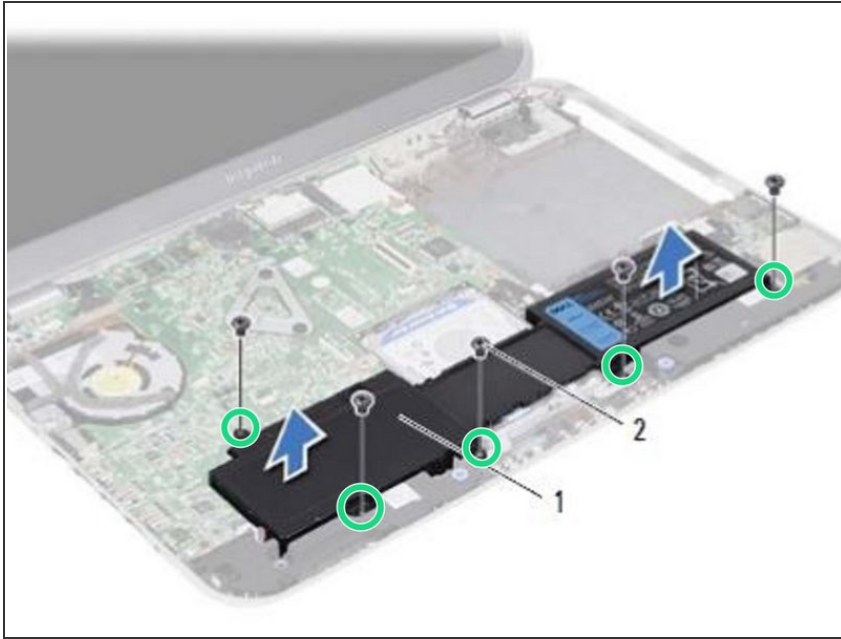

- Align the screw holes on the **NEW** battery with the screw holes on the computer base and press down on the battery connector.

### Step 4 — Replace the Screws

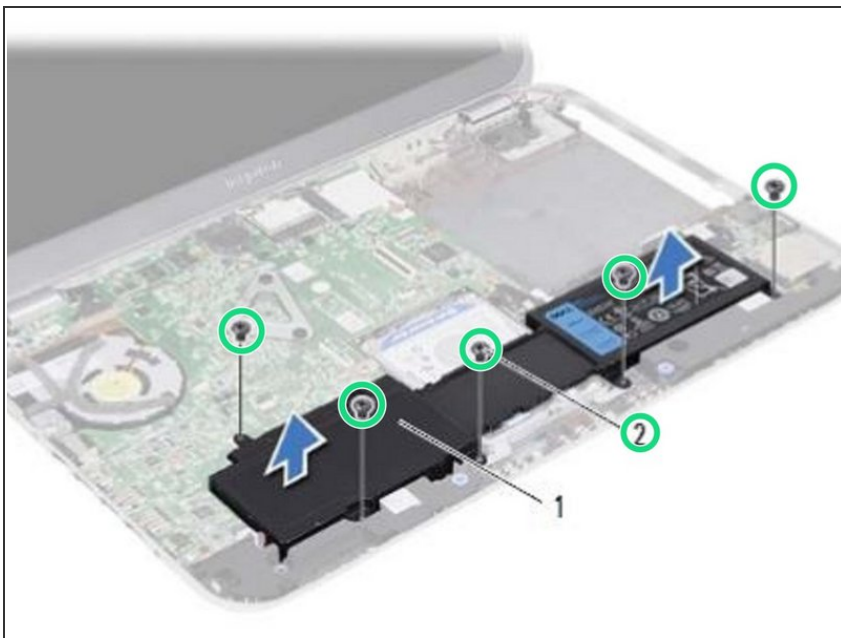

- Replace the screws that secure the battery to the computer base.