



# How to easily fix a Xbox 360 drive that wont open.

If you try to open your Xbox 360 drive and it just clicks, this guide will normally fix it.

Written By: Matt Weatherly





## TOOLS:

- [Tweezers](#) (1)
  - [Paper Clip](#) (1)
  - [Paper Towels](#) (1)
-

## Step 1 — How to easily fix a Xbox 360 drive that wont open.



- First we need to take off the face plate.

## Step 2



- Use a paper clip or a long pick tool to manually open DVD Drive.



### Step 3



 
- Use tweezers to take a rubber belt of 2 pulleys in between the hole in the DVD Tray.

### Step 4




- Use a damp paper towel to thoroughly clean the rubber belt.

## Step 5

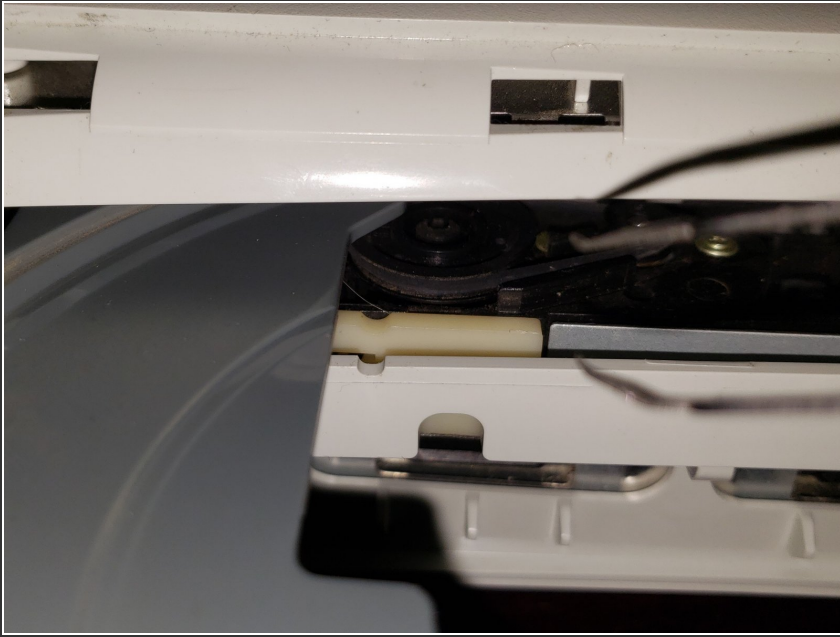

- Use the tweezers to put the rubber belt back on the 2 pulleys we took them off of.
- I have found it is easier to start with the big pulley first then once around the big pulley get the belt around the small belt.

## Step 6

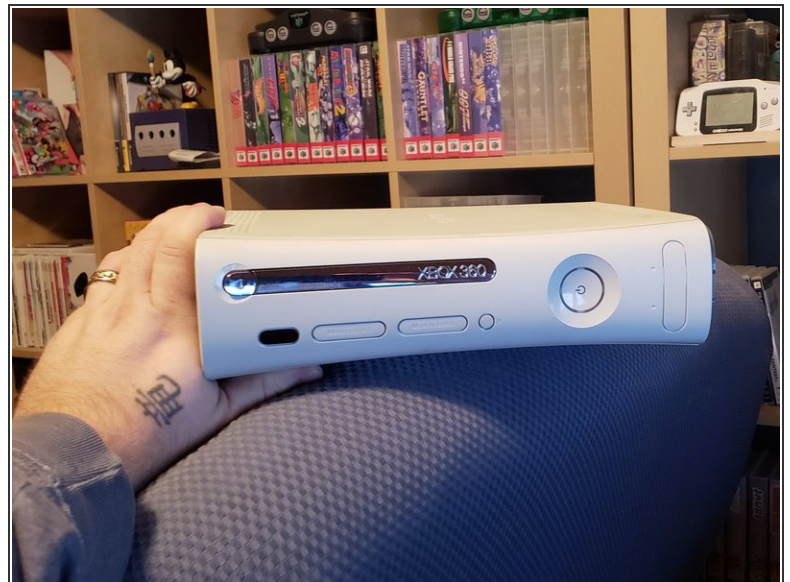 

- Close the DVD Drive and put the face plate back on.
- Plug the system in and test to see if the drive works.

These steps have helped me fix 2 original Xbox systems and 3 Xbox 360 systems. I hope it helps yall. If you need any clarification on any of the steps please message me.