



Revlon 473 Disassembly

Clean the head of the hairdryer, including the...

Written By: Jessica Leyva



INTRODUCTION

Clean the head of the hairdryer, including the vent, to prevent the fan from getting clogged. Debris in the fan may cause a rattling noise or cause the fan to stop working.

TOOLS:

- [Paper Towels](#) (1)
- [Phillips #2 Screwdriver](#) (1)
- [Toothbrush](#) (1)
- [Tweezers](#) (1)

Optional

Step 1 — Shell



⚠ Before disassembly, make sure that the device is unplugged.


- Remove the two 17.83 mm black screws located on the handle.


Step 2



- Separate the shell from the main component.
- Check to ensure each piece is free from debris.

Step 3

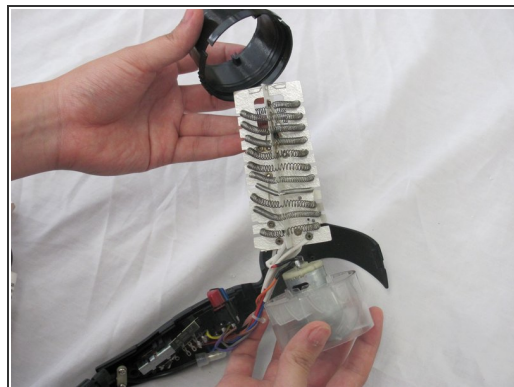


- Remove the casing from the heating element.
-  For reassembly, reattach the silver casing before the black cover.

Step 4 — Revlon 473 Disassembly




- Take the head of the hairdryer and pull the pieces apart.

Step 5

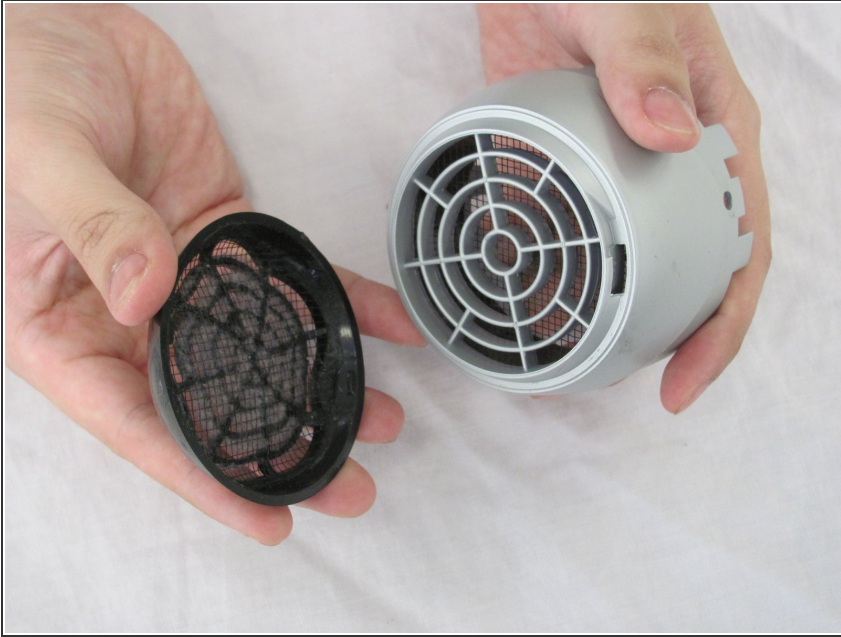


- Remove the black vent from the grey cylindrical piece.

Step 6

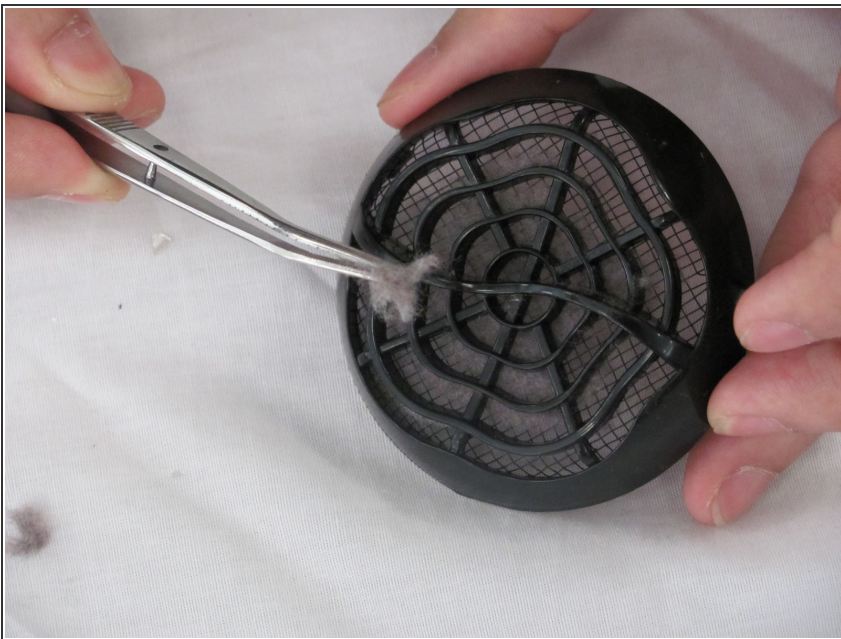

- If there is lint in the vent, use tweezers or a toothbrush to extract it from the vent.
- ① This will keep the fan from getting clogged and malfunctioning.

Step 7

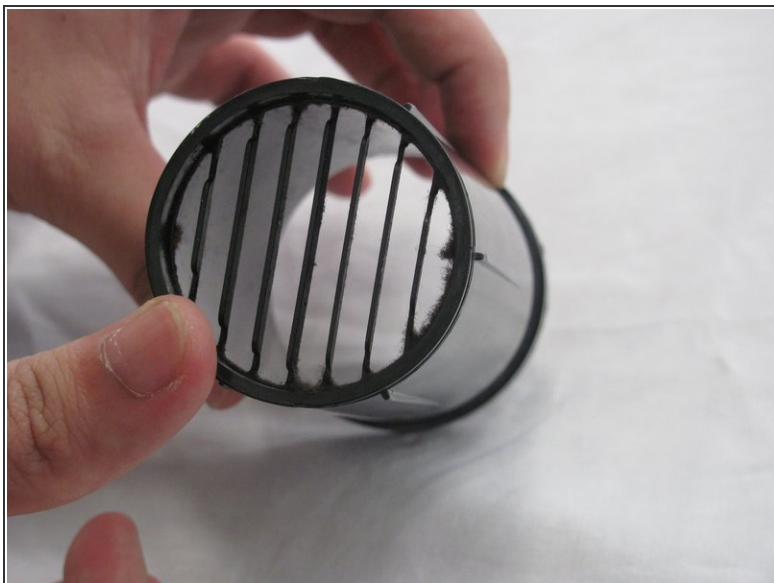

- Clean the other black vent with a toothbrush.

Step 8



- Clean these two components with a paper towel.

To reassemble your device, follow these instructions in reverse order.