




# Kenwood KMM-BT522HD Button Replacement

A guide on how to replace the buttons on the face plate of the Kenwood KMM-BT522HD radio.

Written By: Andrew Waldon

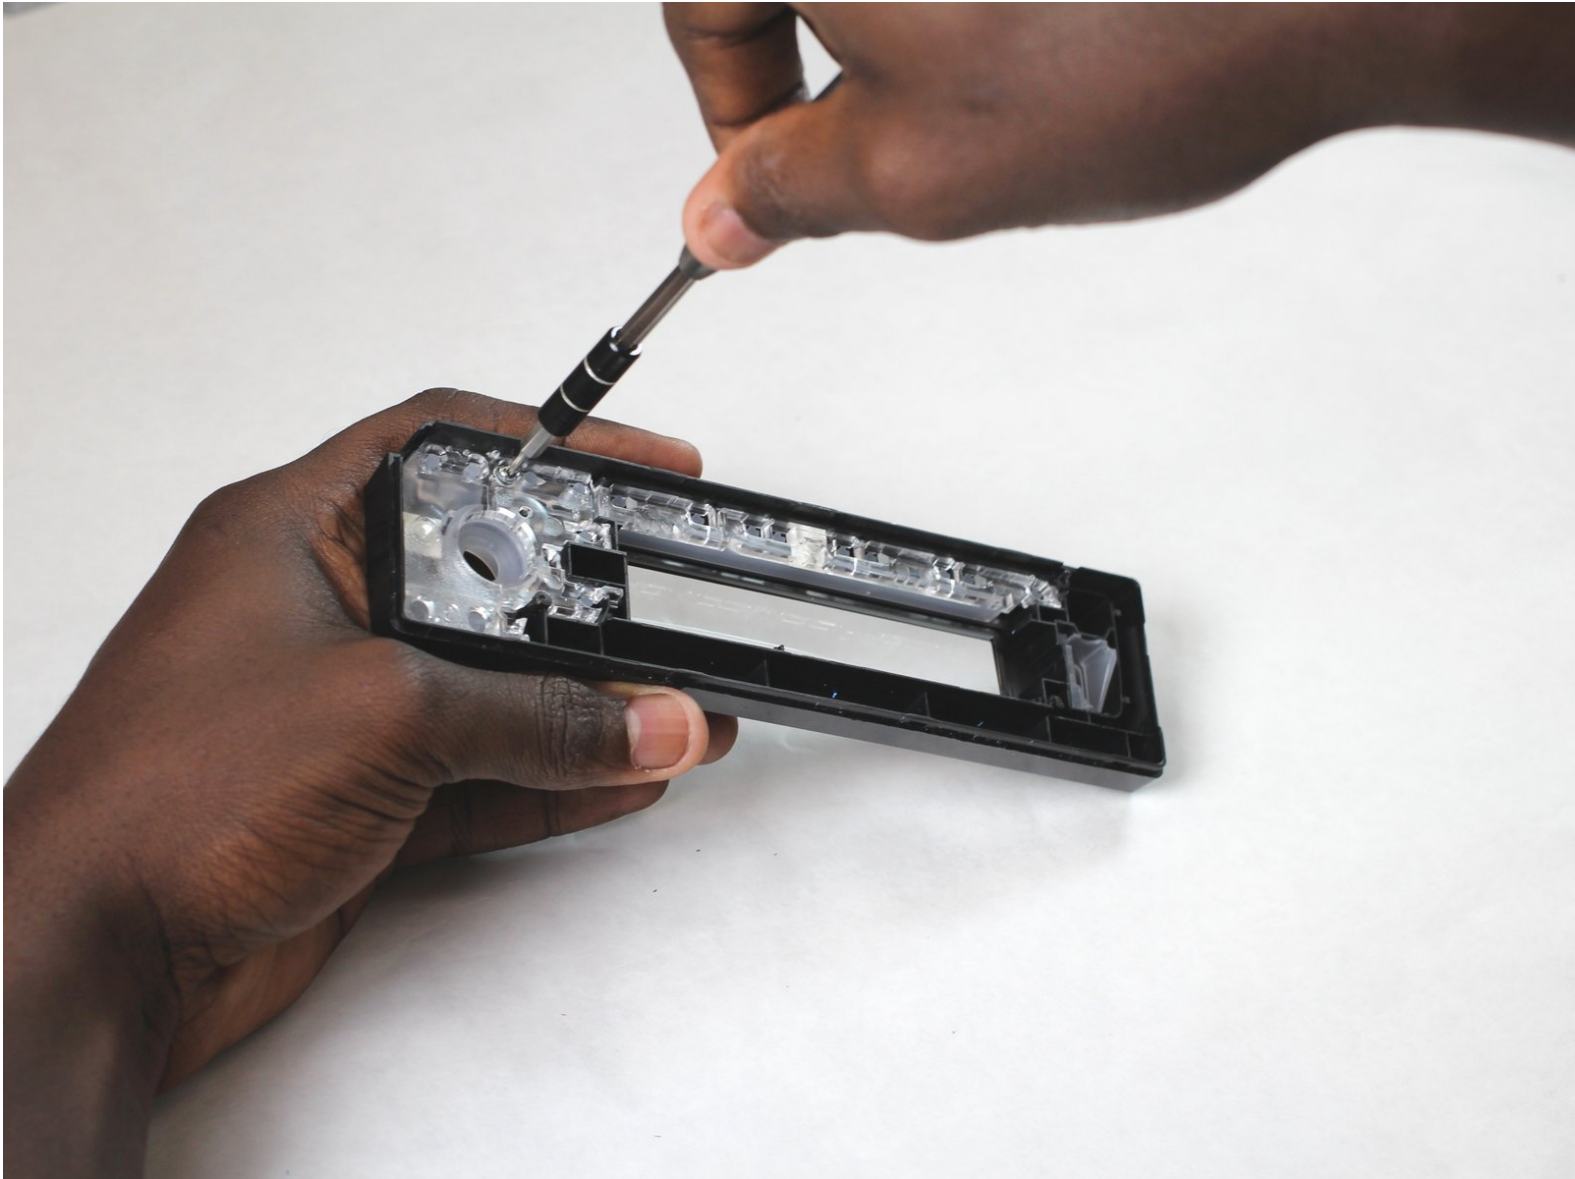

---

## INTRODUCTION

This repair might be needed when the buttons in the face plate become broken or lost.


---



### TOOLS:

- [iFixit Opening Tools](#) (1)
  - [Phillips #1 Screwdriver](#) (1)
  - [Tweezers](#) (1)
  - [Phillips #0 Screwdriver](#) (1)
-

## Step 1 — Face Plate

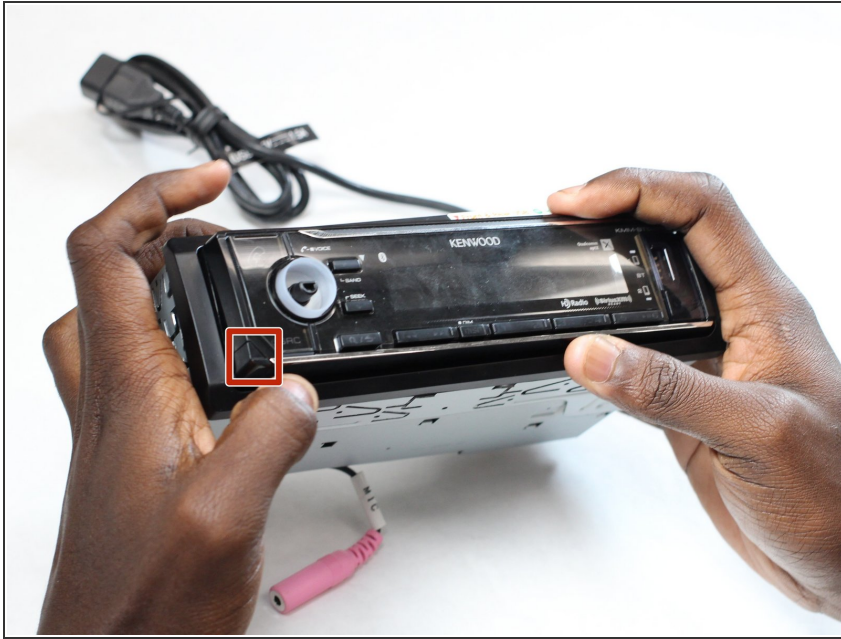

- Press the ejection button on the lower left corner of the face plate.

## Step 2



- Remove the face plate by pulling upwards and in the direction of the ejection button.



### Step 3 — LCD Screen




- Remove the three 7.5mm Phillips #1 screws.

### Step 4





- Separate the two halves of the housing by prying along the length of the device with a plastic opening tool.

## Step 5

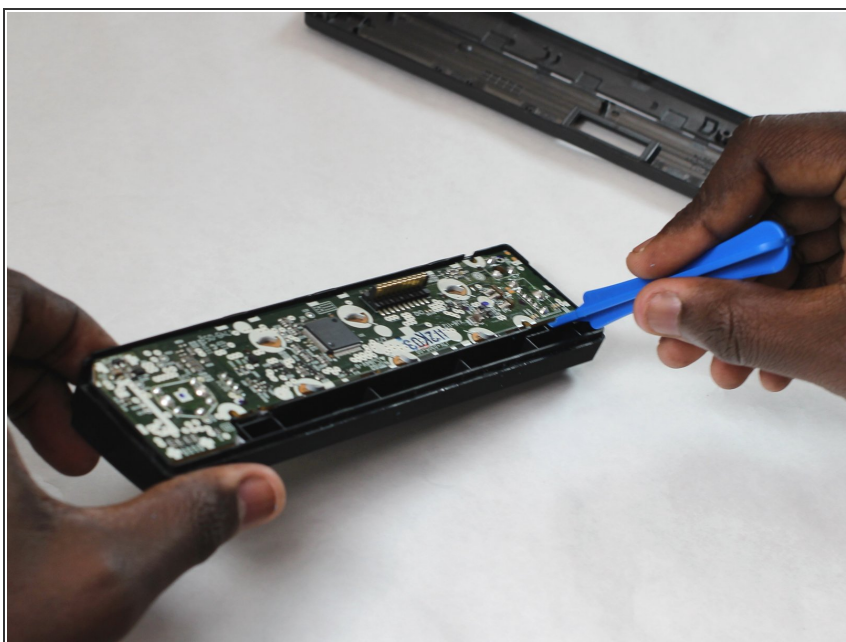


- Remove the motherboard from the housing.

## Step 6 — Buttons

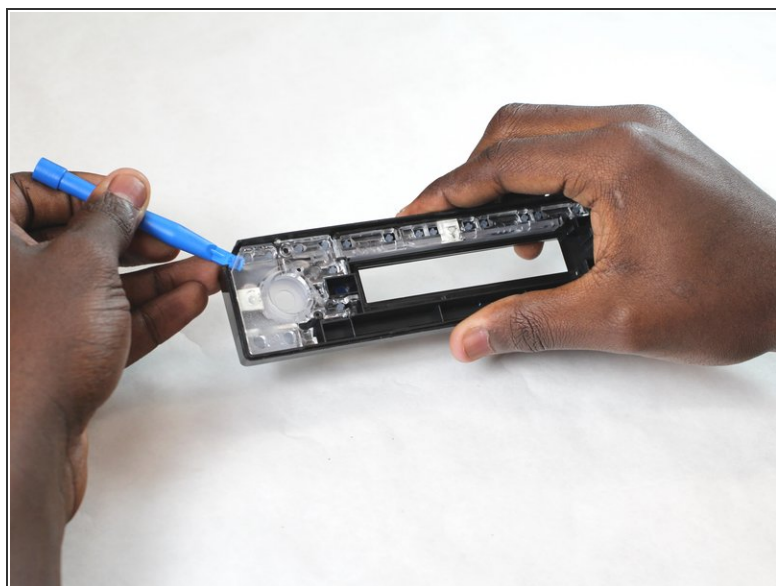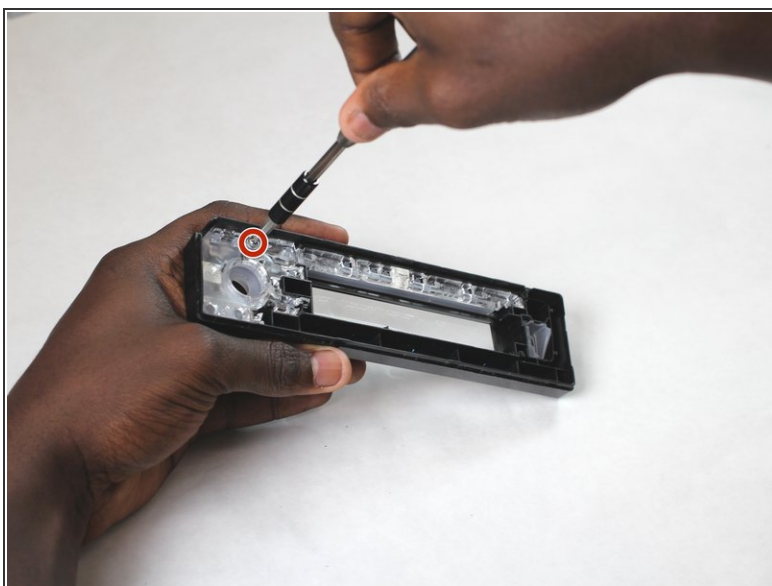

- Remove the 5.5 mm Phillips #00 screw.
- Remove the clear plastic piece by carefully prying it away from the plastic housing.

## Step 7

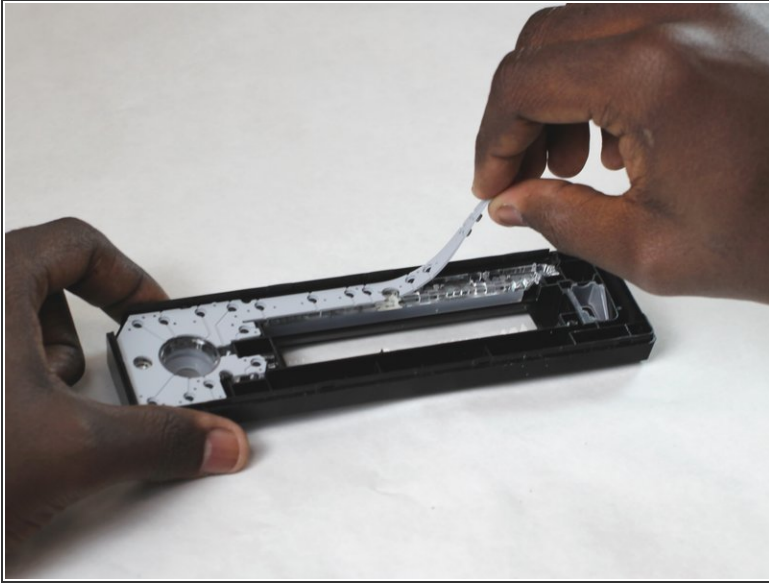

- Remove the gray rubber piece by pulling it upwards and away from the plastic housing.
- Use the pointed end of a spudger to pry out the buttons.

To reassemble your device, follow these instructions in reverse order.