



# Garmin Vivoactive HR Display Replacement

This guide shows how to replace the touch screen display of a Garmin Vivoactive HR smartwatch.

Written By: Chris Corry



---

## INTRODUCTION

This guide uses the iOpener and black spudger to remove the broken screen from the device, allowing for replacement. Screen replacement will compromise waterproof integrity.


---



### TOOLS:


- [Spudger](#) (1)
  - [iOpener](#) (1)
-

## Step 1 — Display

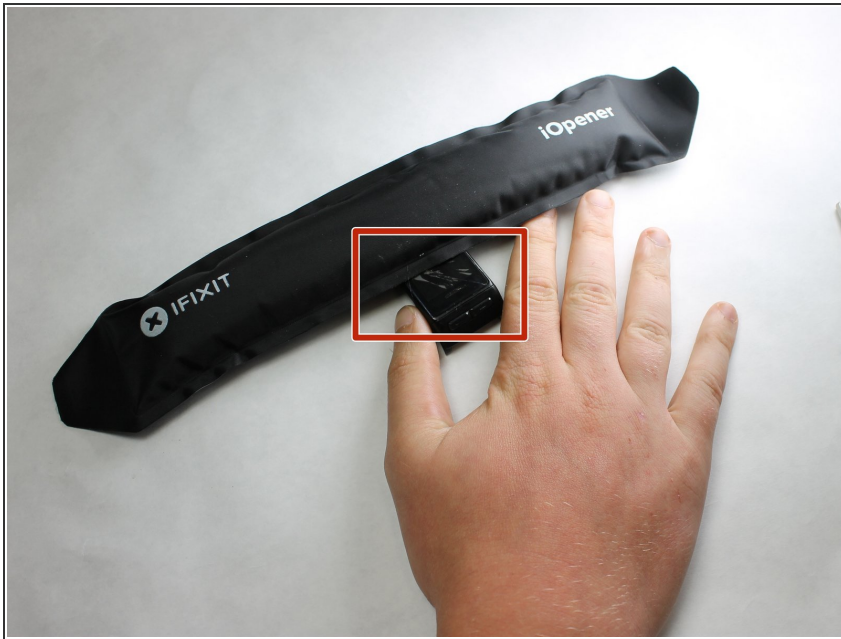

- Apply the Heated iOpener to the display for 30 seconds to soften the adhesive..


## Step 2

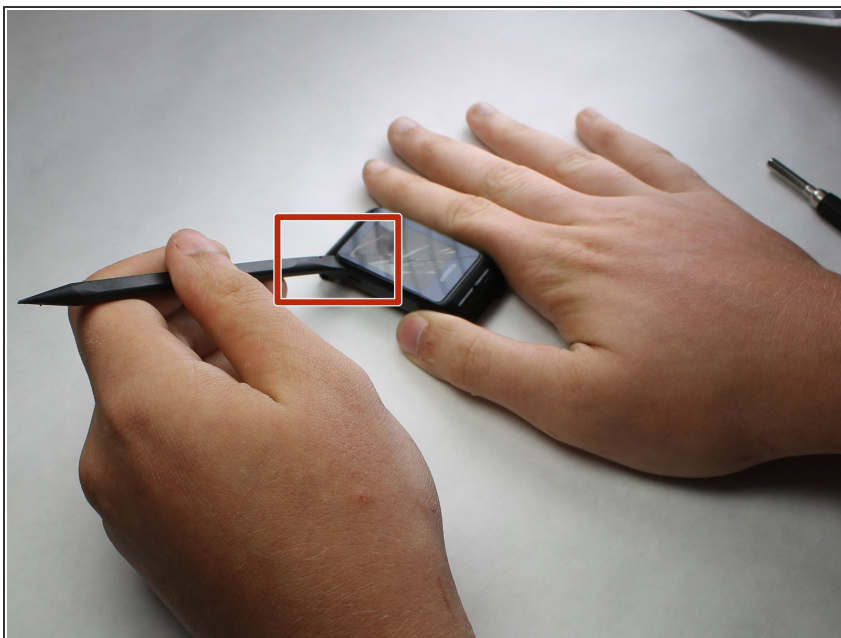

- Insert a spudger between the display and watch body.
- Pry upwards and work the spudger around the perimeter of the display to free it from the body.



⚠ The display is still attached with ribbon cables so don't remove completely.

### Step 3

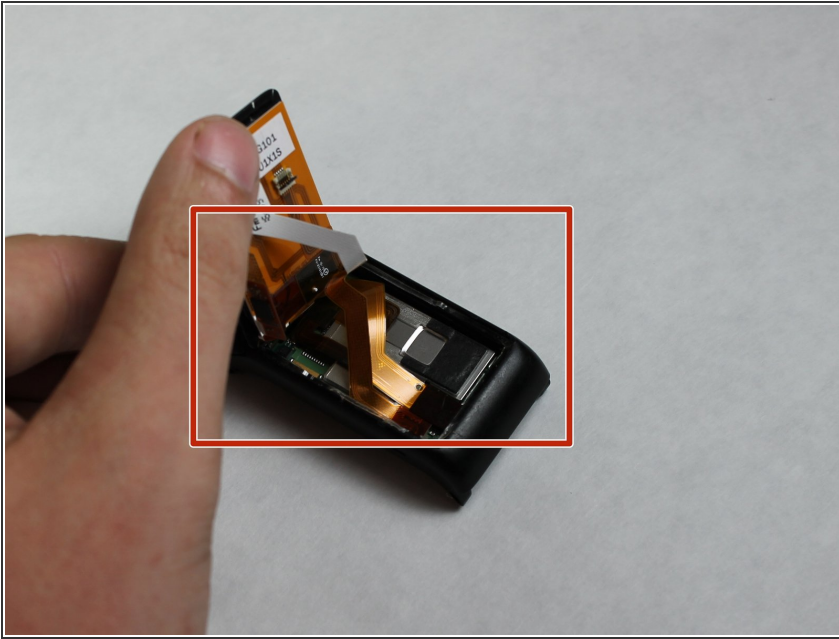

- Lift the touchscreen to expose ribbon cables that connect it to the main circuit board.

### Step 4

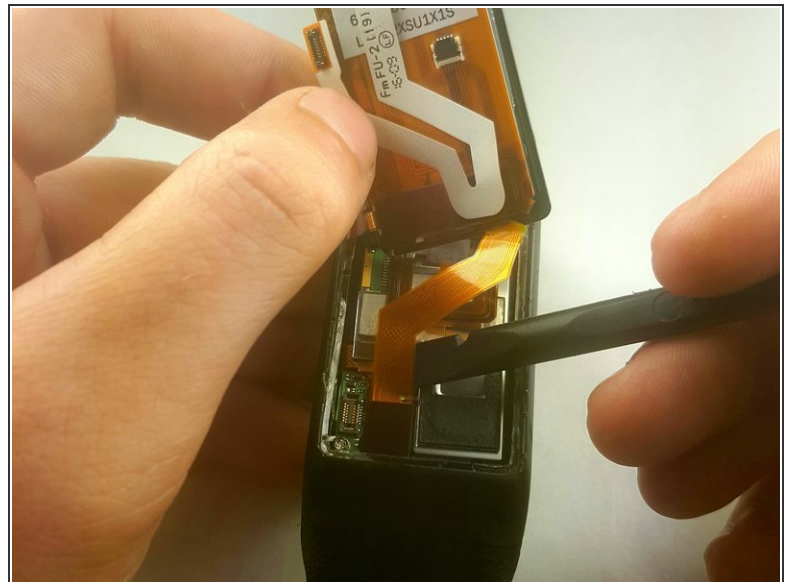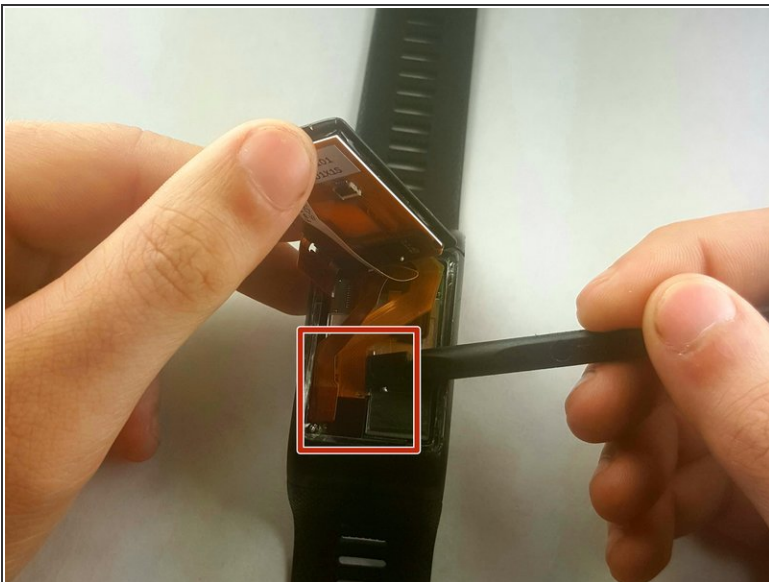

- Use the flat end of a spudger to disconnect the display cable press connectors from the motherboard.

To reassemble your device, follow these instructions in reverse order.

This document was generated on 2020-11-28 06:51:31 AM (MST).

