




Ematic FunTab 3 Camera Replacement

Replace your cracked, damaged or hazy camera in your FunTab 3.

Written By: Amanda Davis

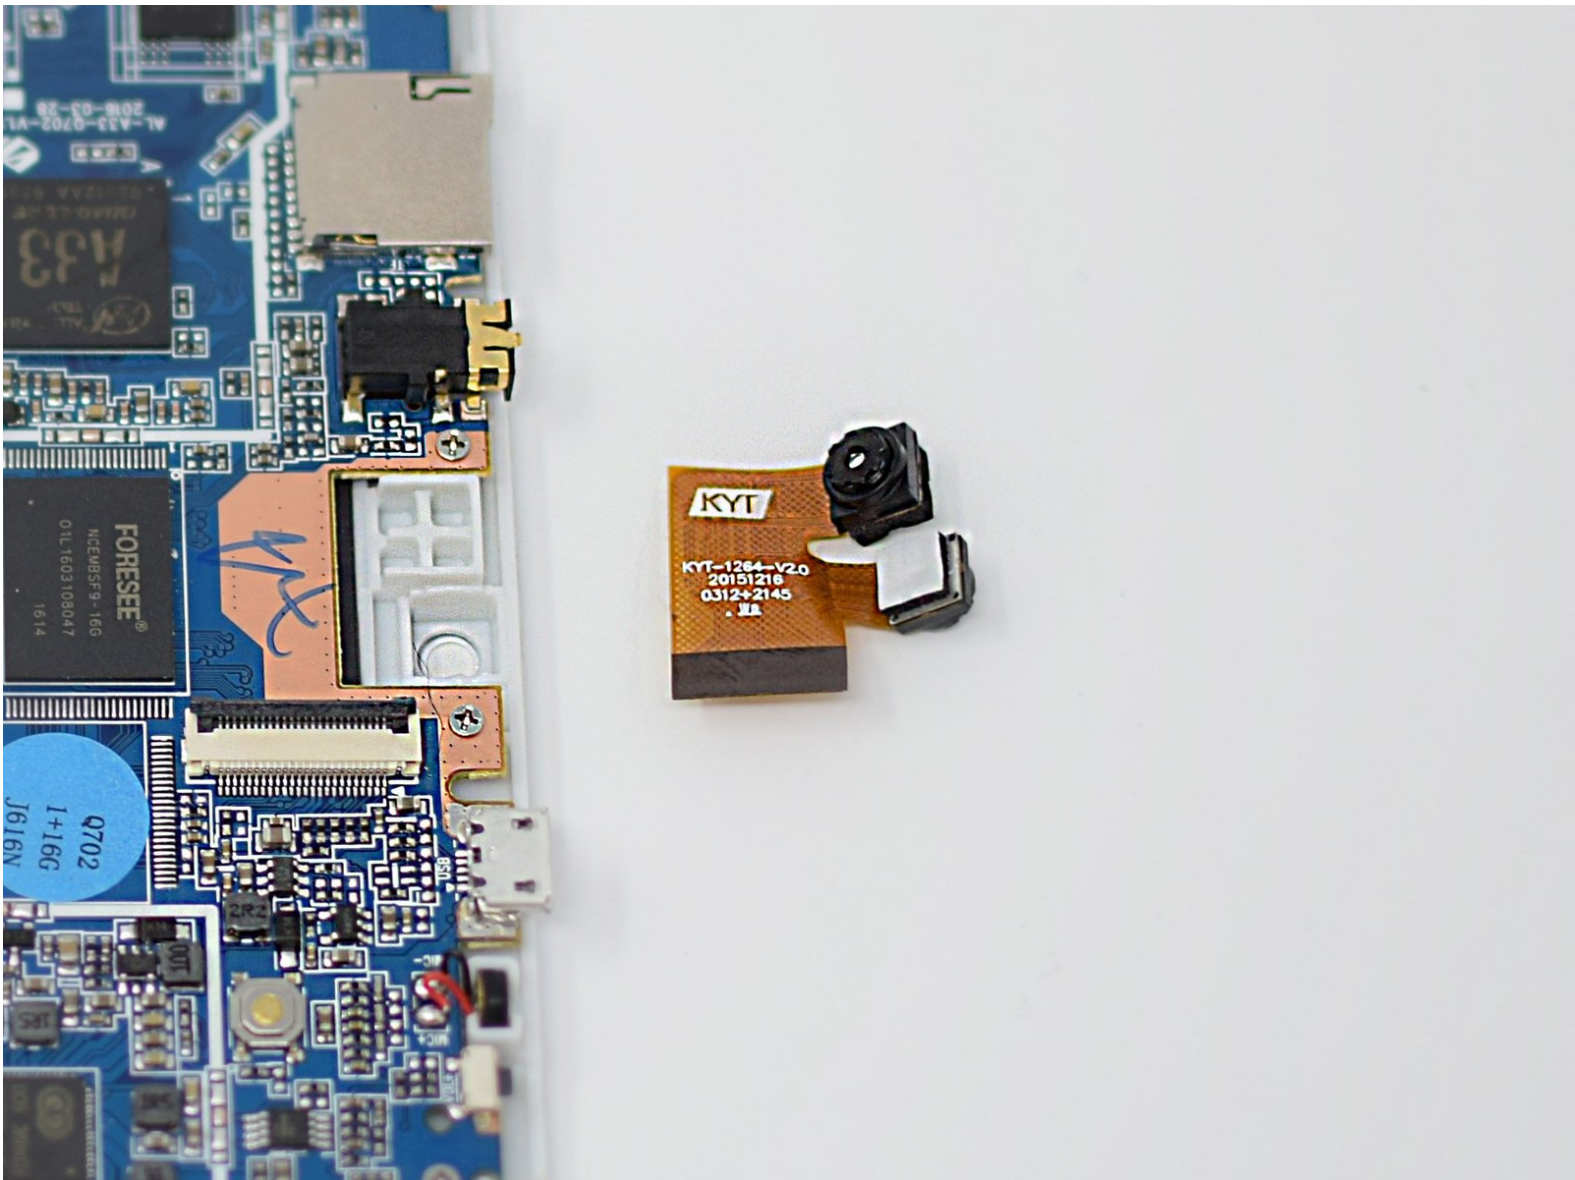

INTRODUCTION

If your photos are hazy, pixelated, distorted or spotty, then this guide will show how to fix this problem by replacing the front-facing and the rear-facing camera.



TOOLS:

- [iFixit Opening Tools](#) (1)
-

Step 1 — Back Panel



- ⚠ Turn off the device before starting
- ⚠ To prevent damage, open the device on the side without the buttons.



- Insert the hooked end of the plastic opening tool in the gap between the screen and the back panel on the edge of the device.
- Slide the plastic opening tool down the long side of the device.
- Insert tool again and slide it down the long side of the case a second time.

Step 2




- Pull the back panel away from the screen.

Step 3 — Camera

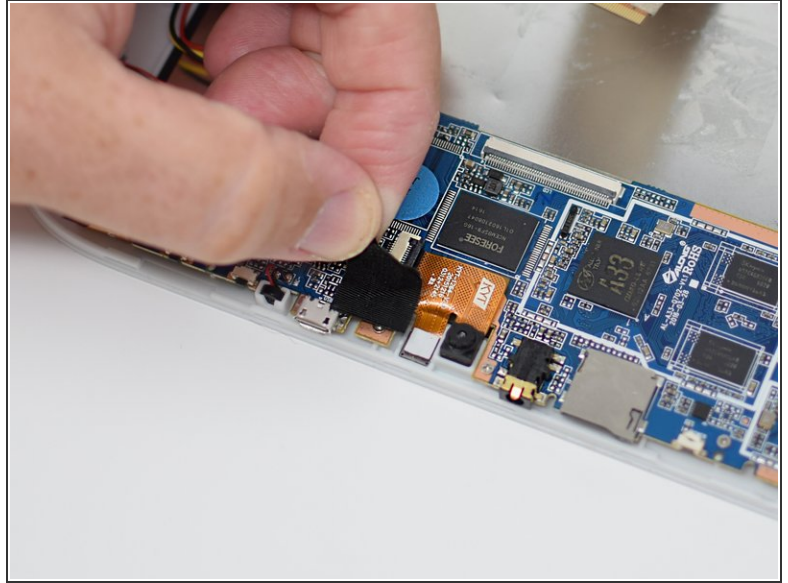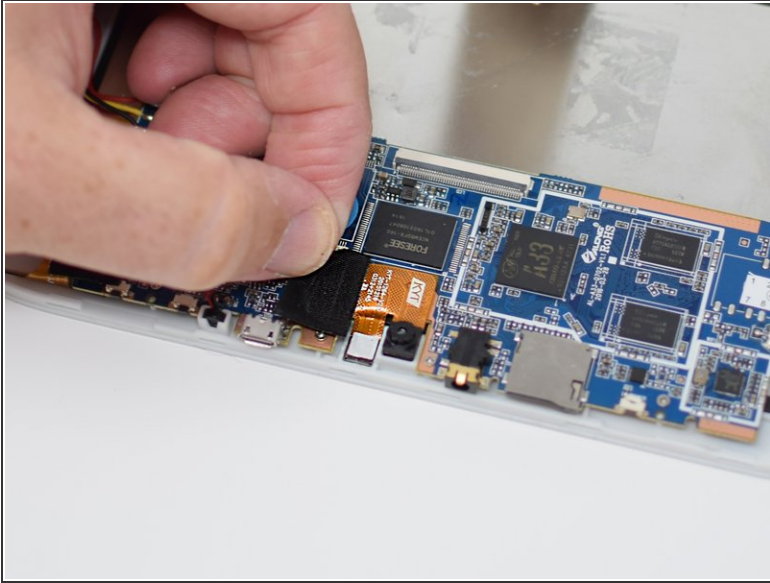


- Remove the black tape to reveal the wire ribbon connector.

Step 4

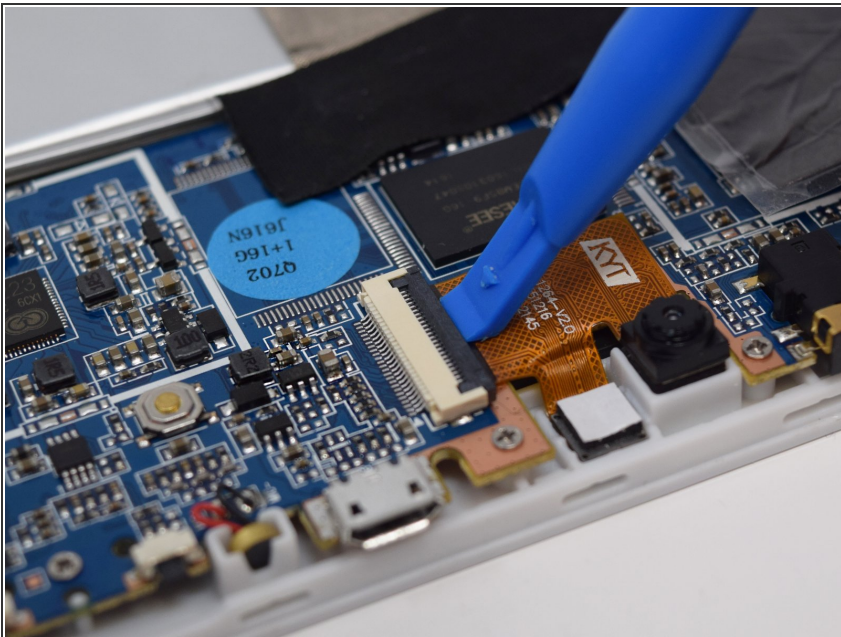

- Use the plastic opening tool to flip up the black retaining tab.

Step 5

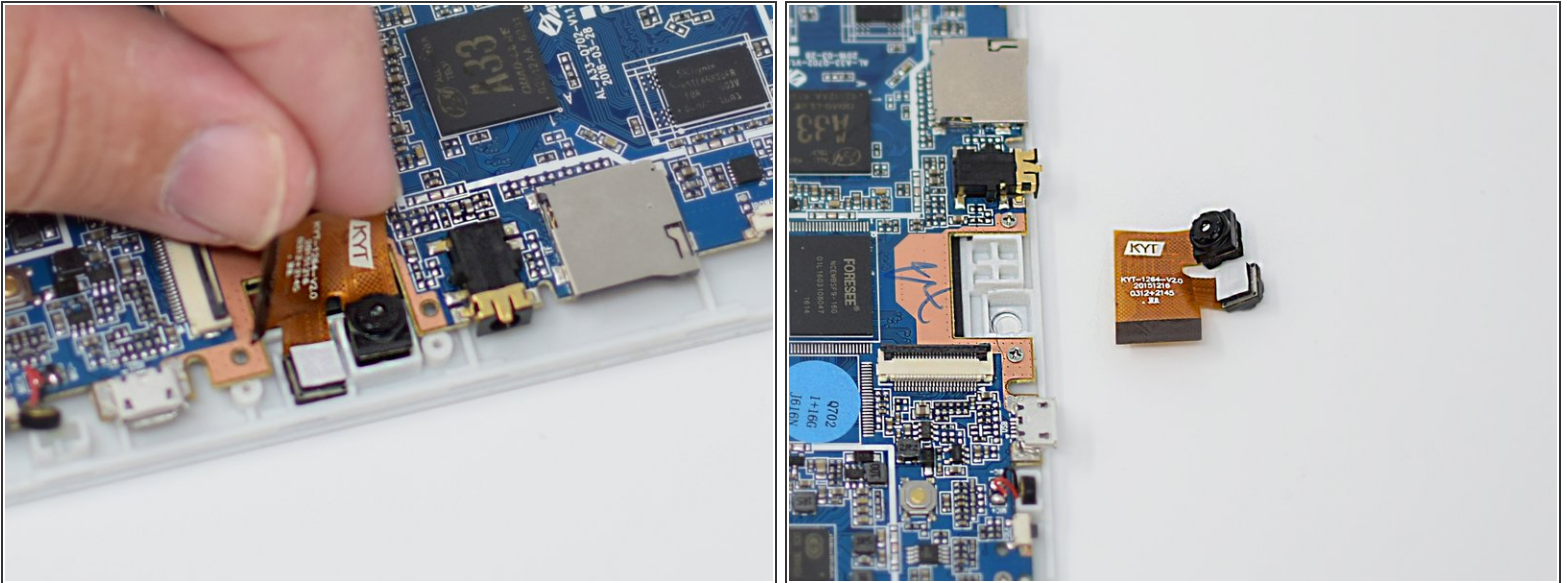

- Pull out the wire ribbon connected to the camera.
- ⓘ The camera is held in place by glue, so extra force may be required.
- Remove the camera from the device.
- ☑ Close the black ribbon retaining tabs once ribbons are inserted during reassembly.

To reassemble your device, follow these instructions in reverse order.