



Acer Aspire 5534-1146 Battery Replacement

Replacing the battery on Acer Aspire 5534-1146 laptop.

Written By: Eric Weaver



INTRODUCTION

Battery replacement is a simple replacement, it can be successfully done in 5 minutes. Before beginning the replacement, it is important to have unplugged the power cord.

TOOLS:

- [Fingers](#) (1)
-

Step 1 — Battery



- Make sure your device is unplugged from the power source . Gently turn it over, and lay it on a flat on its face.

Step 2



- This latch locks your battery in place, it should always be locked with the exception of replacement. Slide it horizontally to the unlock position.
- ⓘ *Do not break this latch, otherwise your battery will not hold in place.*

Step 3



- Locate the latch that ejects the battery (top right corner) and push it to the left, so the battery can come out.
- ⓘ The battery will pull out once the latch is positioned to the left.
- ★ You DO NOT need to push on the ejecting latch when replacing the new battery, it will snap into place itself.

Step 4



- Push the battery forward and it will slide out, it should come out with ease. There should be a label with the part number.

To reassemble your device, follow these instructions in reverse order.