



# Pioneer FH-X730BS Volume Knob Replacement

How to replace the volume knob on the Pioneer FH-X730BS.


Written By: Cody Pesta



## INTRODUCTION

A volume knob can become unusable in the event if the plastic breaks. This guide will show you how to replace the volume knob for the Pioneer FH-X730BS.

## Step 1 — Volume Knob

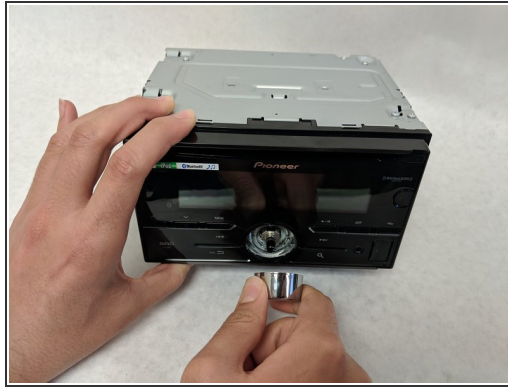

- Remove the volume knob by pulling it away from the face of the radio receiver.

To reassemble your device, follow these instructions in reverse order.