



Coleman Rechargeable Fluorescent Twin Tube Battery Replacement

Battery removal for the Coleman Rechargeable Fluorescent Twin Tube Lantern.

Written By: Sean



INTRODUCTION

Power not reaching your motherboard? Does the lantern not illuminate even though its been charged? Check out this guide on how to remove and replace the battery!



TOOLS:


- [Phillips #0 Screwdriver](#) (1)



PARTS:


- [Battery 5342-1001](#) (1)

Step 1 — Battery

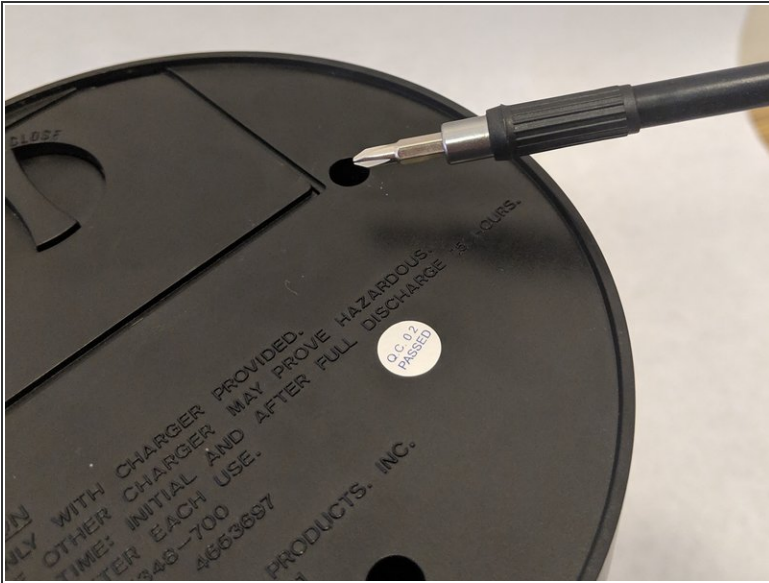


- Carefully turn the lantern upside down.
- Remove the three 1.2 mm Phillips #0 screws from the base of the lantern.

Step 2

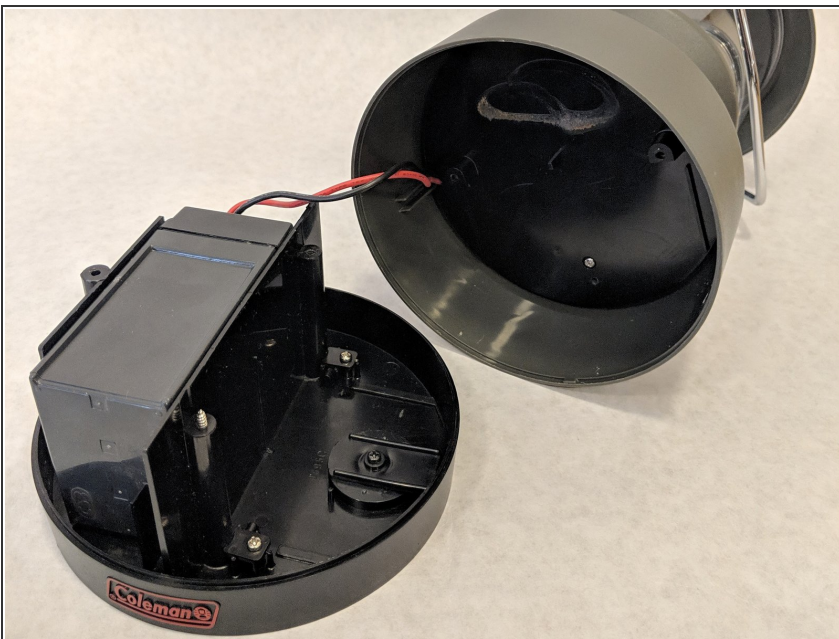




- Carefully pull the bottom of the lantern to remove the base from the device.

Step 3

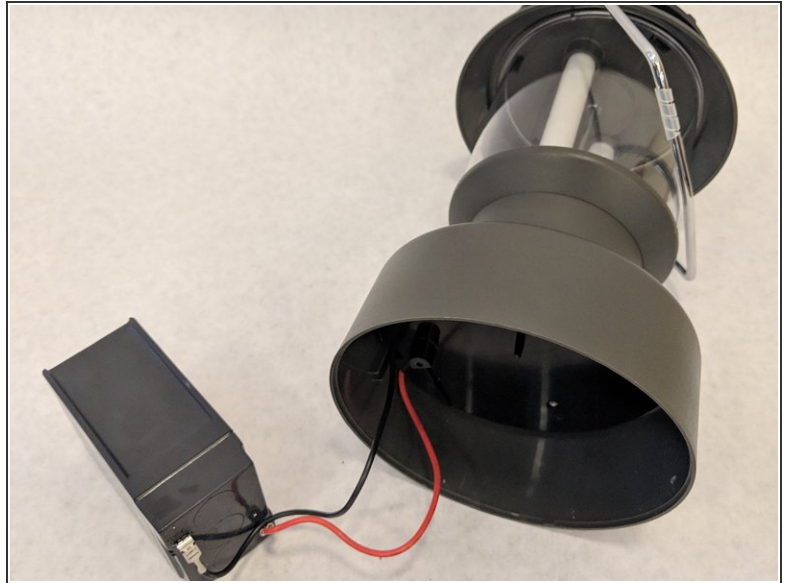

- Gently pull the battery out of the slot and away from the base.
- ⓘ The battery may be held into place by adhesive strips.

Step 4

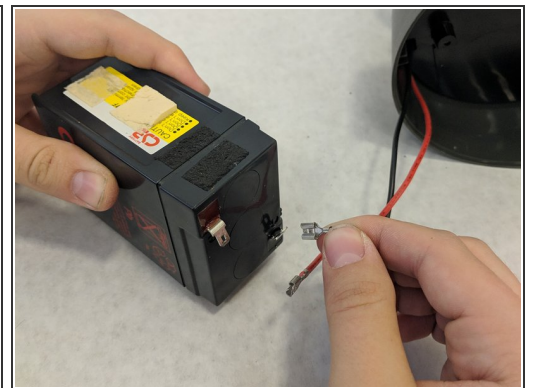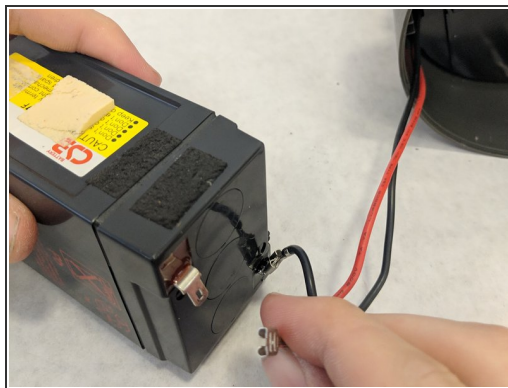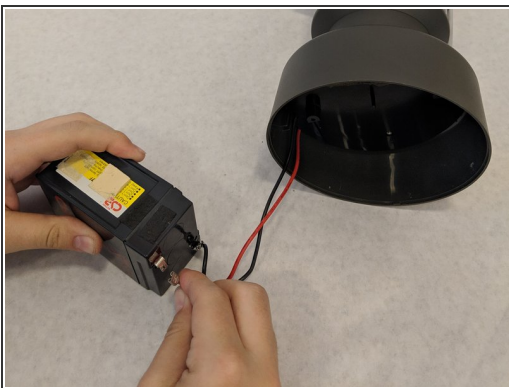

- Carefully detach the negative wire from the battery terminal first.
- Next, detach the positive wire from the battery terminal.

To reassemble your device, follow these instructions in reverse order.