



# Lenovo IdeaPad 110-15ISK Keyboard Replacement

If nothing occurs on the screen when you press...

Written By: Tyler



# INTRODUCTION

If nothing occurs on the screen when you press on the keys, then the keyboard may be faulty. To replace the keyboard, follow the provided guide to fix the faulty keyboard.


## TOOLS:

[iFixit Opening Tool](#) (1)  
[Phillips #1 Screwdriver](#) (1)  
[Spudger](#) (1)

## PARTS:

[5N20L25936 - Lenovo Laptop Keyboard - Genuine](#) (1)


## Step 1 — Keyboard

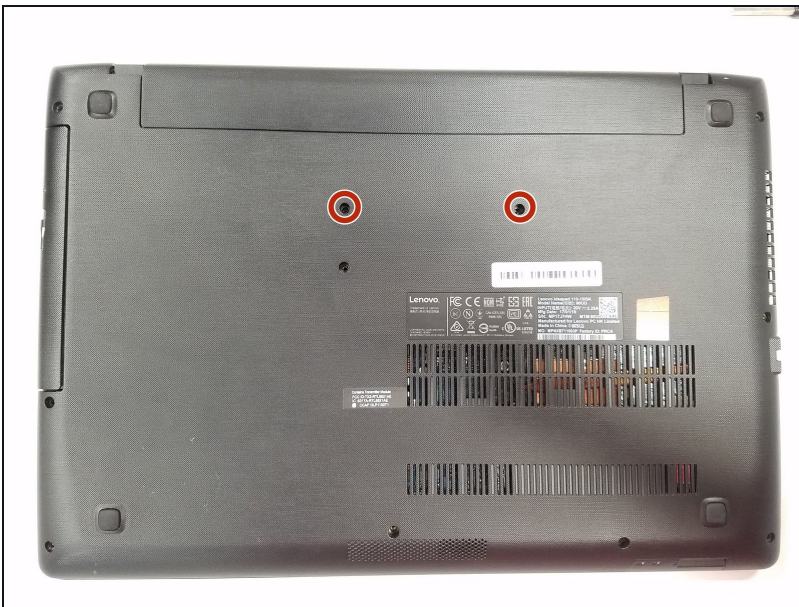

- Flip the IdeaPad bottom side up.
- Using a Phillips #1 screwdriver, remove the two 6.0mm screws on the back panel, that hold the keyboard.
- Flip the computer back to top facing.




## Step 2

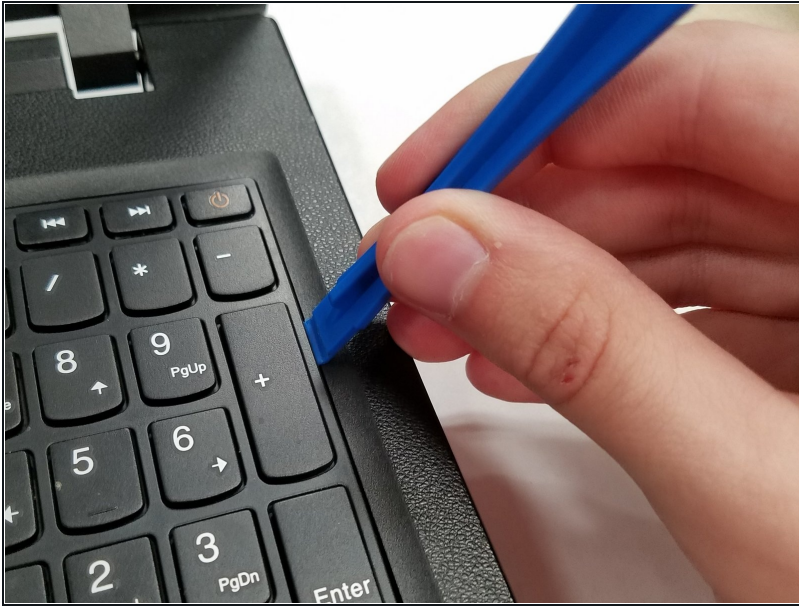

- Open the lid.
- Use the plastic opening tool to pry the keyboard up and away from the bottom assembly.

## Step 3

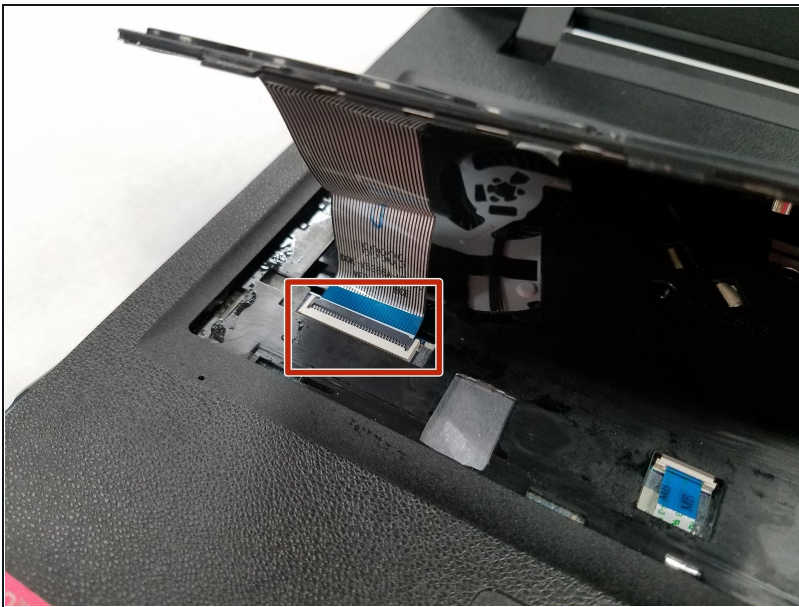

- Next disconnect the keyboard cable by using the tip of the spudger or your finger to lightly push out the ribbon from the contact port.
- Completely remove the keyboard from the bottom assembly.

## Step 4



- Unlock the ZIF connector before pulling the cable out

---

To reassemble your device, follow these instructions in reverse order.