




Supersonic SC-777BT Touchscreen Sensor Replacement

How to replace a Supersonic SC-777BT touchscreen sensor.

Written By: Payton Butler

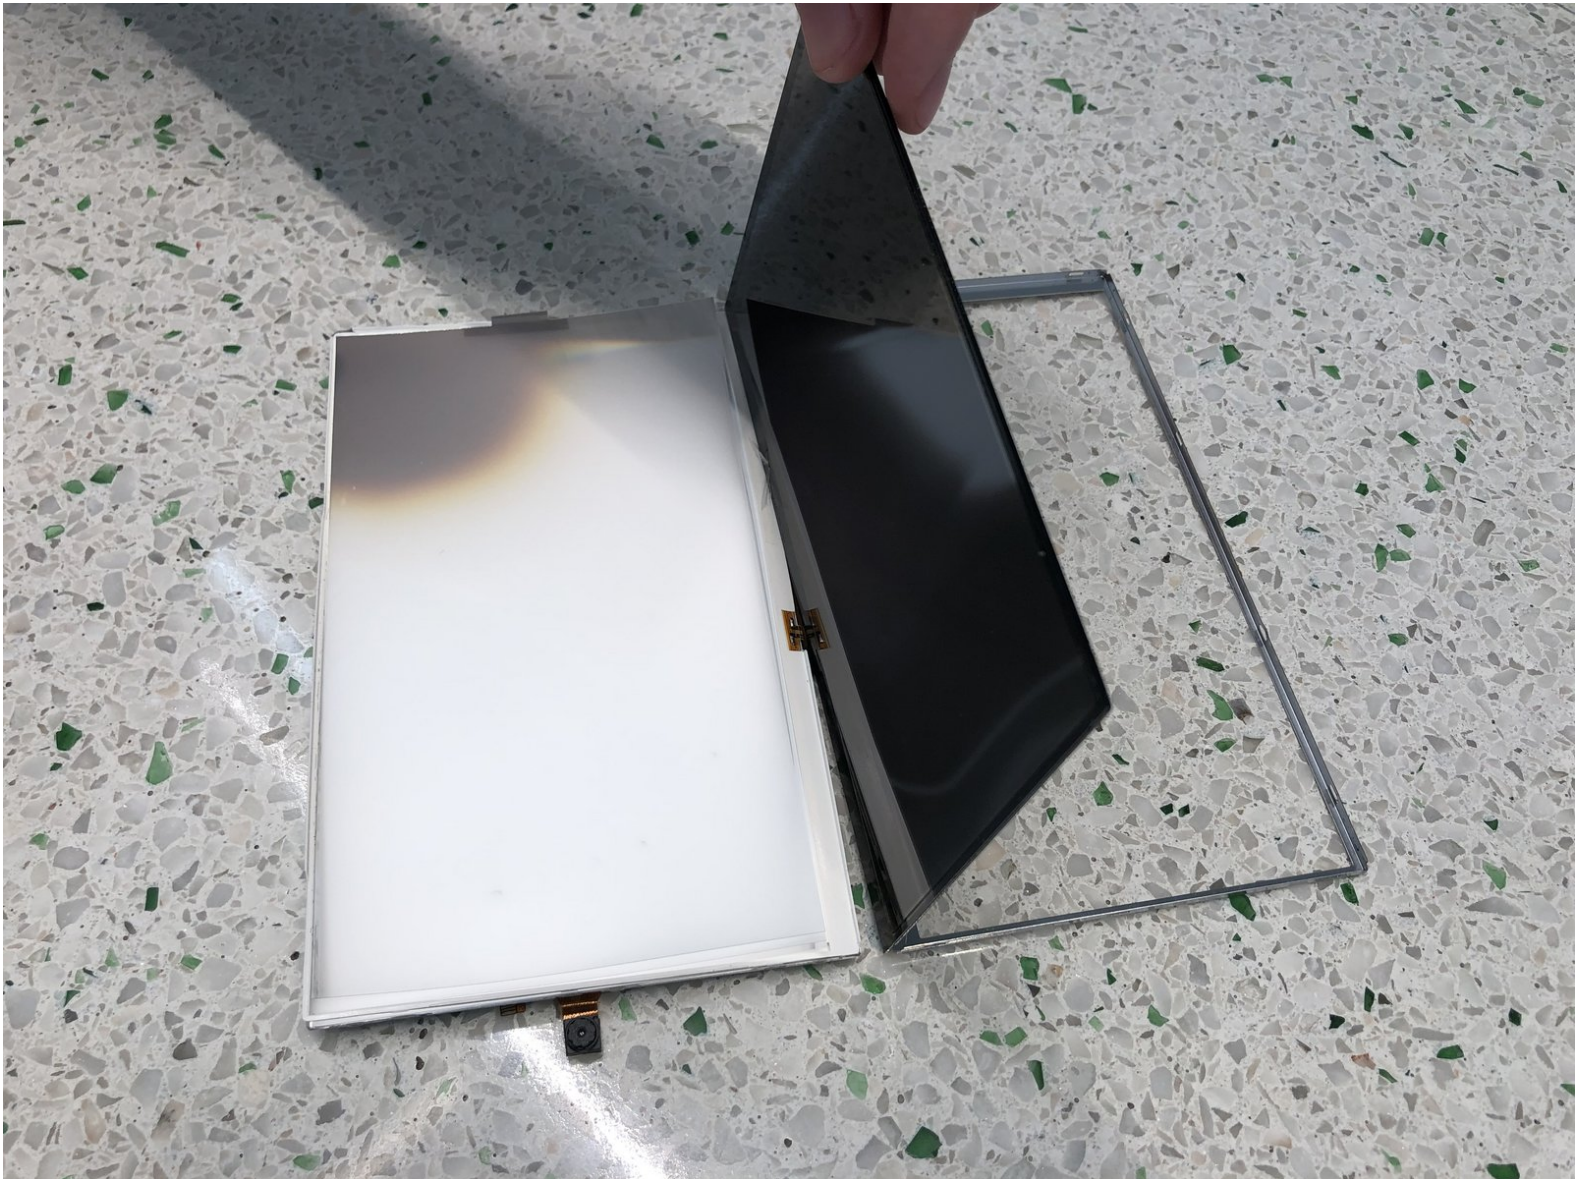

INTRODUCTION

If your touchscreen does not respond to a finger or stylus, you need to replace the touchscreen sensor. As a prerequisite, use the motherboard replacement guide to reveal the touchscreen after opening the back.



TOOLS:


- [Spudger](#) (1)
 - [iFixit Opening Tools](#) (1)
 - [Tweezers](#) (1)
-

Step 1 — Touchscreen Sensor






- Pull the yellow ribbon cable to dislodge the screen from the plastic screen cover.

Step 2

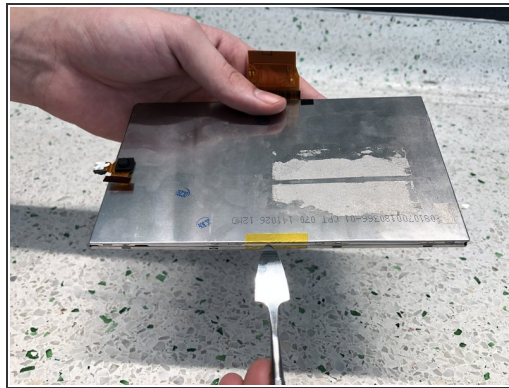

- Tear the yellow tape in order to make the front and back covers free to disassemble.

Step 3

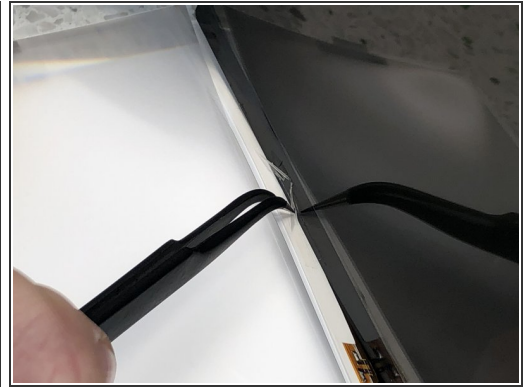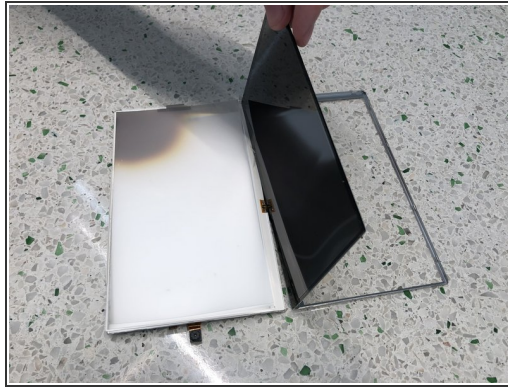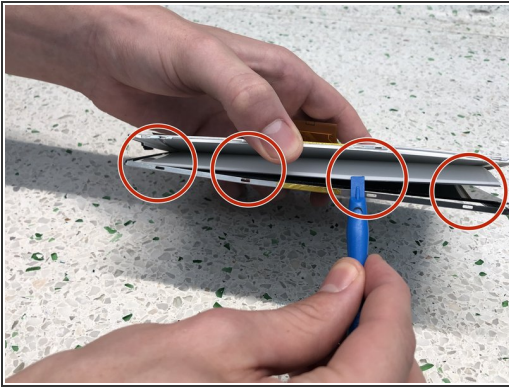

- Separate the two covers.
- Put aside the white sheets.
 - ⓘ Do not put the white sheets on any surface. Only keep them in the covers.
- Use the tweezers to remove the sting glue and separate the glue from the sensor.

To reassemble your device, follow these instructions in reverse order.