




Toshiba Satellite C55-A5286 Optical Drive Replacement

How to replace a Toshiba Satellite C55-A5286 optical drive.

Written By: Nicole Zellers

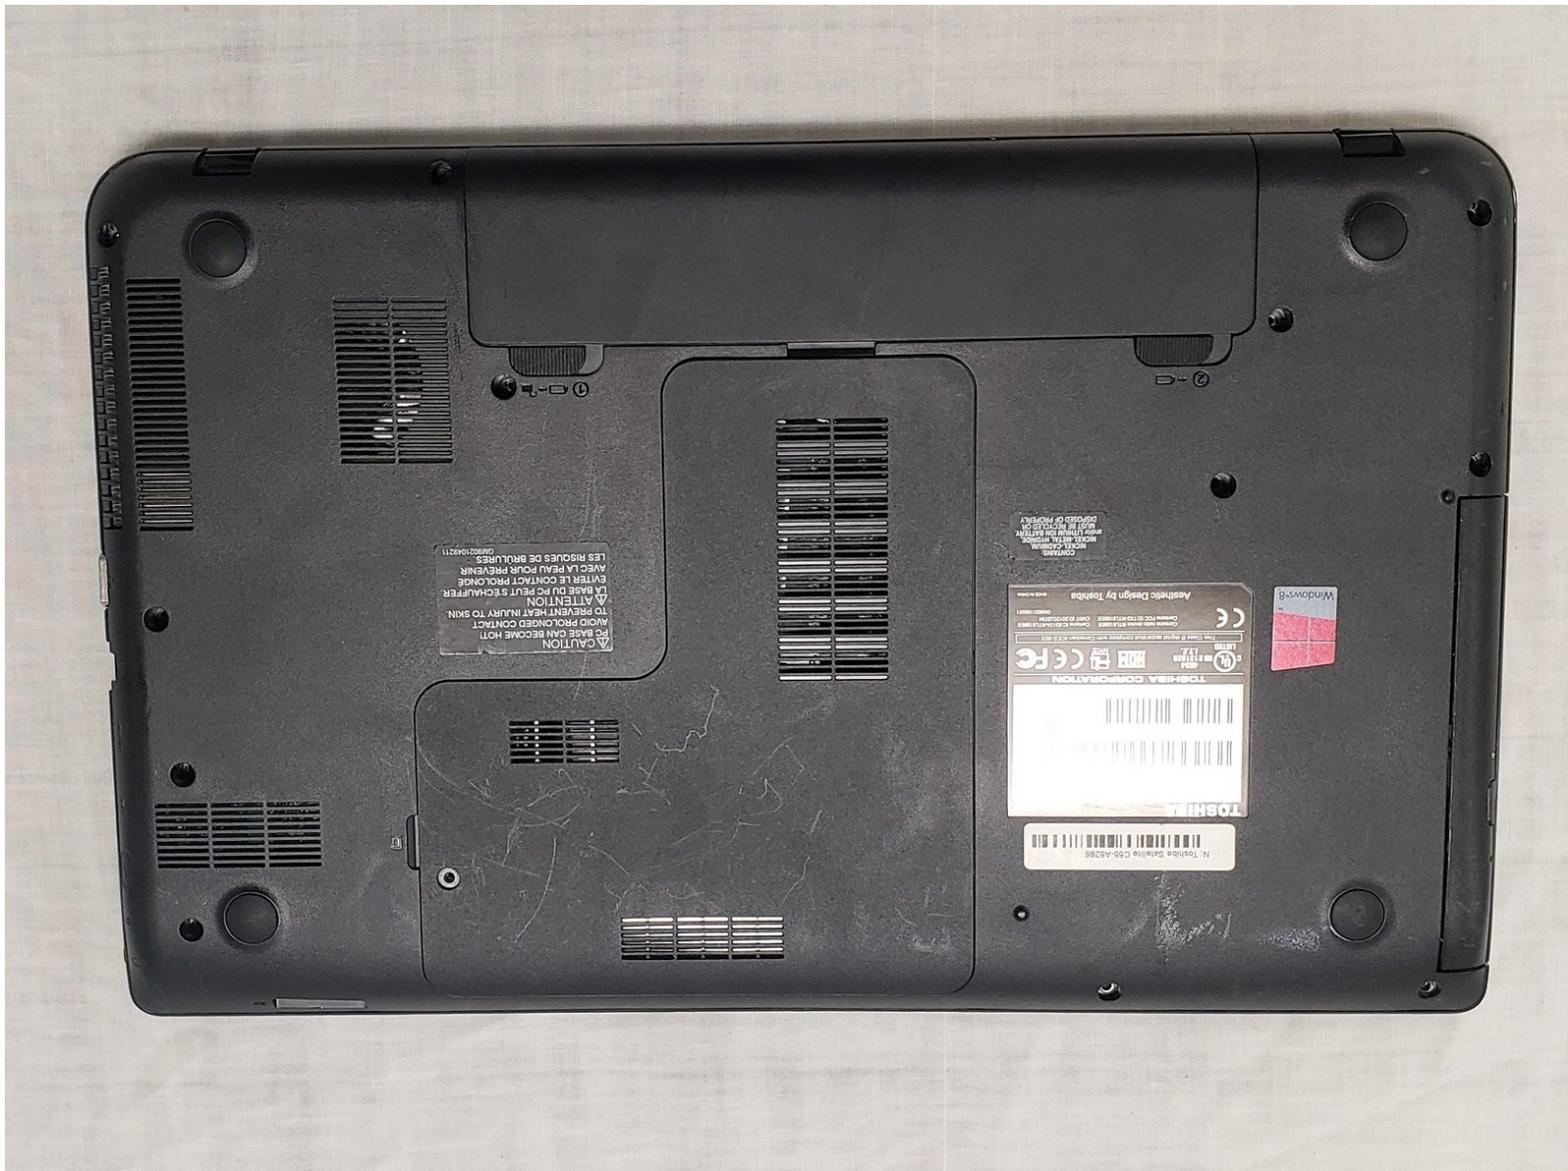

INTRODUCTION

This guide will show you how to remove or replace the optical disc drive of the Toshiba Satellite C55-A5286 laptop. A Phillips screwdriver of head size PH0 is required for this guide.



TOOLS:

- [Phillips #0 Screwdriver](#) (1)



PARTS:


- [Optical Disk Drive](#) (1)

Step 1 — Optical Drive




⚠ Unplug the AC adapter and all other auxiliary components from the laptop

Step 2

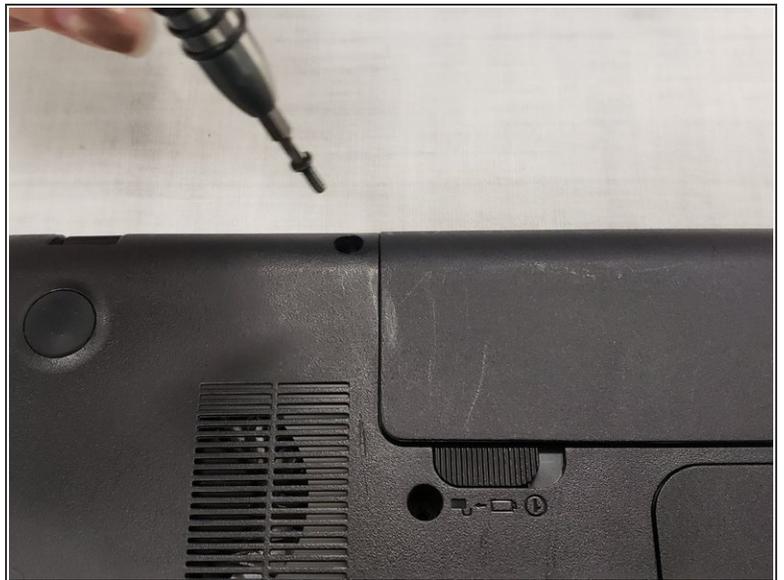


- Unscrew the only screw (5 mm) that is holding on the removable back panel and remove the back panel.

Step 3

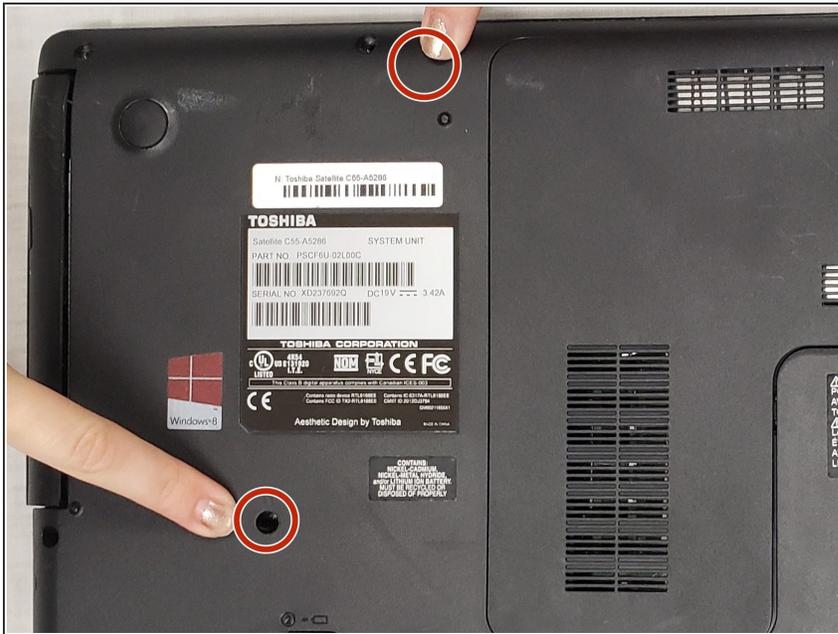


- Remove the two 5-mm screws near the disk drive on the back panel. These two screws are above and below the manufacturer's sticker.

Step 4

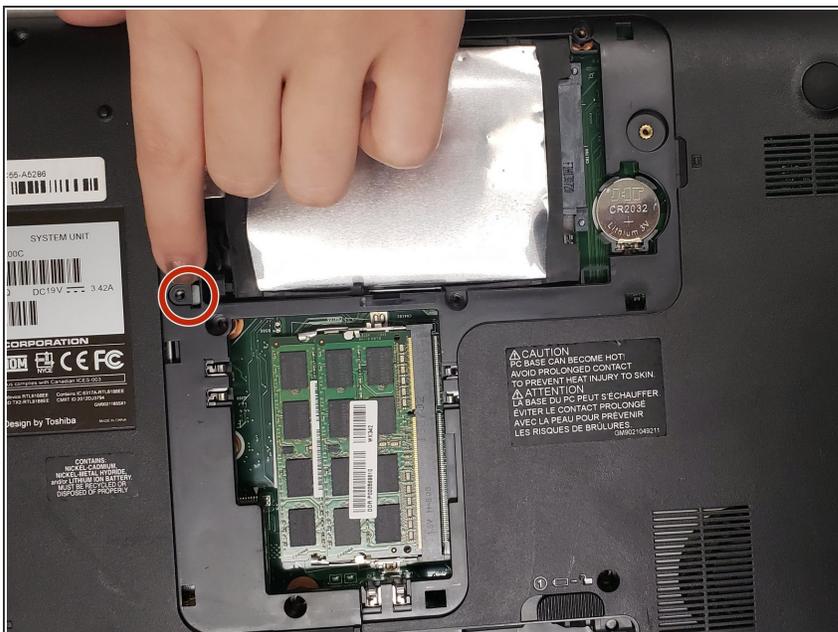

- Under the back panel, remove the 4-mm screw holding the disk drive in place.

Step 5

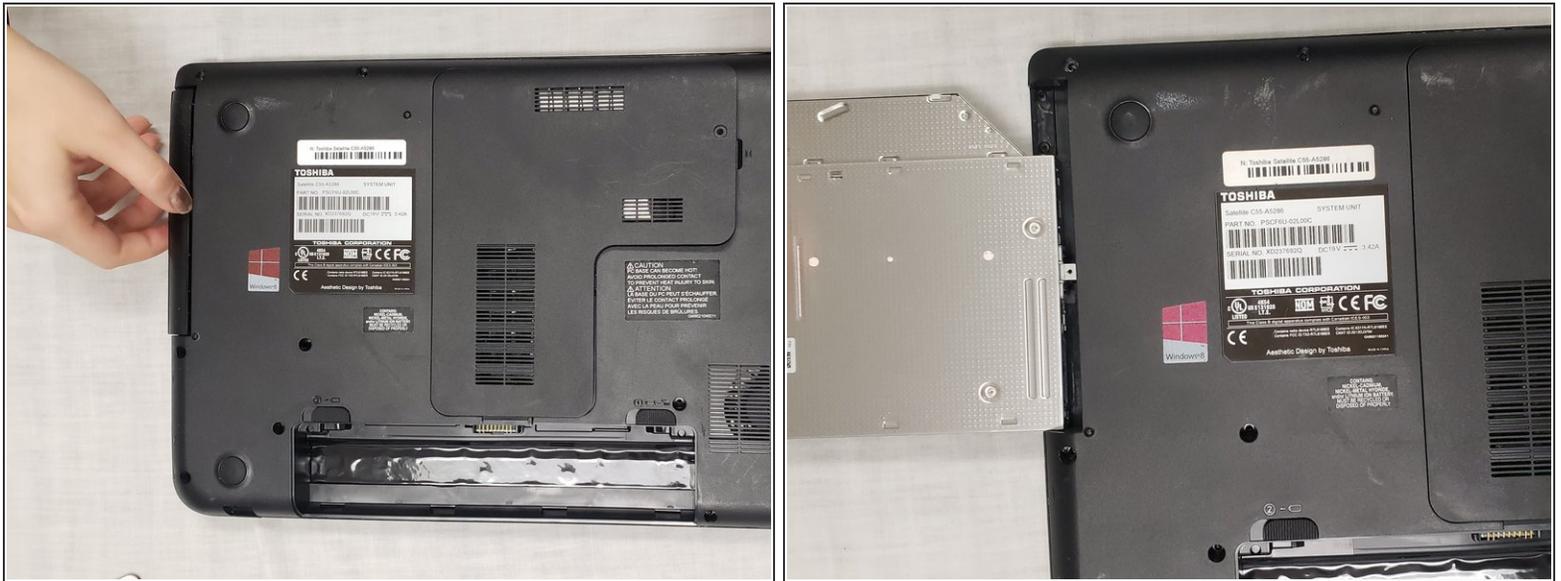

- Carefully slide the optical drive out of its place in the laptop.

To reassemble your device, follow these instructions in reverse order.