


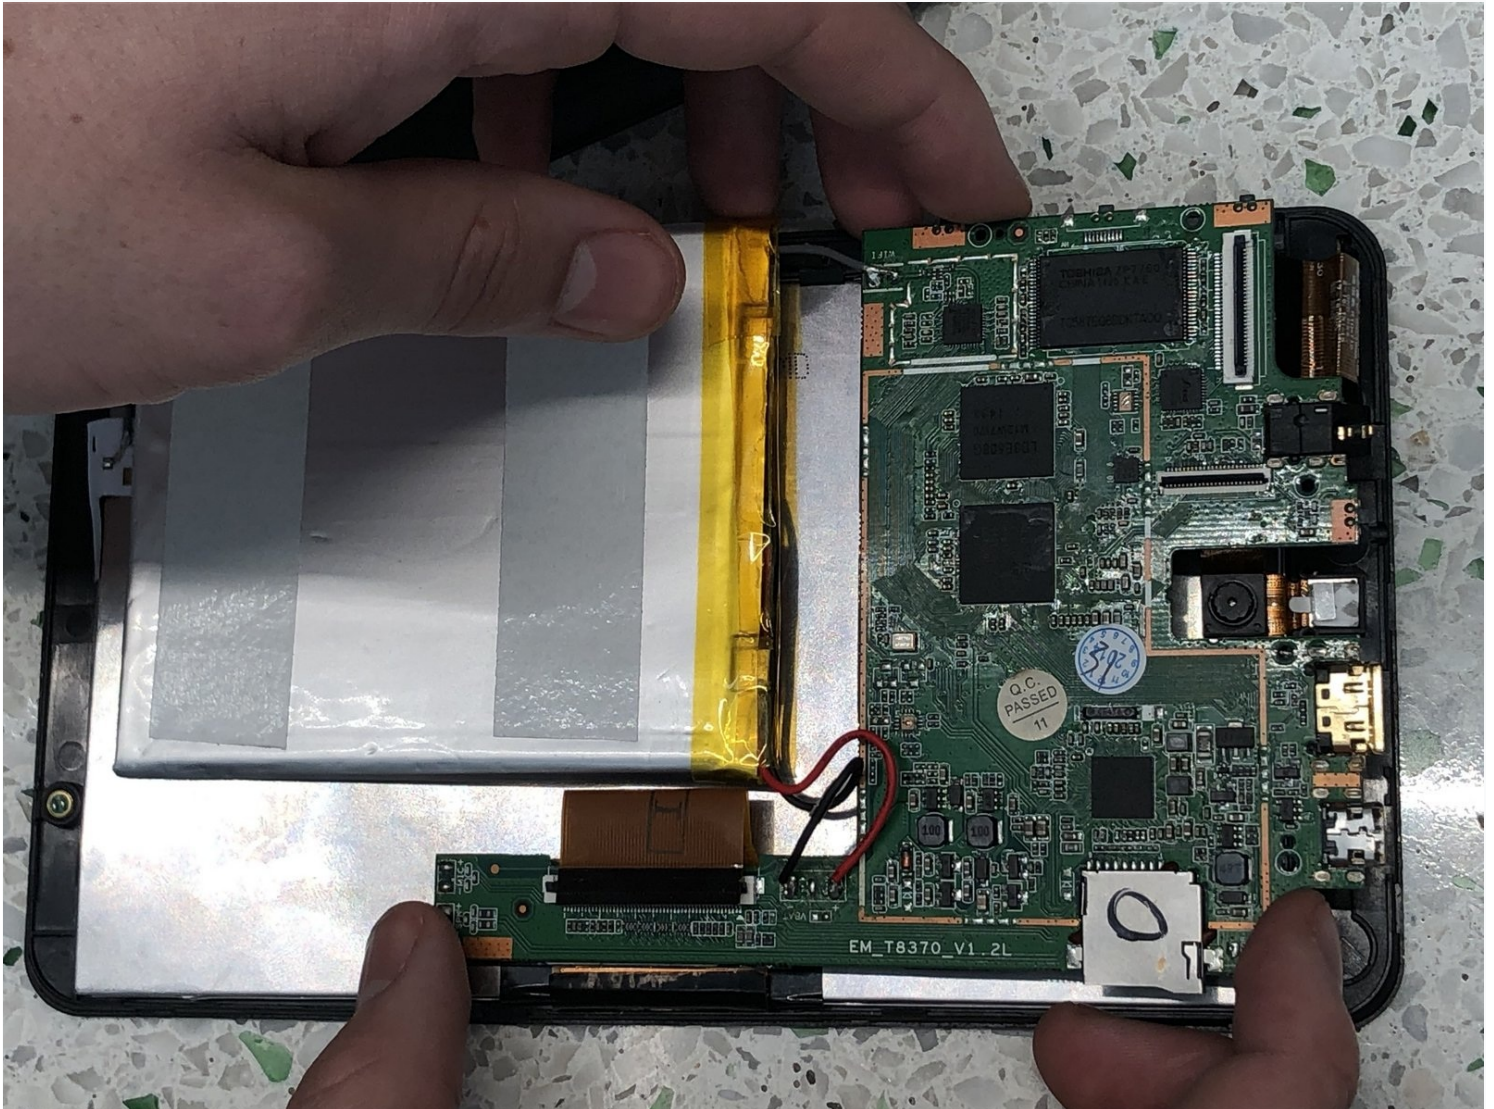

Supersonic SC-777BT Motherboard Replacement

If applications, device accessories or buttons...

Written By: Maiya Webster



INTRODUCTION

If applications, device accessories or buttons are not responsive, your motherboard needs to be replaced.

TOOLS:

[iFixit Opening Tool](#) (1)

[Tweezers](#) (1)



[Phillips #000 Screwdriver](#) (1)

Step 1 — Motherboard






- Pry open backing of the tablet using an iFixit opening tool.

Step 2

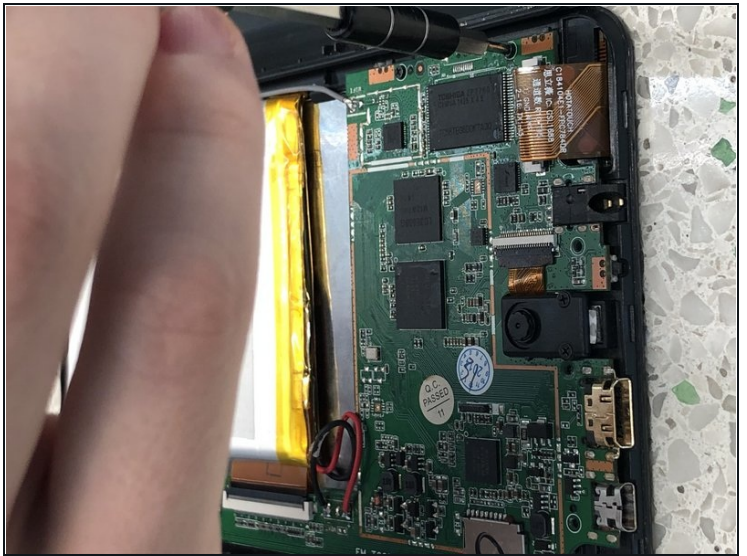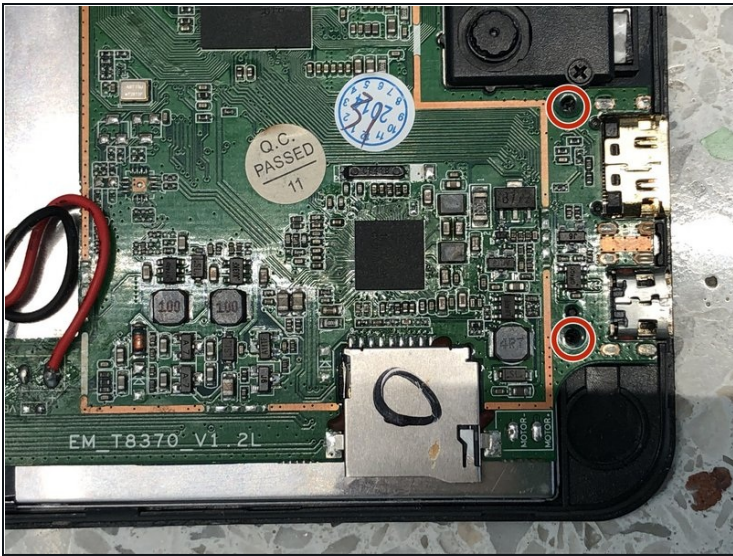


- Use a PH000 screwdriver to unscrew all four motherboard screws.

Step 3

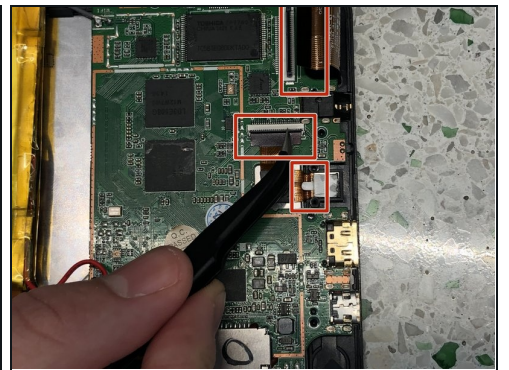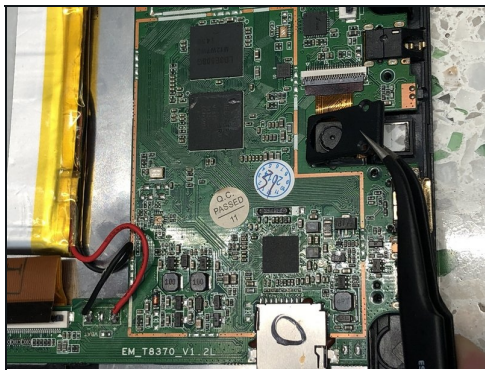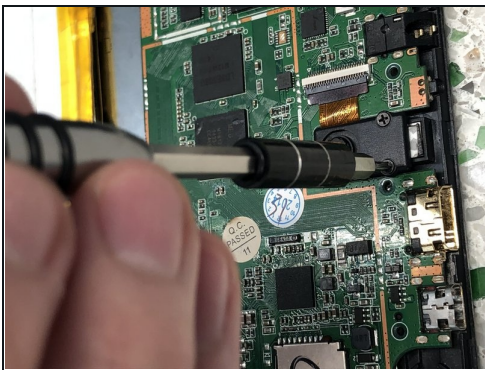


- Unscrew the holder of the camera and gently remove using [tweezers](#).
- Remove the sensors using tweezers.

Step 4

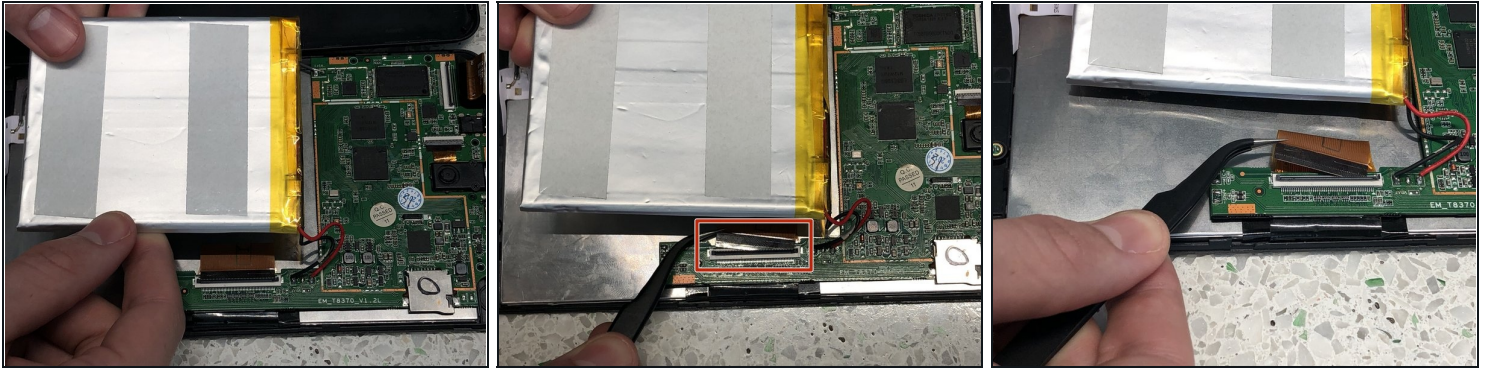

- Detach the battery.
- ① Battery is attached with adhesive; no tools needed to remove.
- Using tweezers, lift and release the ribbon cable that was covered by the battery.

Step 5

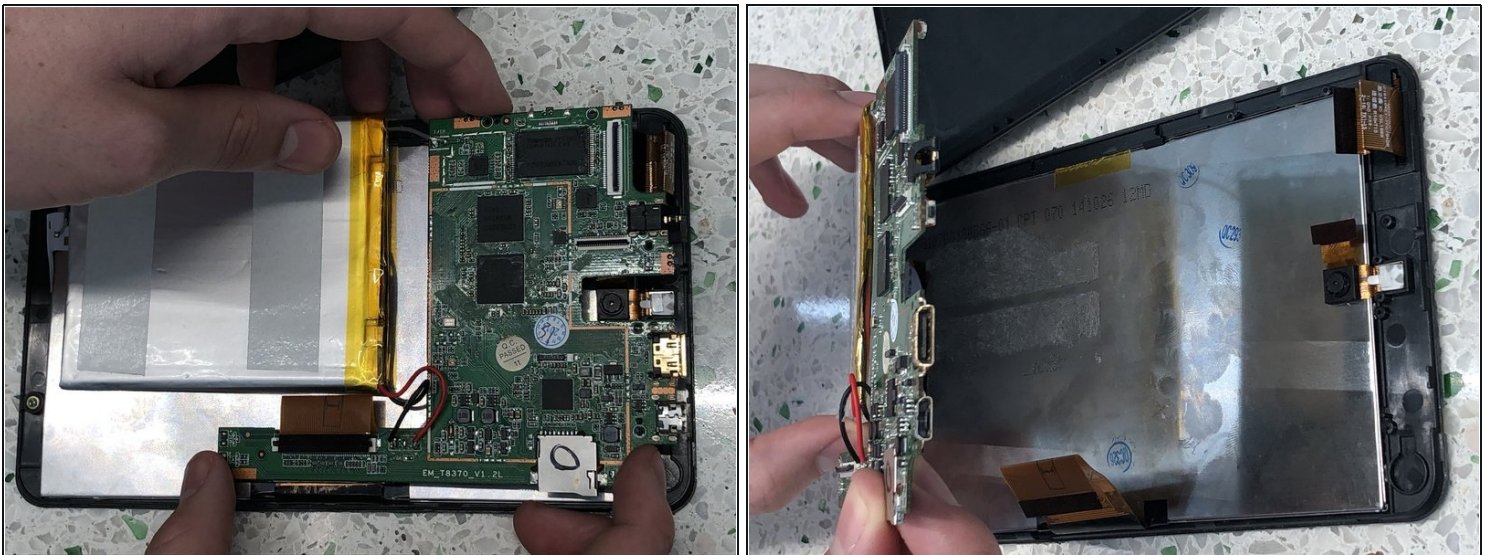

- Carefully remove the motherboard with your hands.

To reassemble your device, follow these instructions in reverse order.