



# Asus A53E-ES92 RAM Card Replacement

How to remove and replace the RAM Card. A screwdriver and new RAM Card will be needed to perform this replacement.

Written By: Robyn Lam



---

## INTRODUCTION

This guide will show you how to remove the RAM on an Asus A53E-ES92.



### TOOLS:

- [Phillips #0 Screwdriver](#) (1)
-

## Step 1 — RAM Card



- Turn laptop over to expose the bottom panel.

## Step 2



- Use the Phillips #0 screwdriver to remove the two screws circled in picture.



## Step 3




- Place fingers on panel as shown below.
- Apply slight force while gently sliding the panel away from the laptop.
- Remove panel.

## Step 4




- Locate RAM card, circled adjacently.

## Step 5

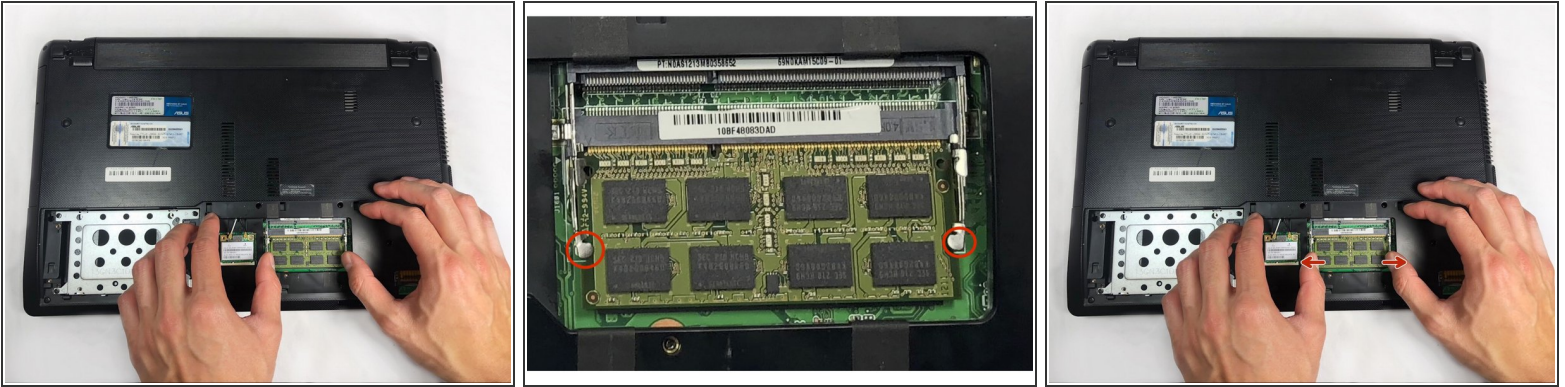

- Place fingers on prongs located adjacent.
- Press on prongs simultaneously.

## Step 6

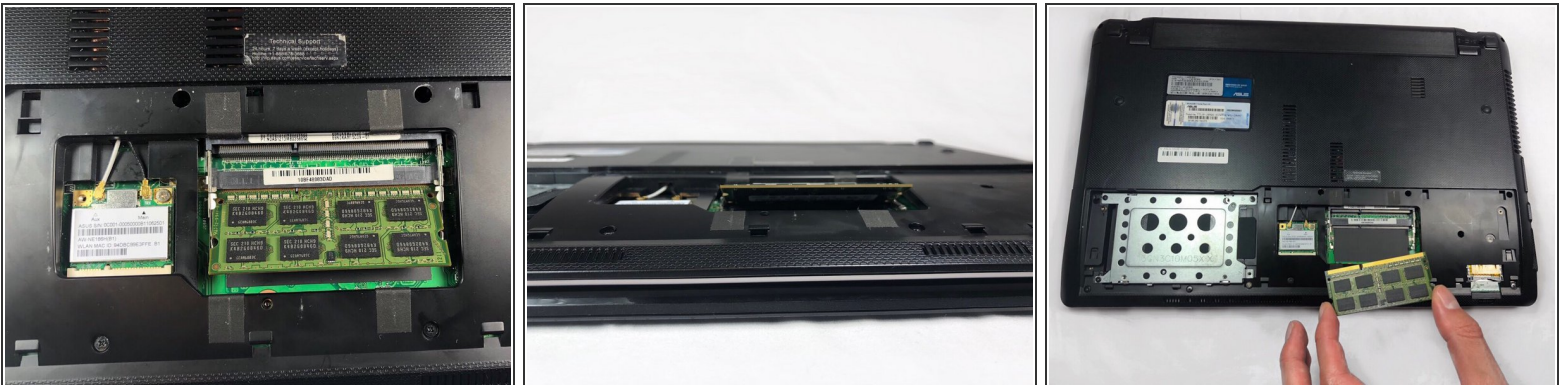

- RAM card should pop out.
- Remove RAM card.

To reassemble your device, follow these instructions in reverse order.