



# NOSTALGIA KPM508 Door Tray Handle Replacement

Replace the gold tray handle if it breaks or you wish to replace it with a different piece.

Written By: Josh Januska



---

## INTRODUCTION

This guide will help the user remove the gold tray handle with a screwdriver if the handle breaks or if you wish to replace it with a different piece. Make sure the machine is unplugged and off before proceeding.

---

### TOOLS:

- [Phillips #1 Screwdriver](#) (1)

## Step 1 — Door Tray Handle



- Unplug the machine and tilt the machine on its side with the pull out tray facing up.

## Step 2



- With the Phillips #1 screwdriver, unscrew and remove the two , 12mm screws on the outside edges of the pull out tray as indicated. If you find difficulty unscrewing, WD-40 should help.

To reassemble your device, follow these instructions in reverse order.

This document was generated on 2020-11-24 02:57:26 AM (MST).

