



Acer TravelMate TMB115-M-C99B Touchpad Replacement

If your laptop's touchpad is unresponsive...

Written By: Tanvi Kharkar



INTRODUCTION

If your laptop's touchpad is unresponsive because of external damage, use this guide to remove and replace your touchpad.

TOOLS:

- [Phillips #0 Screwdriver](#) (1)
 - [iFixit Opening Tool](#) (1)
 - [Magnetic Project Mat](#) (1)
-

Step 1 — Battery



⚠ Turn off your laptop before starting.

- Flip the laptop over so the model stickers face the ceiling.

Step 2





- Remove the thirteen 6mm Phillips screws using the #0 screwdriver.
- Remove the back of the laptop.

Step 3



- Remove the two 7mm Phillips screws from the battery using the #0 screwdriver.

Step 4

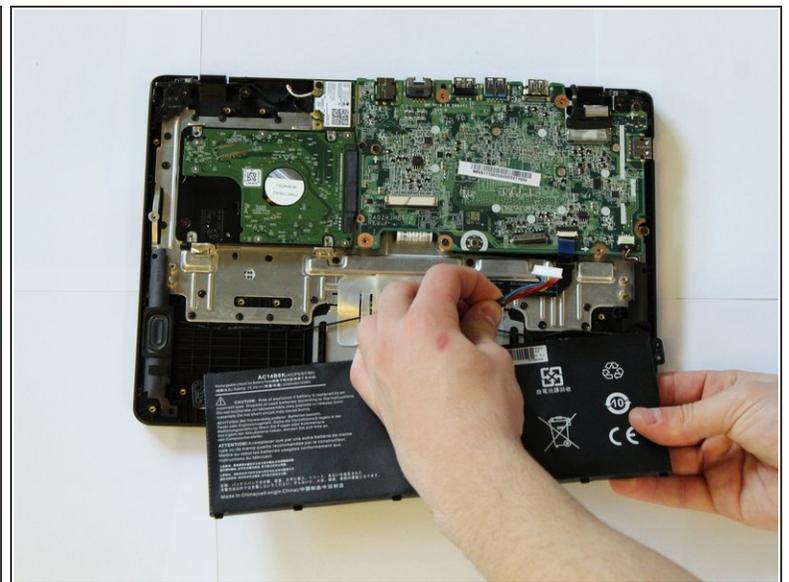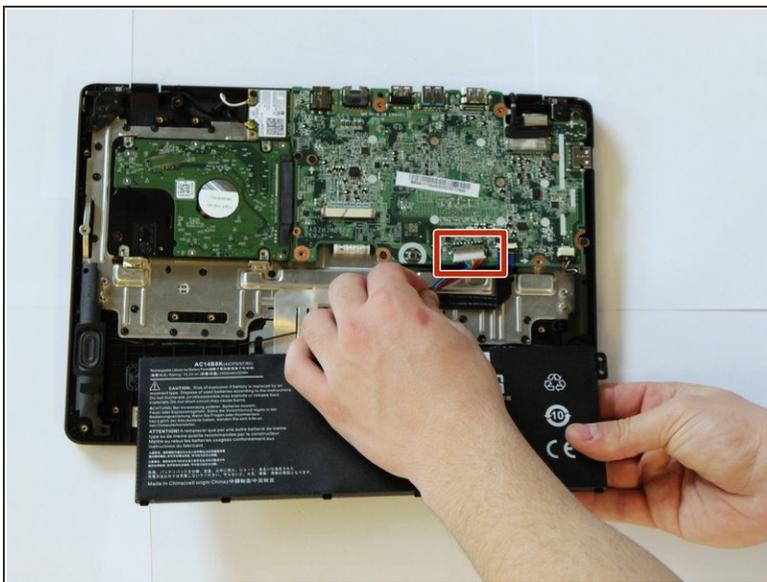


- Unplug the battery from the motherboard.

Step 5 — Hard Drive




- Carefully disconnect the hard drive from the motherboard.

Step 6 — Motherboard

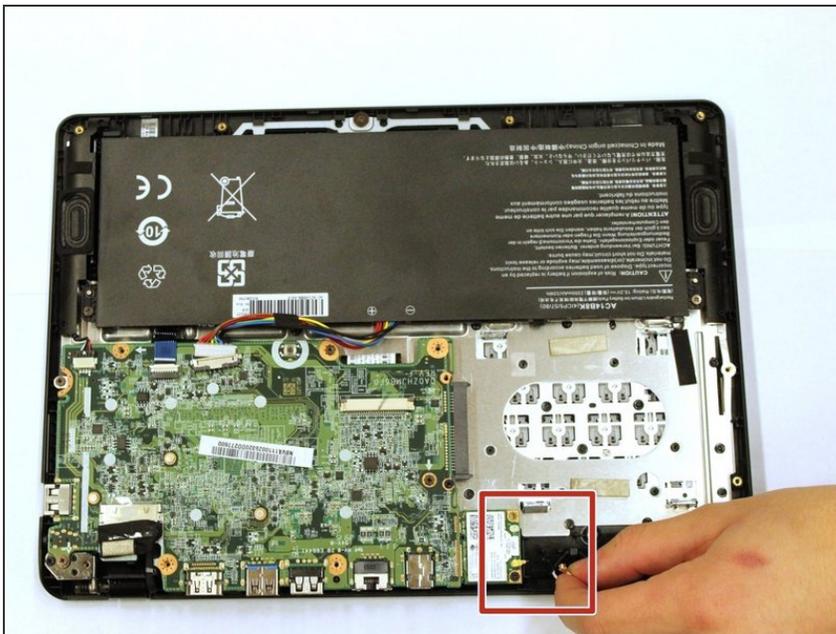


- Disconnect the two wires from the Wi-Fi interface.

Step 7

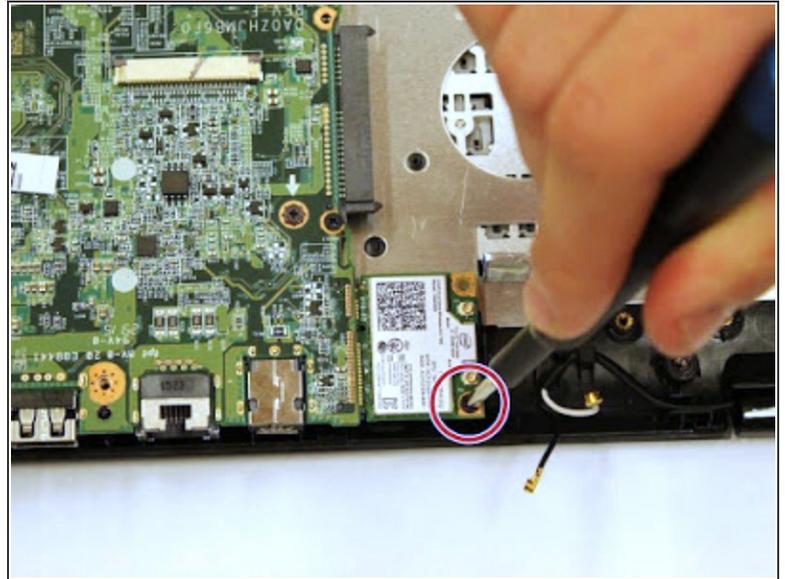


- Remove one 6mm Phillips screw from the Wi-Fi interface using the #0 screwdriver.

Step 8

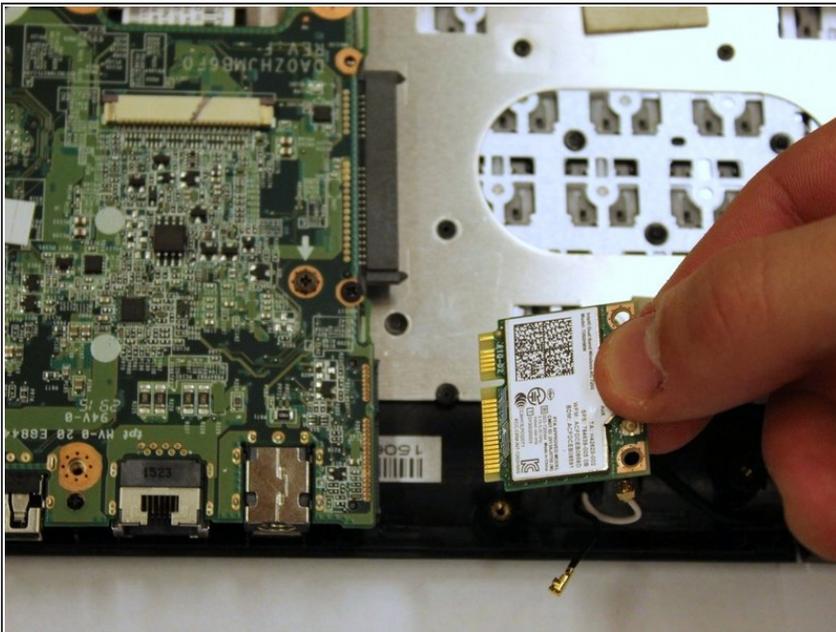


- Remove the Wi-Fi interface from the motherboard.

Step 9

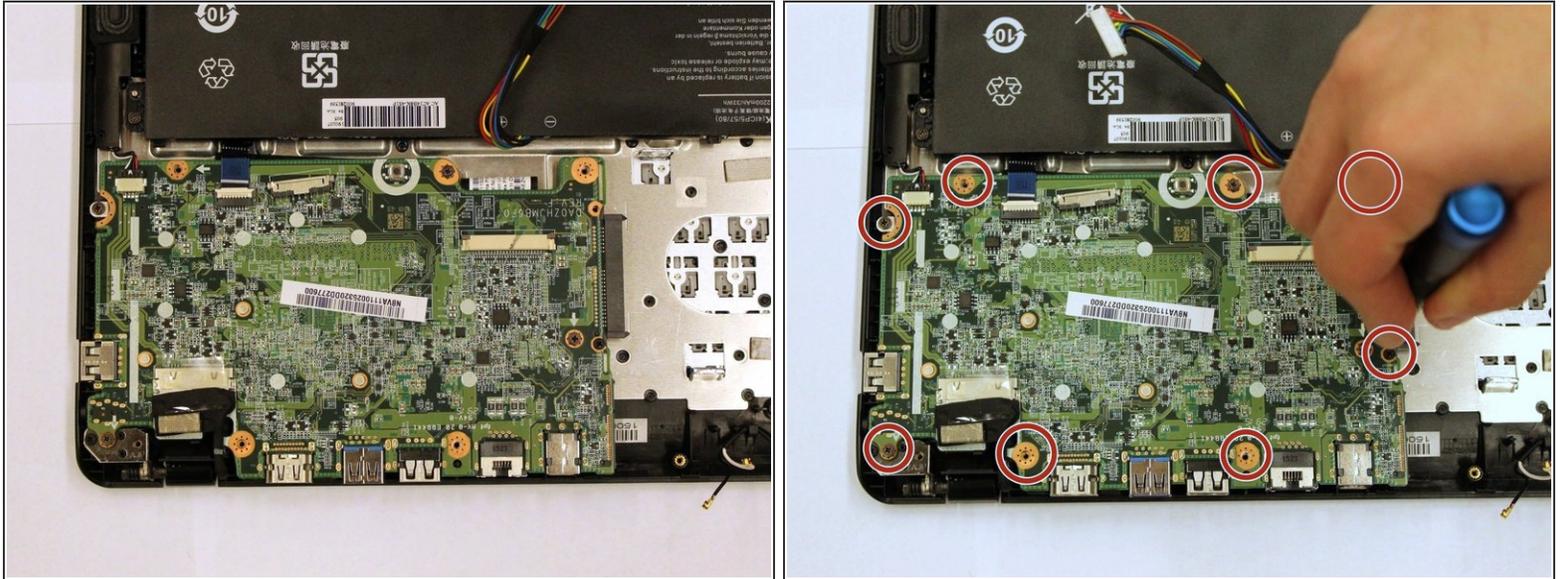


- Remove the eight 7mm Phillips screws from the motherboard using the #0 screwdriver.

Step 10

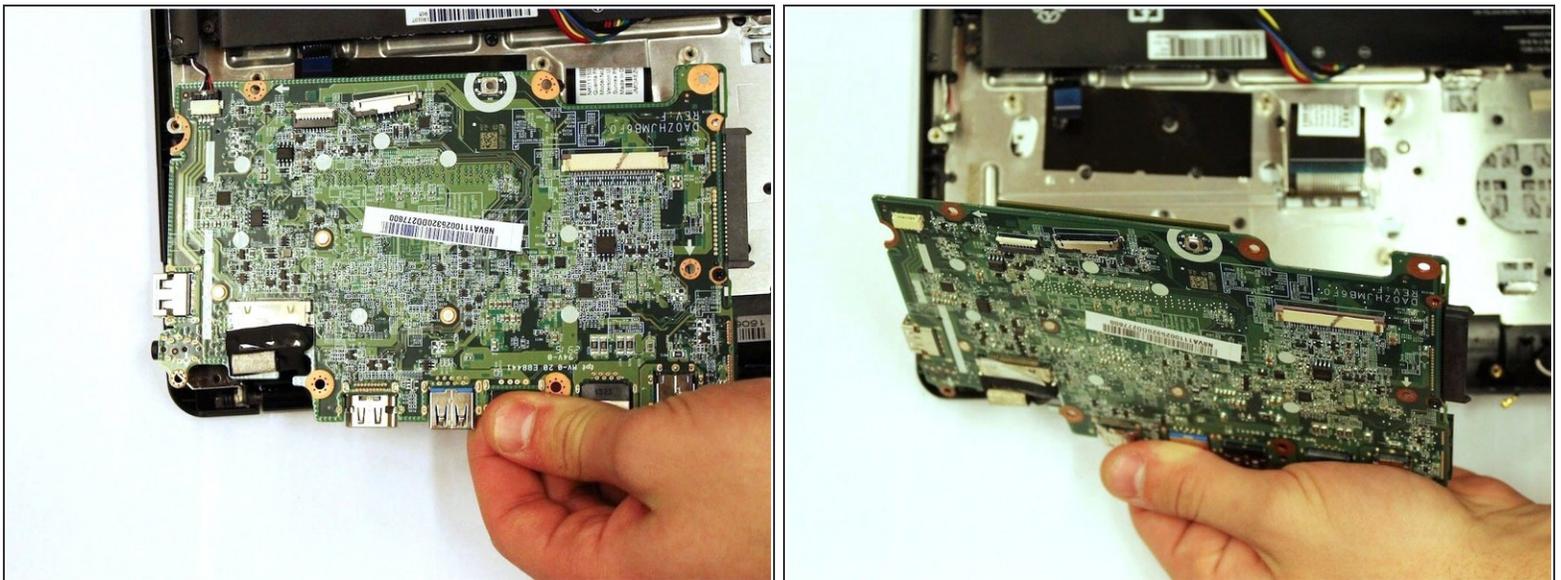



- Remove the motherboard.

Step 11 — Touchpad

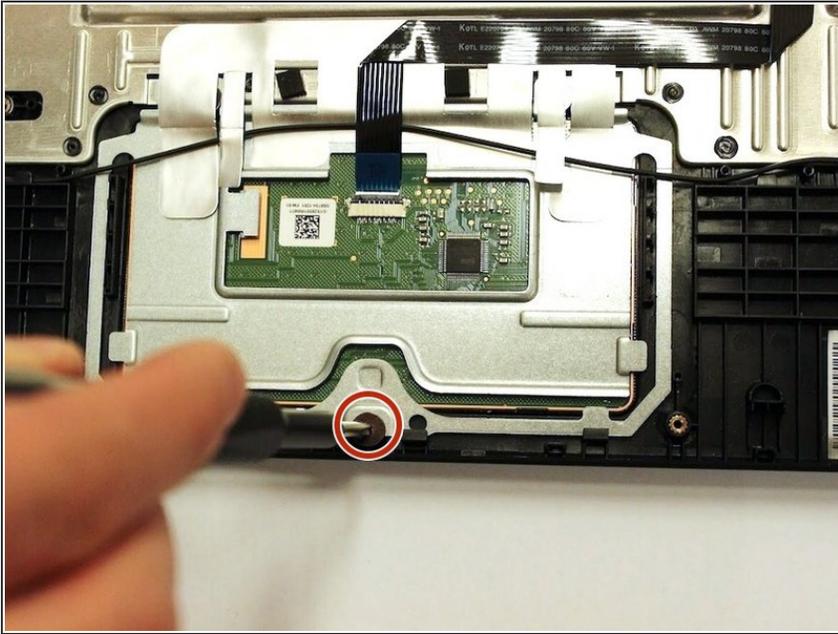


- Remove one 6mm Phillips screw from the middle of the touchpad with the #0 screwdriver.

Step 12

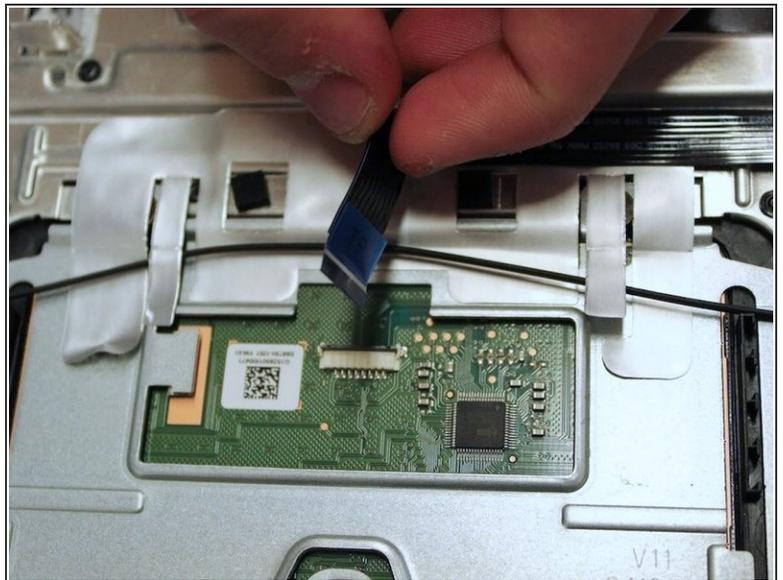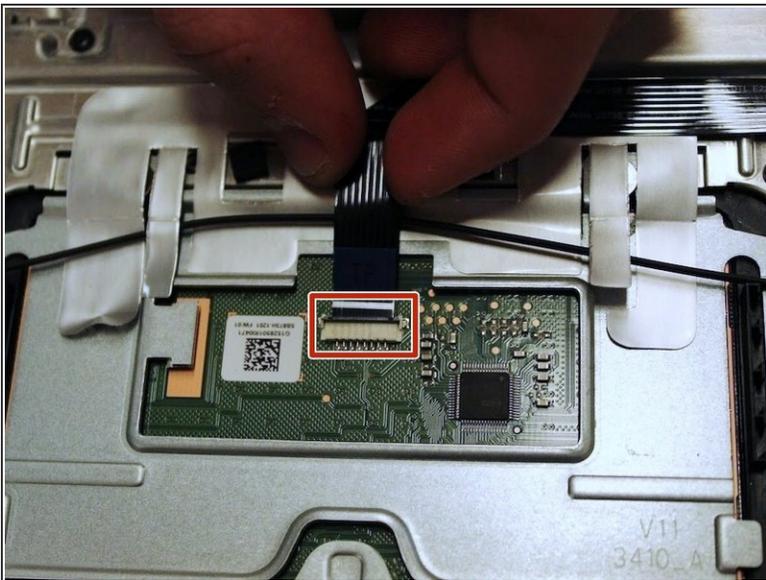


- Remove the wire from the slot.

Step 13

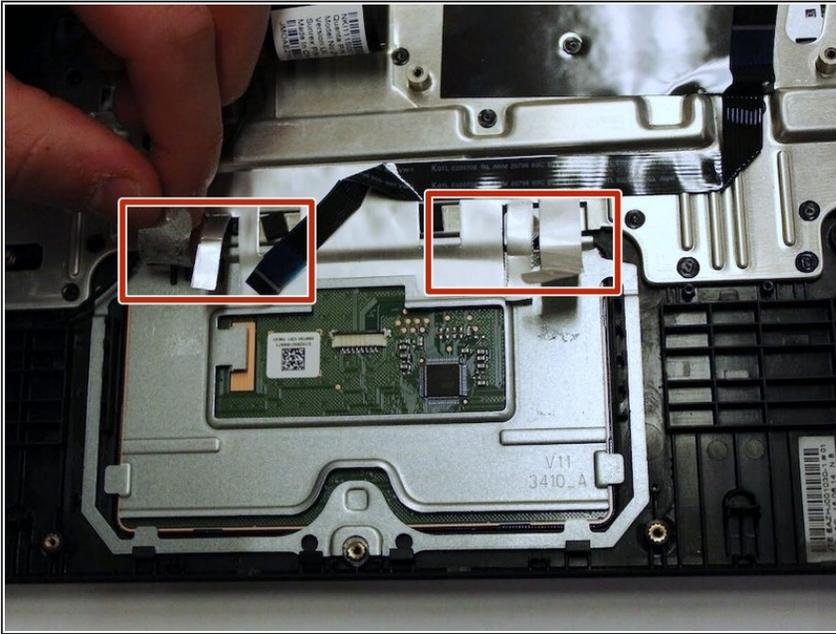



- Remove the stickers from the touchpad frame.

Step 14

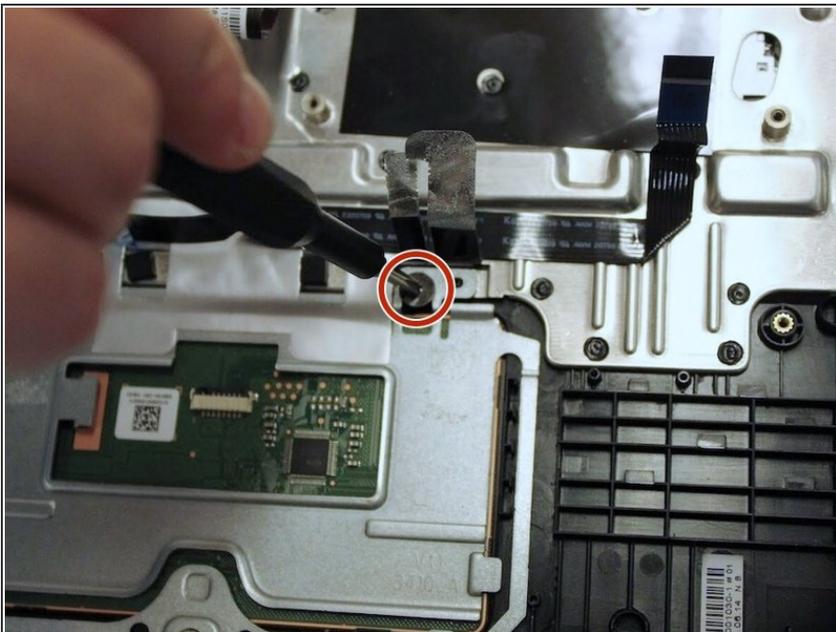

- Remove one 6mm screw from the corner of the touchpad frame with the #0 screwdriver.

Step 15

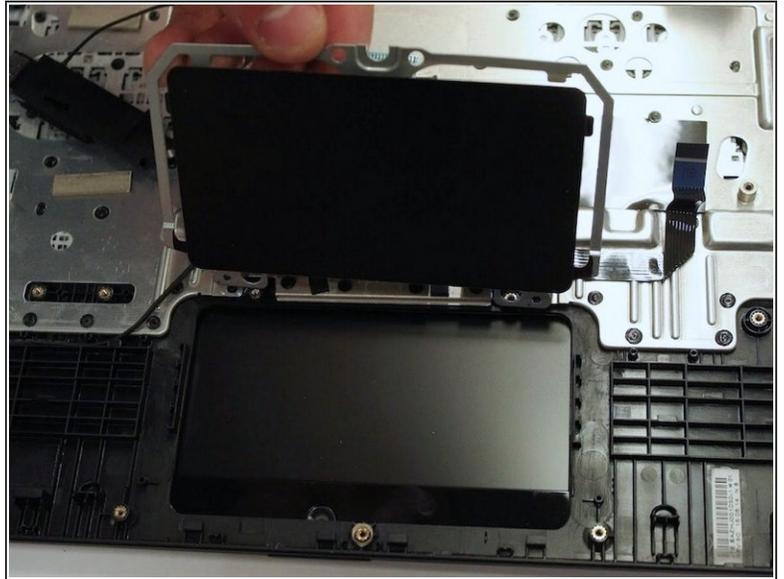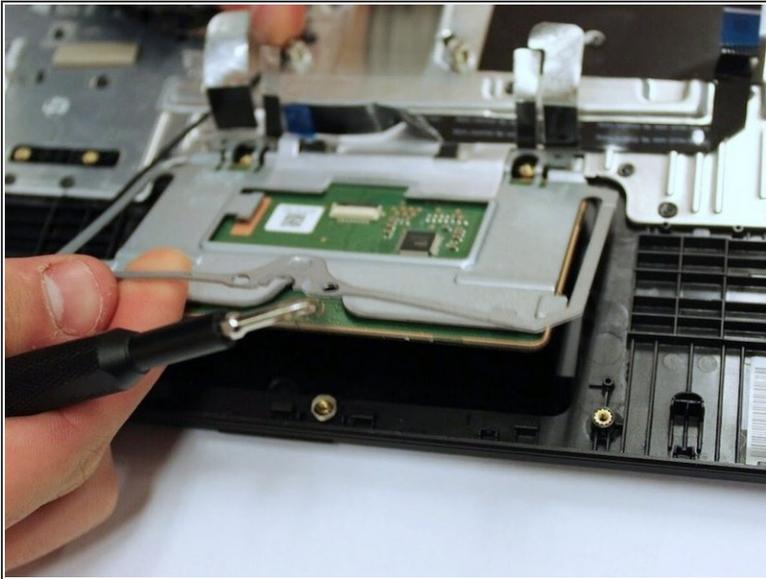

- Lift up the touchpad frame.

Step 16



- Remove the touchpad.

To reassemble your device, follow these instructions in reverse order.