



Lenovo Yoga 920-13IKB Screen Replacement

The guide shows how to replace the screen on...

Written By: Alyssa McCulloch



INTRODUCTION

The guide shows how to replace the screen on the Lenovo Yoga 920-13IKB.

TOOLS:

[iFixit Opening Tool](#) (1)
[Tweezers](#) (1)
[Phillips #000 Screwdriver](#) (1)

PARTS:

[Lenovo Yoga 920-13 LCD Panel](#) (1)

Step 1 — Screen




- Rotate the device into tablet mode so the device's screen is facing up.

Step 2






- Pry the metal cover up from the bottom of the screen with the iFixit Opening Tool to reveal the corners of the white adhesive strip.
 - Pull the metal cover off the device until it's completely free.
 - ☑ Clean off the old adhesive and straighten the metal cover when reassembling.
 - ☑ Use a new adhesive when reassembling.
- ⚠ Avoid bending the metal cover to prevent damage to the device.
- ⓘ If you're really struggling, you may pry from the opposite side, but be careful not to damage the screen or metal cover.

Step 3

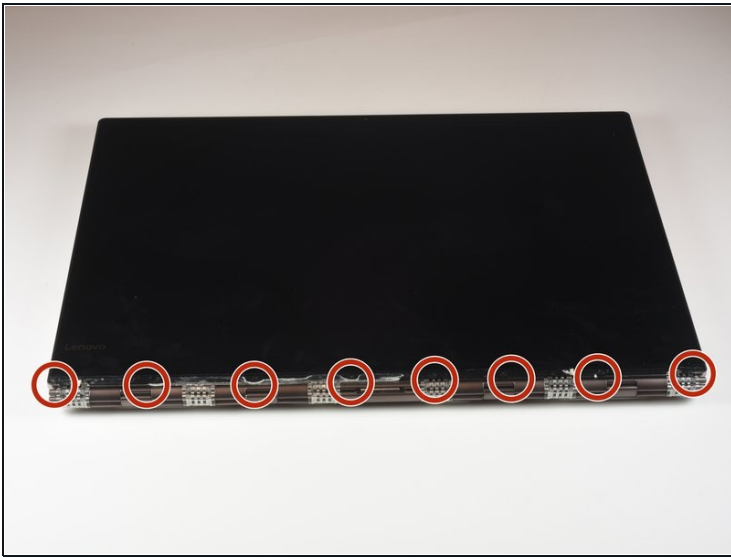

- Remove the eight 3mm Phillips #000 screws that were below the metal cover to loosen the screen.

Step 4

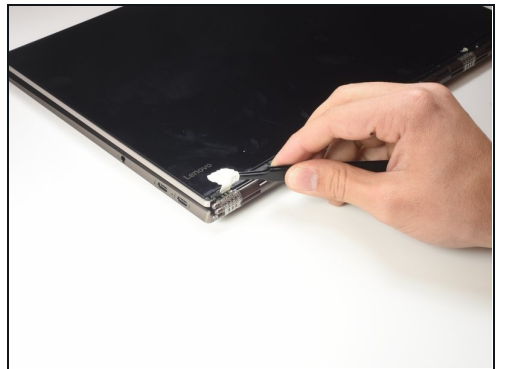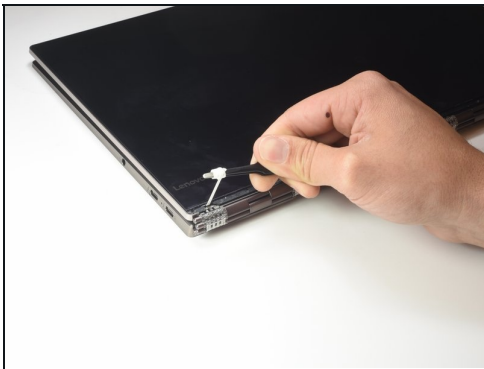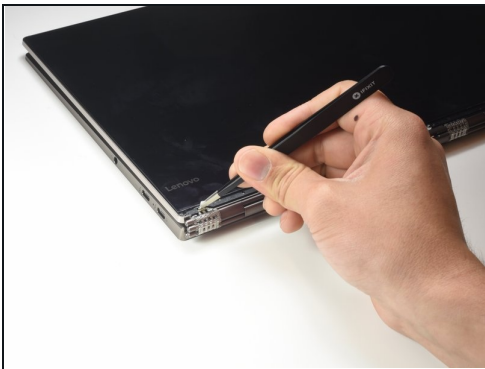



- Pull out the white adhesives using the iFixit Tweezers.
- Roll the tape around the iFixit Tweezers to remove successfully.

Step 5




- Pry up the screen with the iFixit Opening Tool.

Step 6

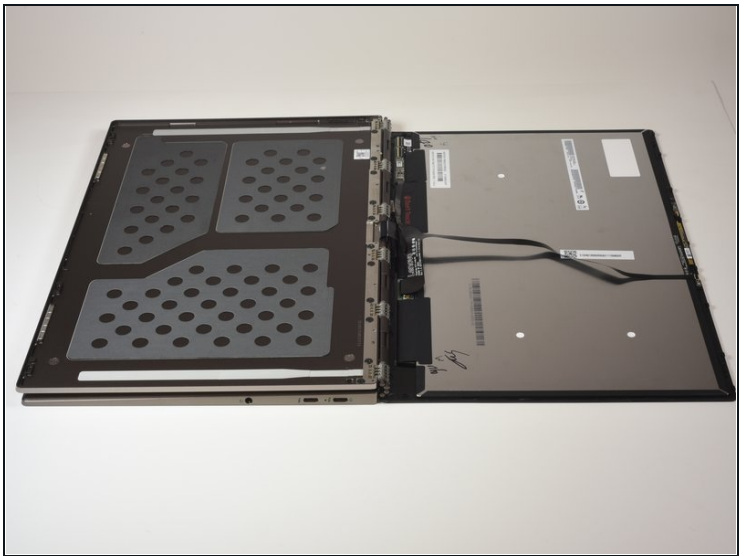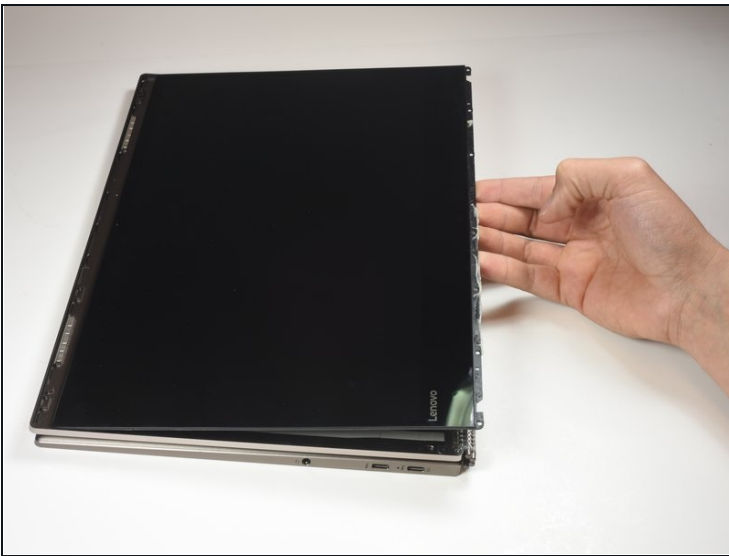

- Lift the screen with your hands and place the the screen face down, keeping the device in the same location.

Step 7

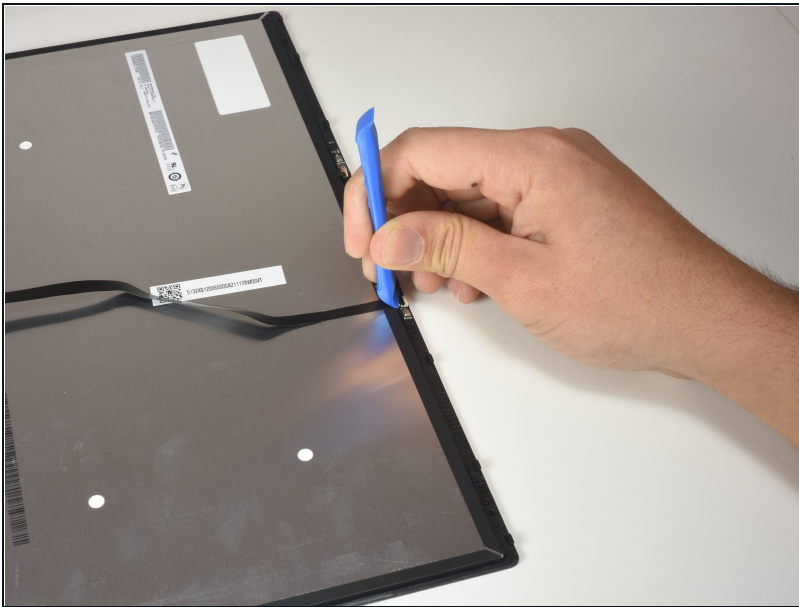

- Flip up the black tab on the connector at the top of the screen with the iFixit Opening Tool.

Step 8



- Use the iFixit Tweezers to remove the ribbon cable from the connector.

Step 9



- Flip up the black tab on the smallest connector at the bottom of the screen with the iFixit Opening Tool.

Step 10



- Use the iFixit Tweezers to remove the ribbon cable from the connector.

Step 11



- Flip up the thick black cable at the bottom of the screen with your thumb.
- Use the iFixit Opening Tool to lift up the brass tab to free up the cable.

Step 12



- Remove the ribbon cable from the connector to detach the screen from the device.

To reassemble your device, follow these instructions in reverse order.