




Acer Nitro 5 AN515-53-55G9 RAM Replacement

Use this guide to replace/upgrade RAM in the Acer Nitro 5 AN515-53-55G9.

Written By: Rheo Bruer

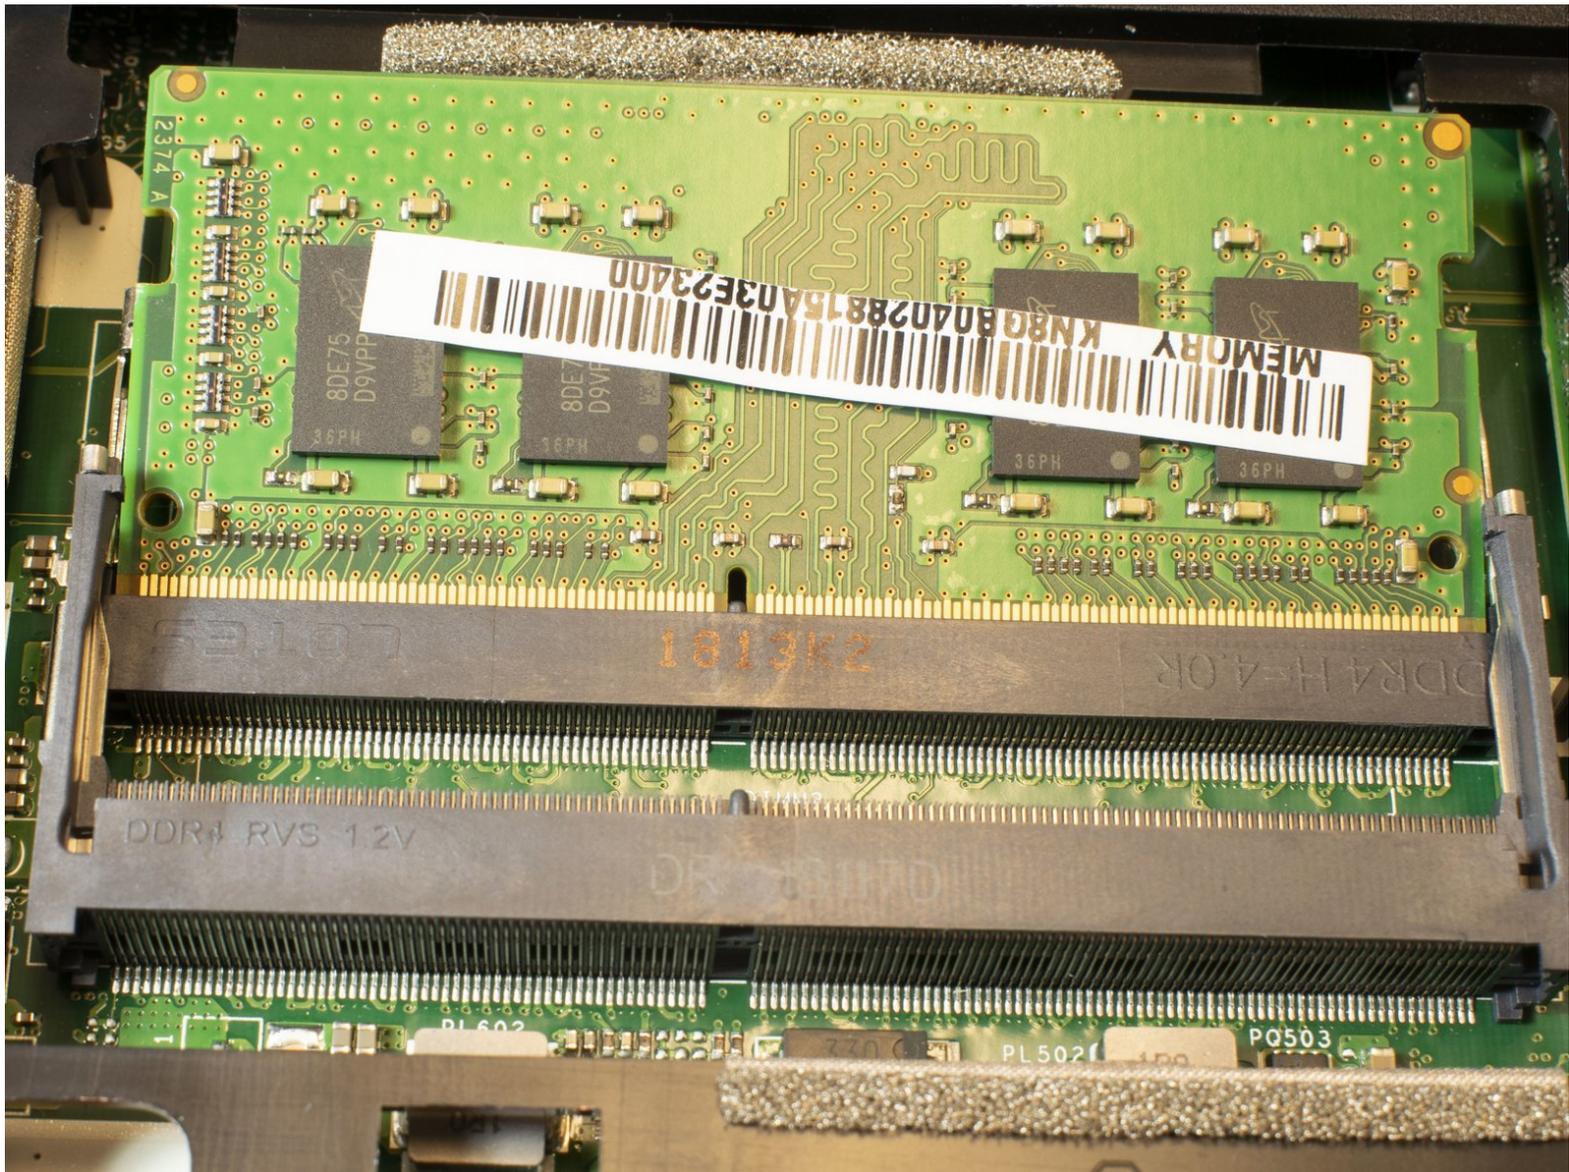

INTRODUCTION

Use this guide to replace the RAM card in the Acer Nitro 5 Acer Nitro 5 AN515-53-55G9. This laptop has two available RAM card slots but only comes with one card. This guide shows you only how to replace the standard RAM card.

TOOLS:

- [Phillips #0 Screwdriver](#) (1)
 - [Small Plastic Spudger](#) (2)
-

Step 1 — RAM



 Make sure laptop is off and unplugged before beginning replacement.

- Flip the laptop upside down so the bottom is facing up.
- Identify the RAM tray on the bottom of the laptop.

Step 2



- Use the Phillips #0 screwdriver to remove the 9mm screw in the bottom left corner of the RAM tray covering.
- Remove the RAM tray cover by prying up with a spudger.

Step 3



- Locate the silver clips holding the RAM tray.
- Push the silver pins holding the RAM tray down away from RAM. Slight pressure may be required. The RAM tray should pop up at an angle.

Step 4



- Slide ram card out of its groove.
- ⓘ When installing the new RAM card, make sure to slide the card in at the correct orientation.
- ⚠ The gold pins should be on the bottom and you must line up the pin slot guide.

To reassemble your device, follow these instructions in reverse order.