


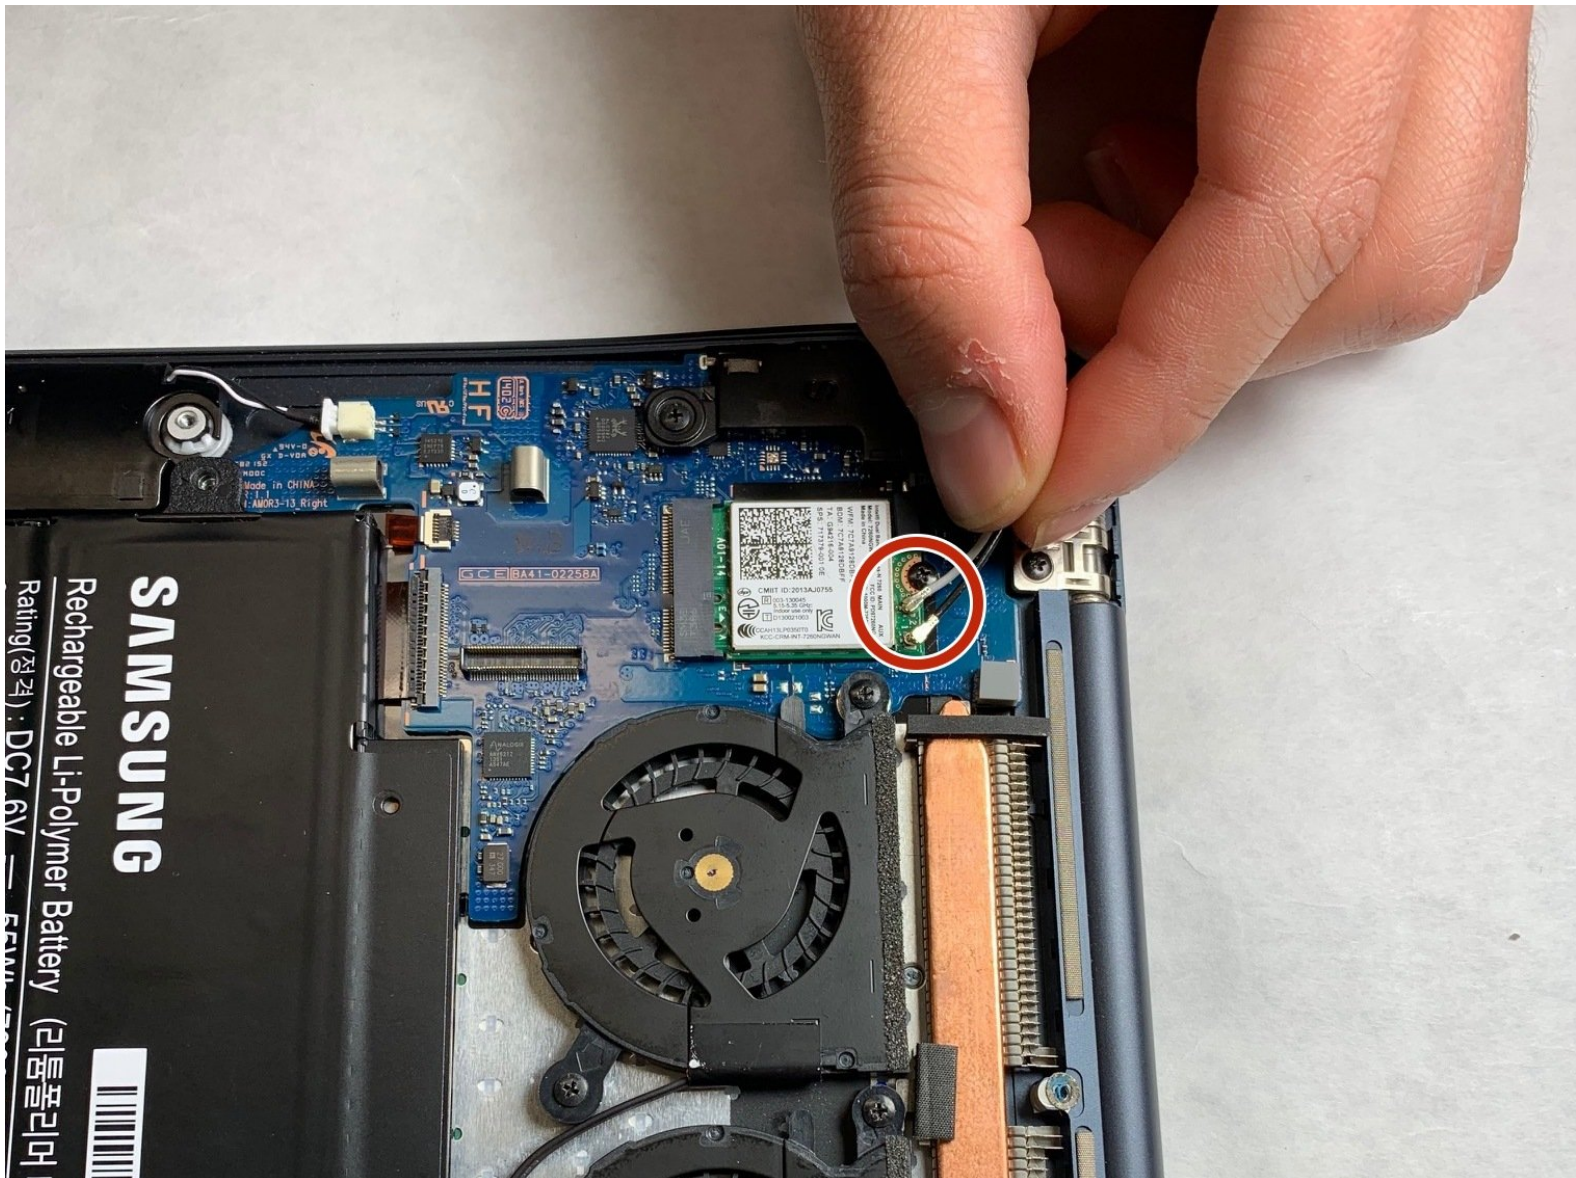

# Samsung ATIV Book 9 Plus Wi-Fi Card Replacement

This guide explains how to replace the Wi-Fi card in a Samsung ATIV Book 9 Plus.

Written By: Ryan Smith



---

## INTRODUCTION


Before beginning be sure you have the iFixIt tool kit and magnet mat as the screws can be very small. The Wi-Fi card is what allows the computer to be able to access the internet wirelessly and is very easy to replace.



### TOOLS:

- [Phillips #000 Screwdriver](#) (1)
-

## Step 1 — Back Cover

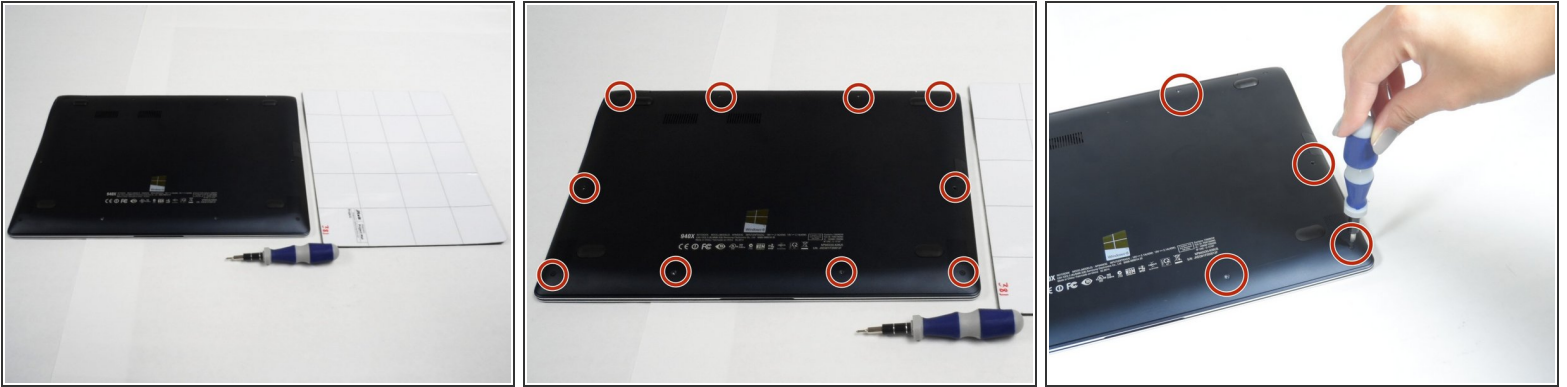

- Turn the laptop upside down so that the underside of the laptop is facing you.
- Use a Phillips #000 screwdriver to unscrew the 4.3 mm screws located on the edges and corners of the laptop.


## Step 2



- Lift the cover to reveal the interior of the laptop.




## Step 3 — Wi-Fi Card

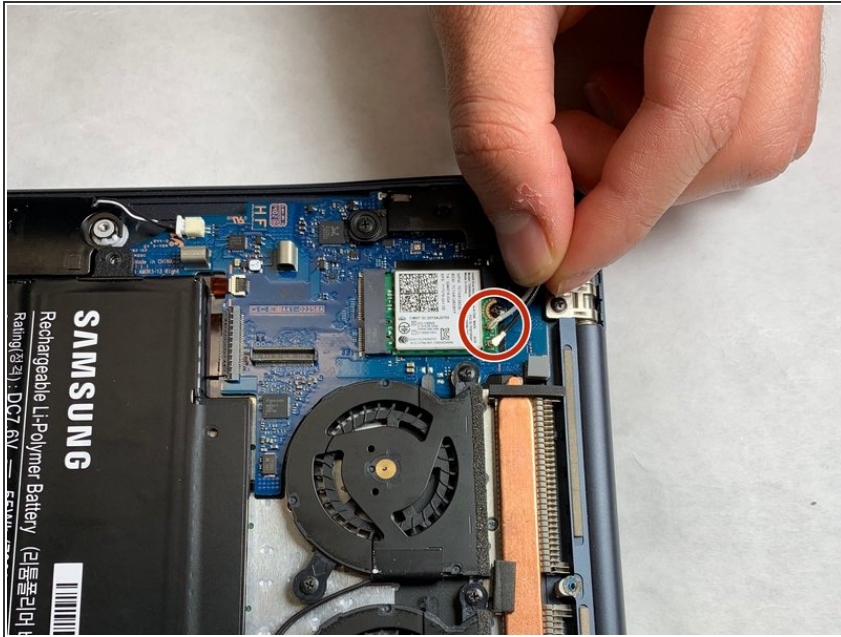


- Gently pull off both cables attached to Wi-Fi card.

## Step 4

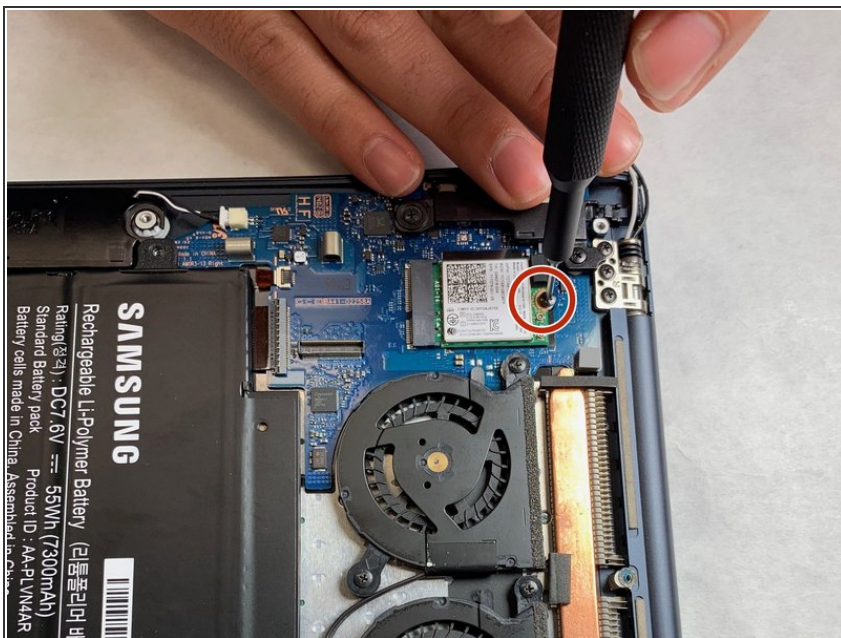

- Unscrew the labeled screw using a Phillips #000 screwdriver.

## Step 5

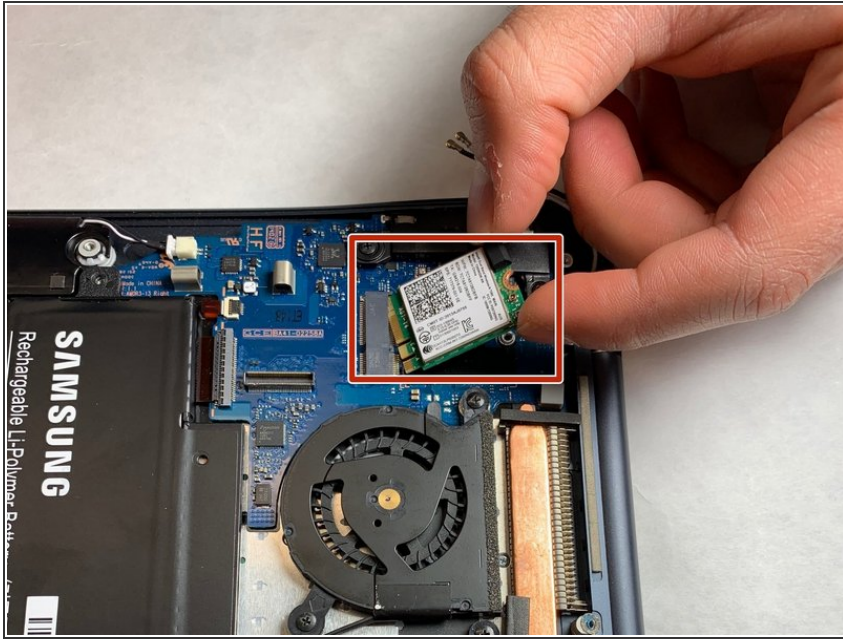

- Pull Wi-Fi card out to completely detach it.

To reassemble your device, follow these instructions in reverse order.