


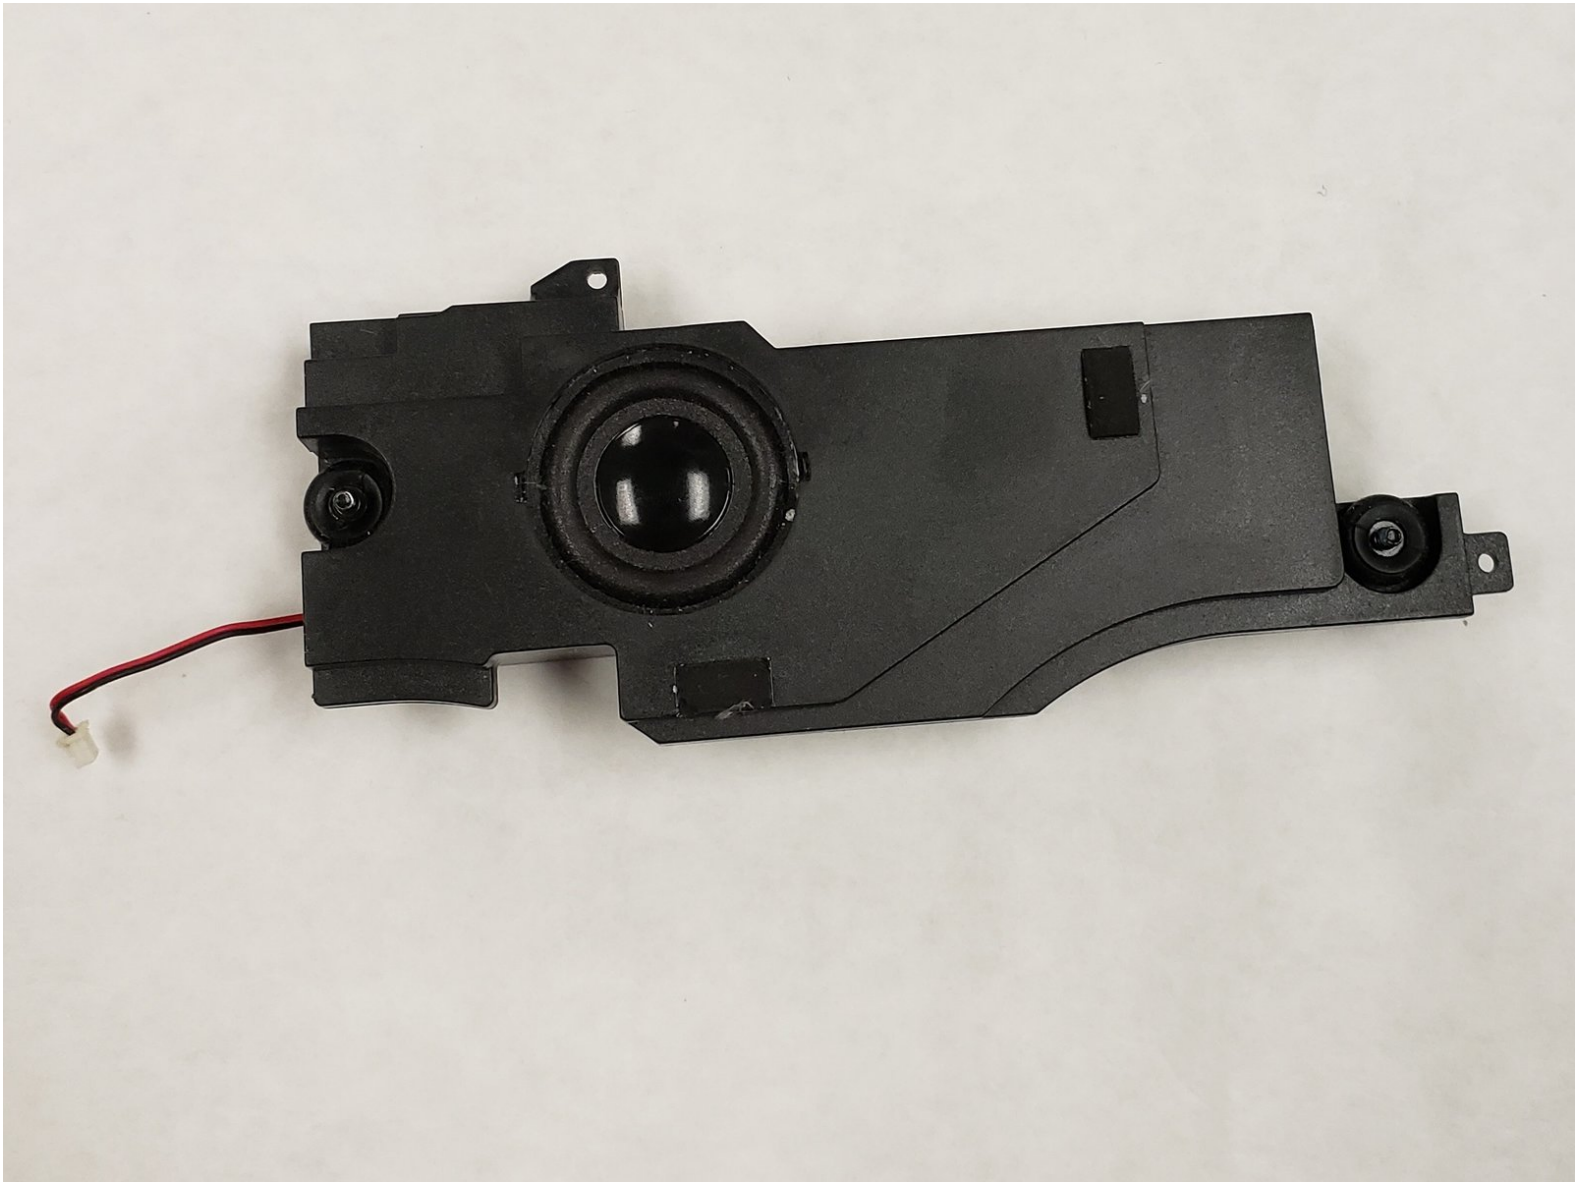

Alienware M18x Speaker Replacement

This guide illustrates how to locate and...

Written By: Naser Alkhateri



INTRODUCTION

This guide illustrates how to locate and replace the speaker for your Alienware M18x gamer laptop.

TOOLS:

- [Small Chain Nose Pliers](#) (1)
 - [JIS #000 Screwdriver](#) (1)
 - [iFixit Opening Tool](#) (1)
-

Step 1 — Battery



- Flip the laptop over and slide the battery release latch to the right.

Step 2



- Remove battery.

Step 3 — Keyboard



- Turn the computer over.
- Slide the battery latch over and lift the battery out.

Step 4




- Unscrew the four 3mm screws with a J000 screwdriver.

Step 5




- Use the iFixit opening tool to lift the bottom cover off.

Step 6

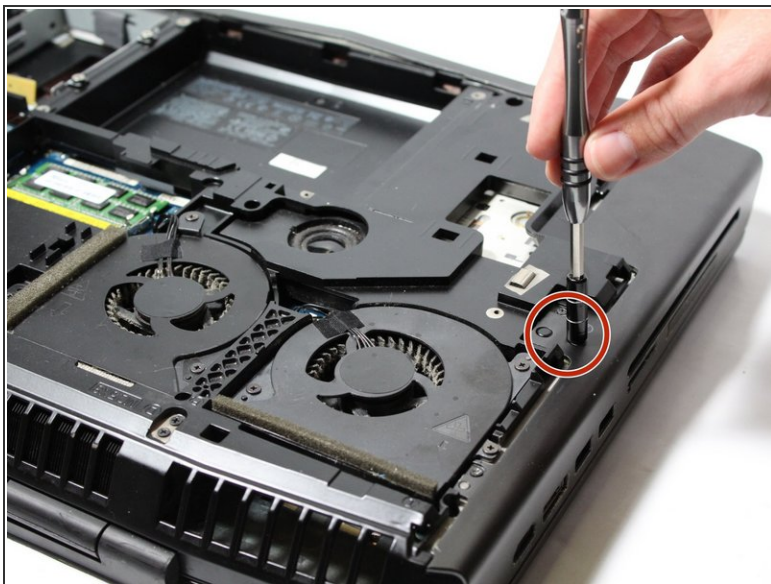


- Remove the two 4mm screws with the J000 screwdriver.

Step 7

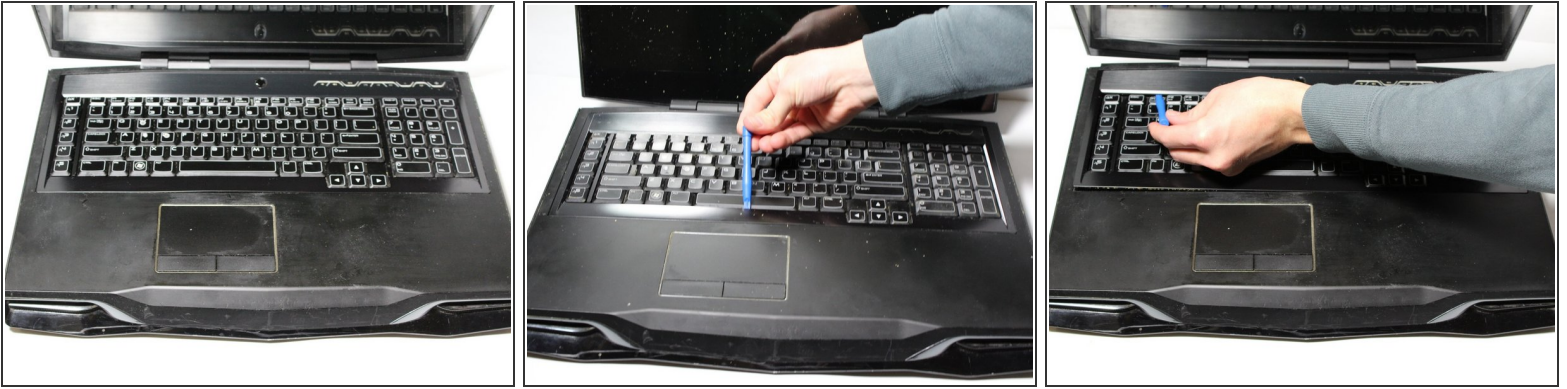

- Turn the laptop right-side up, and open the laptop.
- Use the plastic pryer tool to loosen the flat piece surrounding the keys by gently prying it upwards from the laptop's base.
- Make sure to go around the entire perimeter of the piece to loosen all areas of it.

Step 8

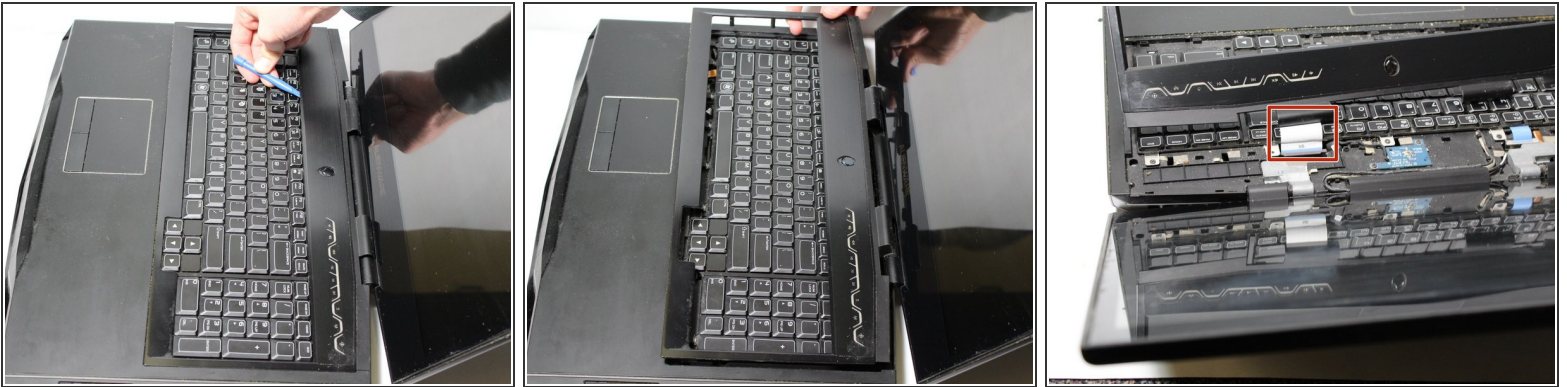

- The piece is now free from its fastenings to the base of the laptop, and can be lifted off.


⚠ This piece is still connected to the laptop via power cable. Be sure not to lift it off too far or with too much force, as doing so could potentially rip or damage the cables.

Step 9



- Gently remove the power cable with your hands or with the help of a prying tool.

Step 10

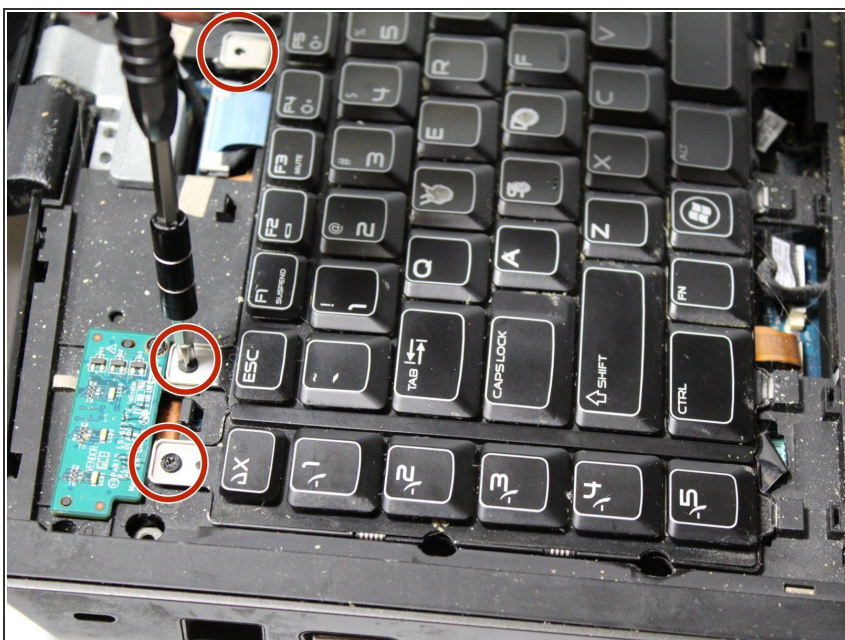


- The keyboard's 3mm fastening screws are now exposed and can be removed with a J000 screwdriver.

Step 11




- As before, the keyboard is now unfastened but still connected to the base via cables.
- Flip the keyboard over towards the edge of the laptop to expose the locations of the connectors. Avoid tugging on the cables when you do this.

Step 12

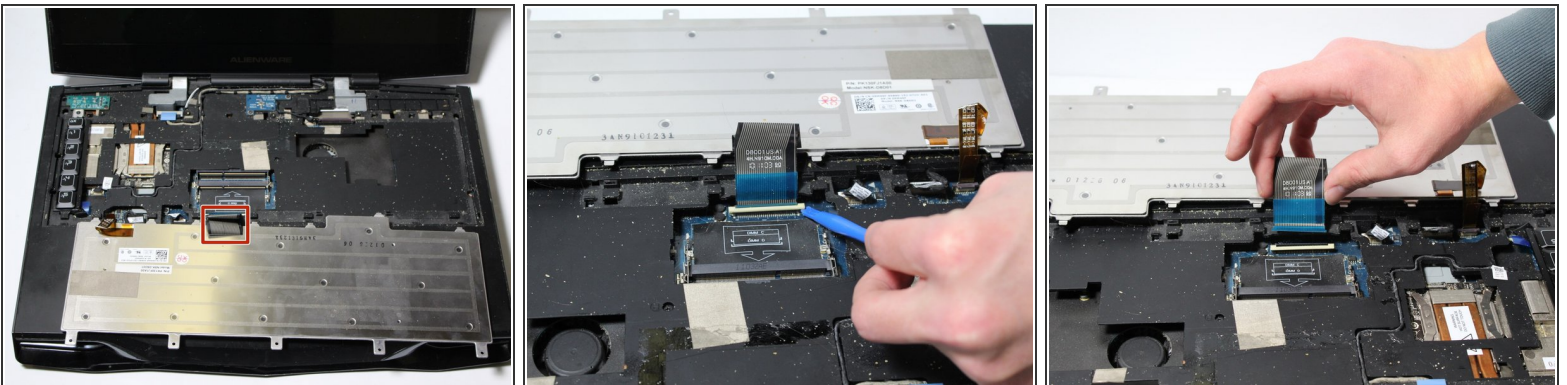


- Locate and remove the first connector cable.
- ⓘ Use a prying tool to assist in unplugging the cable.


Step 13

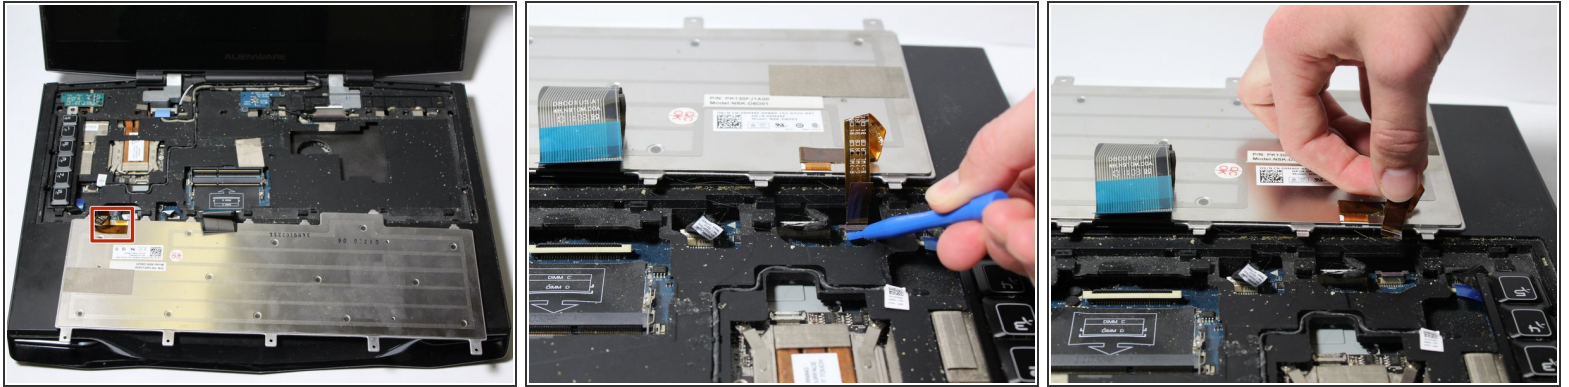

- Locate and remove the second connector cable.

 Again, use a prying tool to help remove.

Step 14

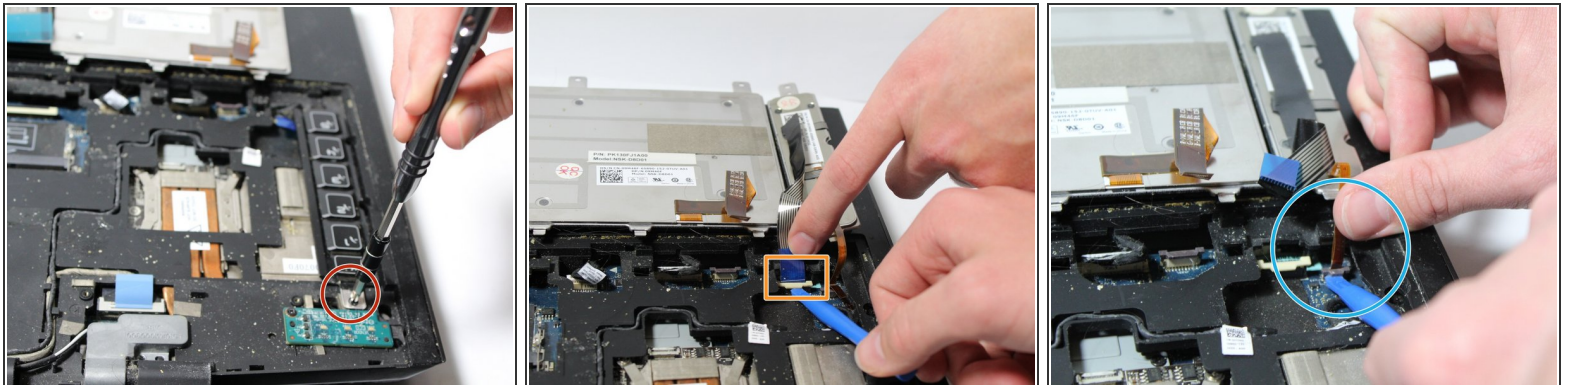



- The left section of the keyboard is connected by a single screw and two connector cables.
- Remove the 4mm screw with a J000 screwdriver.
- Remove the connecting cables with a prying bar.

Step 15




- All sections of the keyboard are now free to be taken off and replaced!

Step 16 — CD Drive

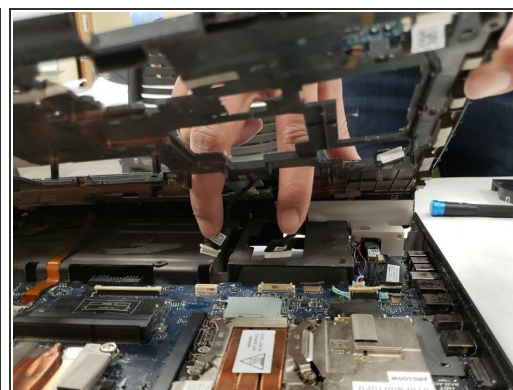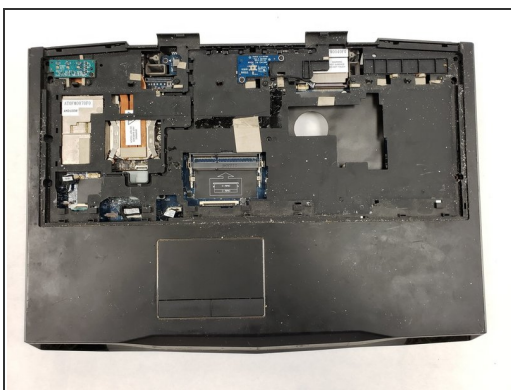


- Computer should be upright.
- Find the connecting tab that is holding the laptop's top section in place.
- Disconnect the tab with needle-nose pliers.
- Lift the panel up slowly to gain access to the internal parts.

Step 17

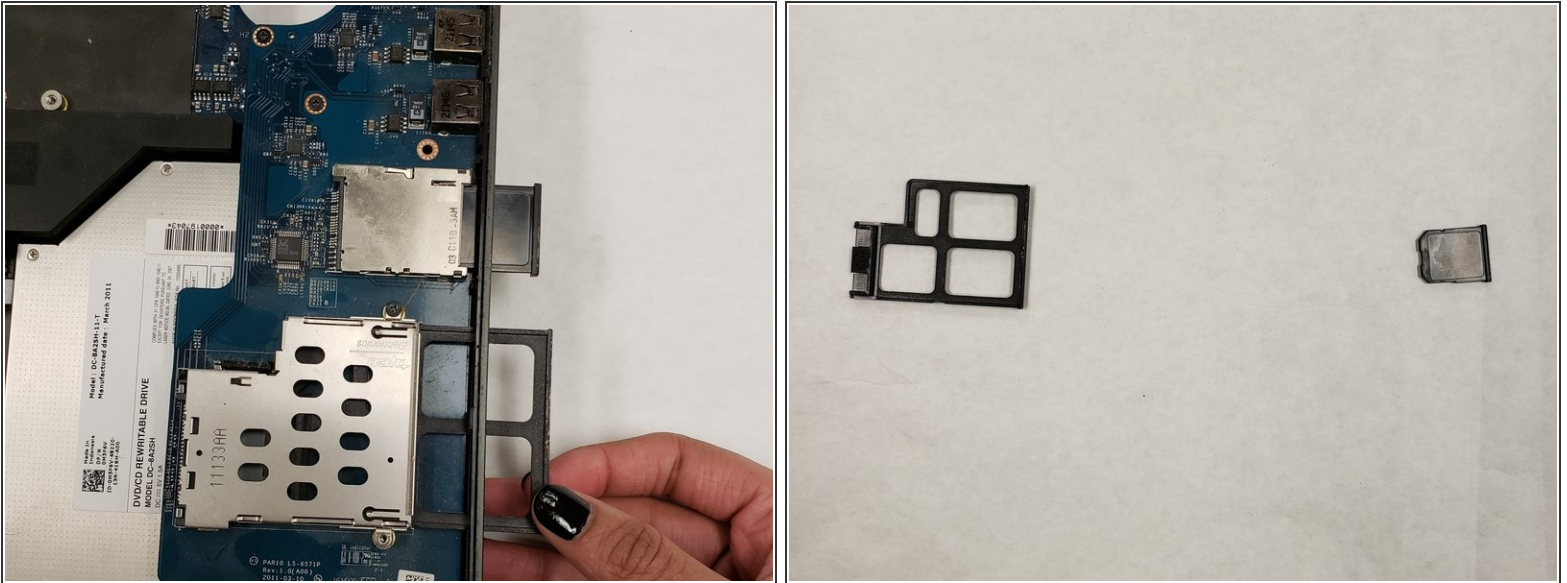

- Track down the blue USB board. The CD Drive is covered by this board.
- Locate the card holders' edges, and then gently pry each one from its socket

Step 18

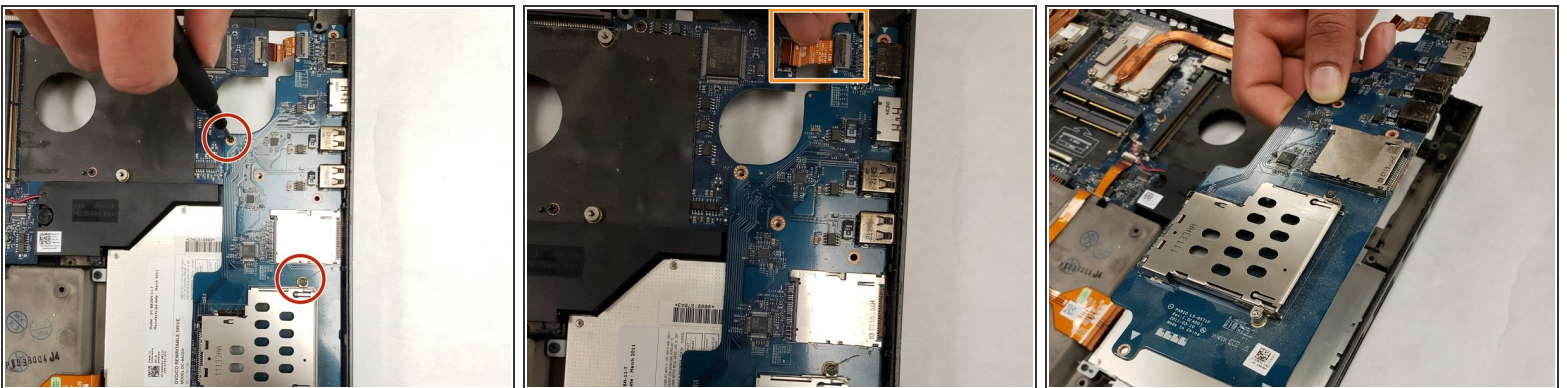


- With a screwdriver, remove the screws holding the USB port board in place.
- To remove all connections from the board, disconnect the orange tab.
- In order to access the CD Drive, raise the board.

Step 19




- The CD Drive housing should be free of the four 3mm screws.
- The orange connector's thin end should be disconnected from the motherboard. The CD Drive should still be attached to one end of it.
- From the laptop, gently remove the CD drive.

Step 20 — Speaker

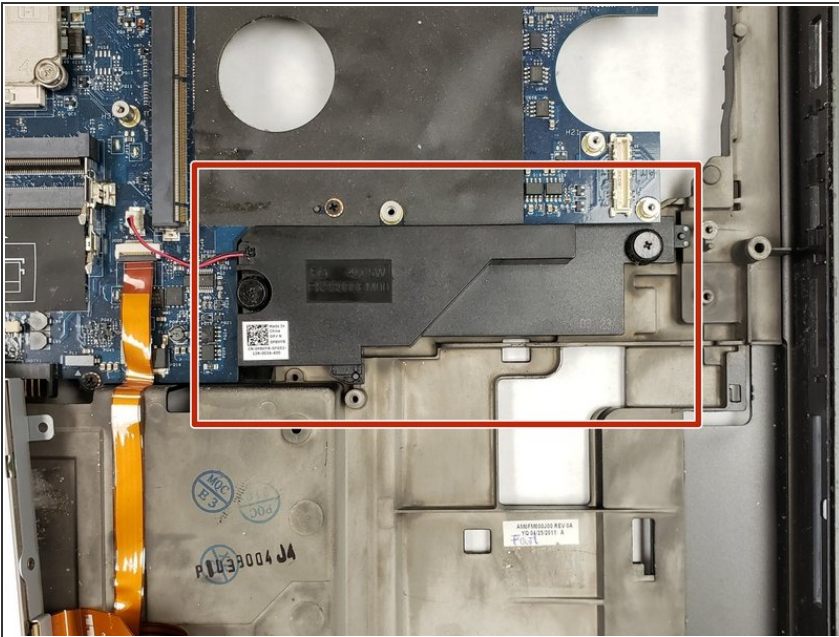



- Locate the speaker.

Step 21

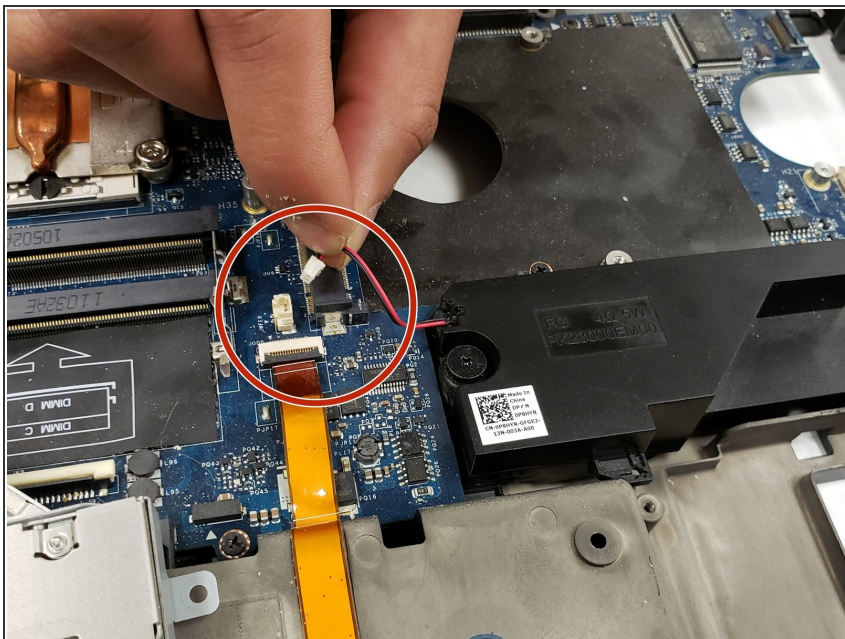

- Unplug the speaker cable from the motherboard.

Step 22

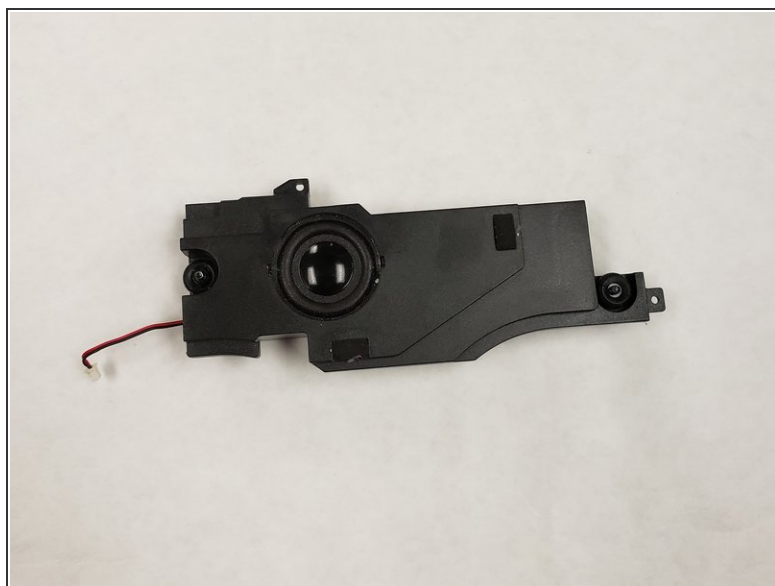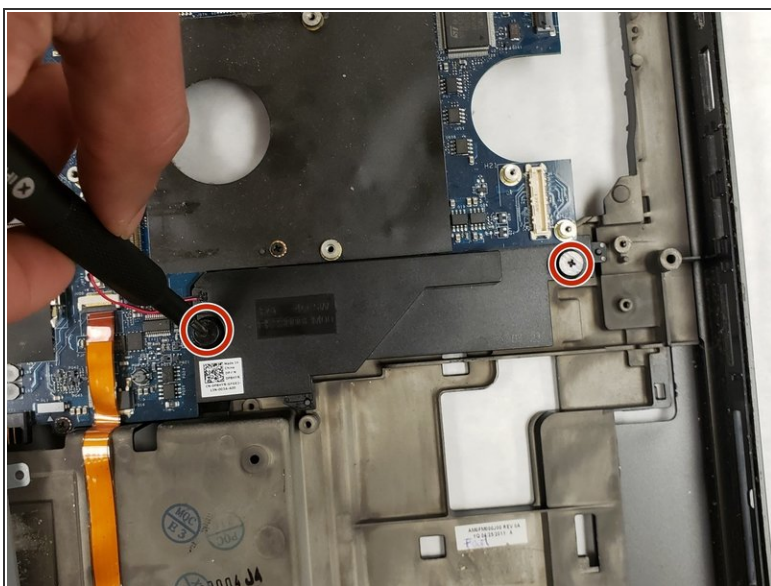

- Remove the two screws on the speaker and lift the speaker out.

To reassemble your device, follow these instructions in reverse order.