



# Circular Saw Blade Replacement

Replace or swap out the blade in your circular saw with this easy step-by-step guide.

Written By: Craig Lloyd



## INTRODUCTION

Whether your circular saw blade is worn out, or you just want to switch it out for a different style, it's really easy to swap out blades on pretty much any circular saw—and it takes just a few minutes.

This guide uses a Ryobi P504G circular saw, but the process is very similar for most circular saws.



### TOOLS:

- [5mm Hex Key](#) (1)




### PARTS:

- [Circular Saw Blade](#) (1)



## Step 1 — Blade




 Unplug your circular saw or remove the battery before replacing the blade!

## Step 2



- Press and hold down the blade lock button to keep the blade from turning while you loosen it.
- Loosen the arbor's hex bolt in the center of the blade using a 5mm hex key, making sure to loosen clockwise since the bolt threads are reversed.

 Your circular saw may already come with a hex key.




### Step 3



- Once loosened, continue unscrewing the bolt with your fingers and remove it from the saw.

### Step 4

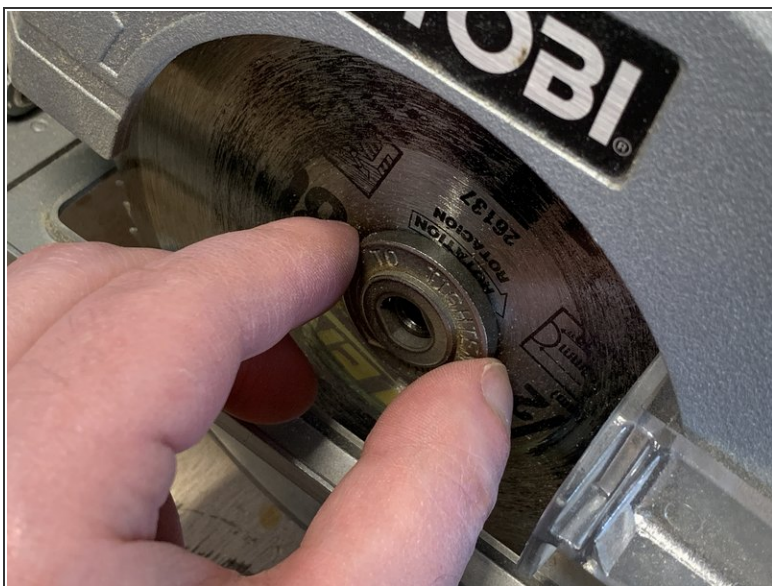

- Remove the arbor washer.




## Step 5



- Completely retract the blade guard.
- i* You can hold the blade guard in place with a clamp while you change the blade.

## Step 6



- Set the circular saw on its side and carefully lift up the blade to unseat it from the arbor.
  - Slowly slide out the blade.
-  Use extreme caution when handling the blade!

## Step 7



- When inserting the new blade, be sure to note its rotation and install it in the correct orientation.

To reassemble your device, follow these instructions in reverse order.