



Makita Chain Saw EA6100PR 2017 Sprocket Guard Replacement

Remove and replace the sprocket guard plate for a Makita chainsaw.

Written By: Arthur Shi



INTRODUCTION

This guide shows how to remove and replace the sprocket guard plate for a Makita chainsaw.



TOOLS:

- [13mm Socket](#) (1)
1/2" OK, or chainsaw scrench



PARTS:

- [Makita Sprocket Guard Cpl., 130-213-101](#) (1)

Step 1 — Remove the sprocket guard plate



- Use a 13 mm socket to remove the two nuts securing the sprocket guard plate.

Step 2



- Remove the sprocket guard plate.

To reassemble your device, follow these instructions in reverse order.