



Alcatel Pop 4 Plus Power/Volume Button Rocker Replacement

The correct way to replace the Power/Volume Button Rocker on Alcatel Pop 4 Plus.

Written By: Anna Gongre



INTRODUCTION

Caution: Handling of Sharp Objects

Please use caution when handling tweezers and keep out of reach of children.


If you notice that your phone has a delay in locking or turning the volume up and down, it is recommended that you change your Power/Volume button rocker.



TOOLS:


- [Spudger](#) (1)
 - [Tweezers](#) (1)
-

Step 1 — Power/Volume Button Rocker Replacement

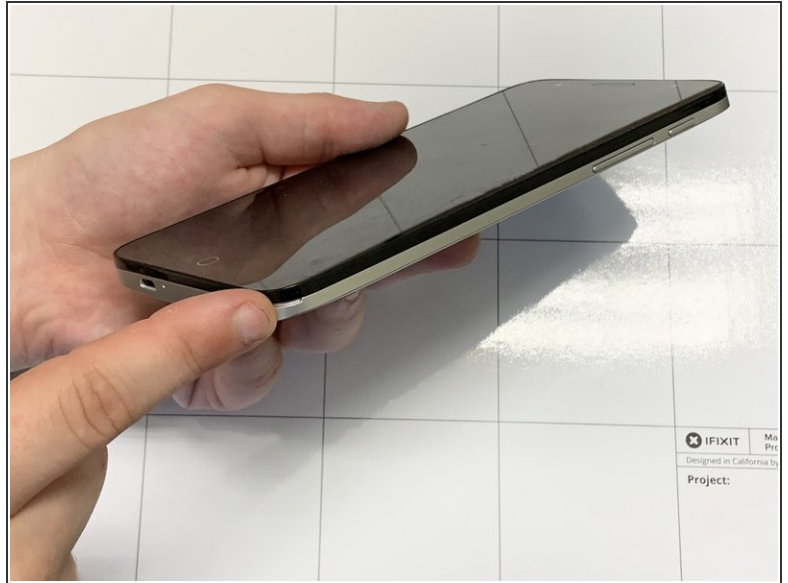


- Begin by removing the back of the phone. Press your nail or a thin object in the bottom right-hand corner of the phone and gently press to release the back of the phone from the front.

Step 2

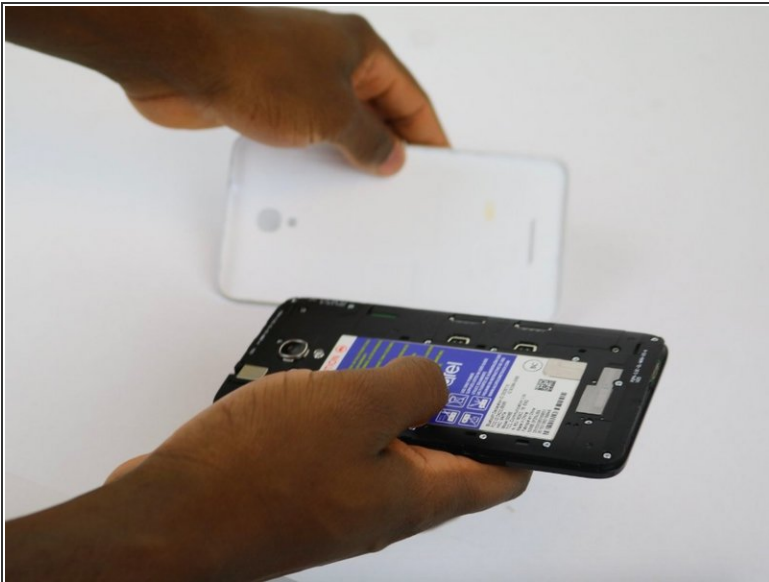



- Once removed completely, use the back portion to disassemble the Power/Volume Button Rocker.

Step 3

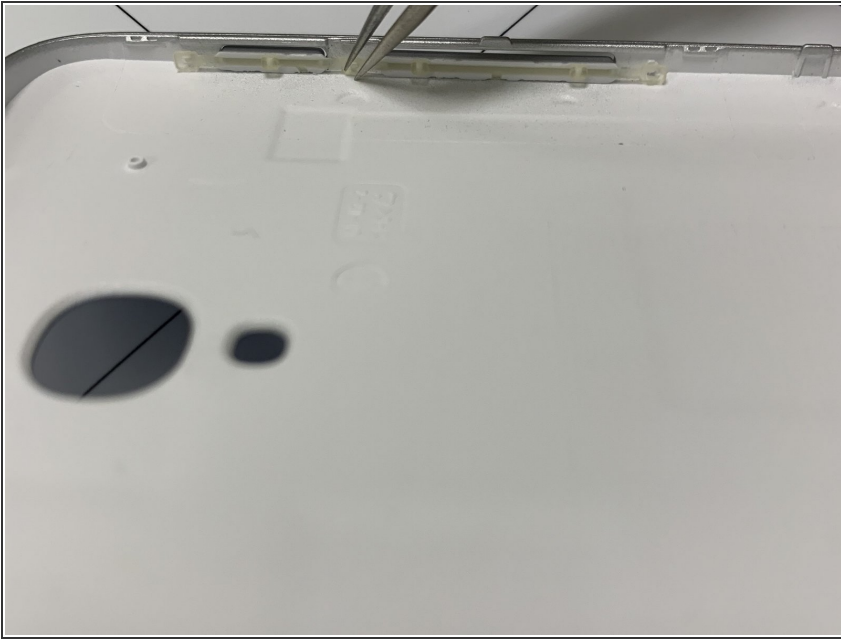

- Remove the middle insert of the elastic on the Power/Volume button rocker with tweezers.

Step 4

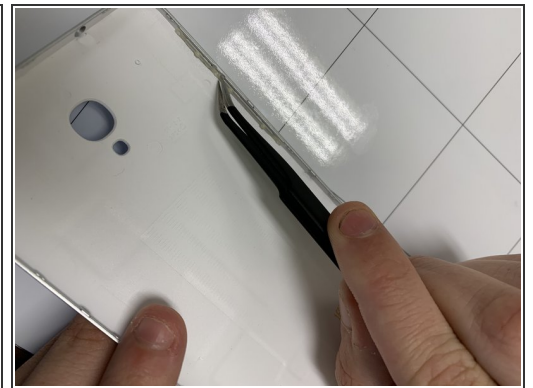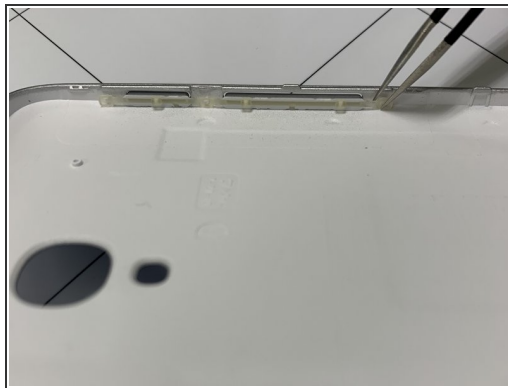

- Remove the 3 elastic bands holding the rocker in place with tweezers.

Step 5



- Once removed, place new rocker in same elastic slots. Follow instructions backwards to reassemble.

To reassemble your device, follow these instructions in reverse order.