



# Lenovo IdeaPad 130-15AST DVD/CD Optical Drive Replacement

Use this guide to remove the DVD/CD Drive from...

Written By: Trever Resheske



# INTRODUCTION

Use this guide to remove the DVD/CD Drive from the Lenovo IdeaPad 130-15AST. The DVD/CD Drive has three functions: to read CDs, write CDs, and read DVDs. If the disk drive is not reading disks correctly, it may be due to an inoperable disk drive. Always use caution when using tools and follow any warnings provided in the guide.

## TOOLS:

[Jimmy](#) (1)  
[Phillips #00 Screwdriver](#) (1)

## PARTS:

[01MP404 - Lenovo Laptop DVD Writer - Genuine](#) (1)  
[Lenovo IdeaPad 330 and Miix 320 Optical Drive](#) (1)

## Step 1 — DVD/CD Optical Drive



 **Verify that the DVD/CD Tray is free of DVD's and CD's.**


- Using a Phillips #00 screwdriver, remove one of the 6.0mm screws.

## Step 2



- Using the Jimmy Tool, gently pry the DVD/CD Drive away from the case of the laptop.

## Step 3

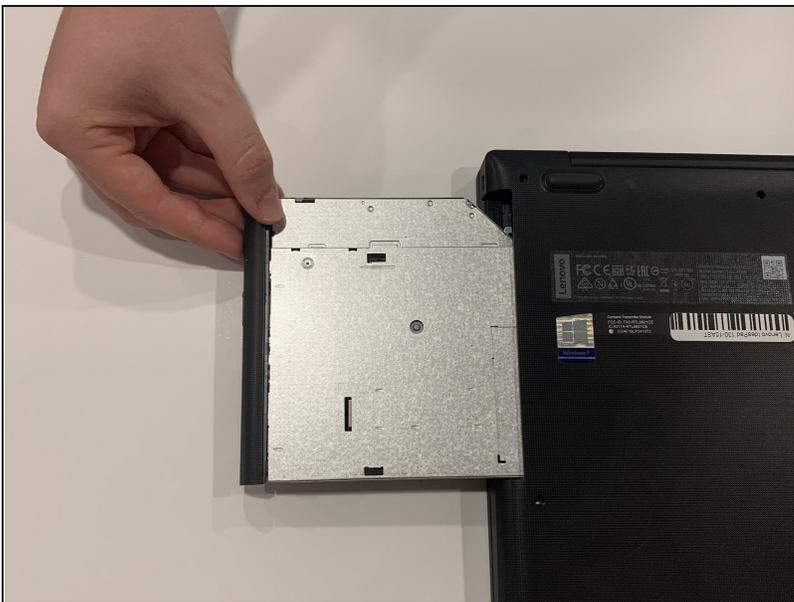

- Gently slide the DVD/CD Drive out of the laptop.

---

To reassemble your device, follow these instructions in reverse order.