



# LG X Style Top Speaker Replacement

Is the sound quality on your LG X Style phone...

Written By: Ryan Downing



# INTRODUCTION

Is the sound quality on your LG X Style phone not up to par, or has the speaker simply stopped working altogether? Don't worry, you don't have to live with muffled audio or missed calls. This comprehensive guide will walk you through the process of replacing the speaker in your LG X Style phone, so you can enjoy crystal-clear audio and never miss an important call or message again. With our step-by-step instructions and helpful tips, you'll be able to tackle this repair with confidence, saving both time and money. Get ready to bring back the sound to your LG X Style phone by following this iFixit guide!

---

## TOOLS:


[iFixit Opening Tool](#) (1)

[Phillips #000 Screwdriver](#) (1)

[Nylon Tipped Tweezers](#) (1)

---

## Step 1 — Battery

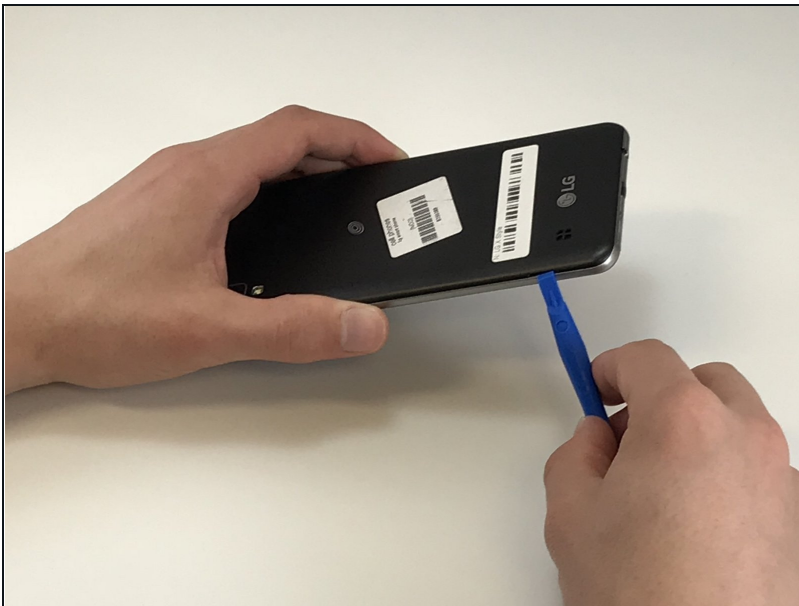

- Power down the device and make sure that it is turned off.
- Insert the plastic opening tool into the bracket space on the back bottom left of the phone.
- Gently twist tool clockwise until the back case pops open [this will create a small gap].
- Slide the tool along the gap around the entire device.

## Step 2



- Insert the plastic opening tool into the indent below the battery, and pry up to lift and remove the battery.

## Step 3 — Screen



- With a Phillips #000 screwdriver, remove the twelve 3mm screws.




## Step 4




- Create a gap with plastic opening tool by applying pressure between glass screen and plastic edge of device.
- Slide prying tool around entire device beginning toward the top.
- Lift off and remove the screen from the device.

## Step 5 — Motherboard

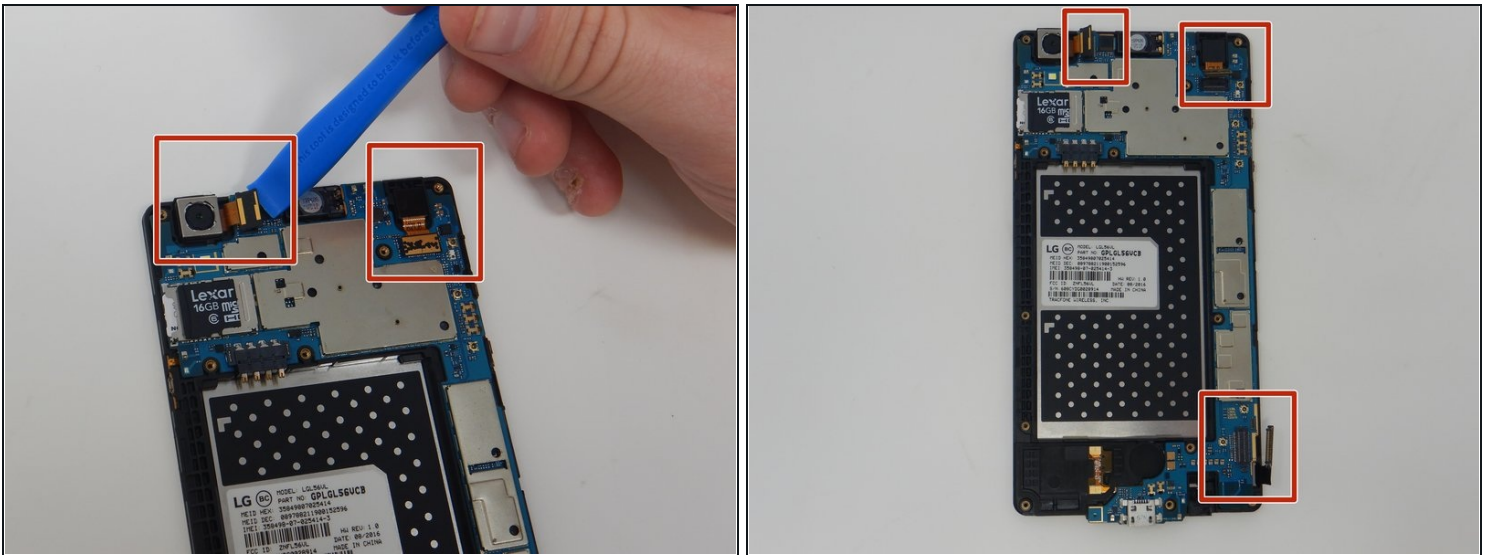


- Using the plastic opening tool, carefully slide the edge of the tool under the press fit cable connections and lift up to disconnect. Do this for all three ribbon cables.

## Step 6

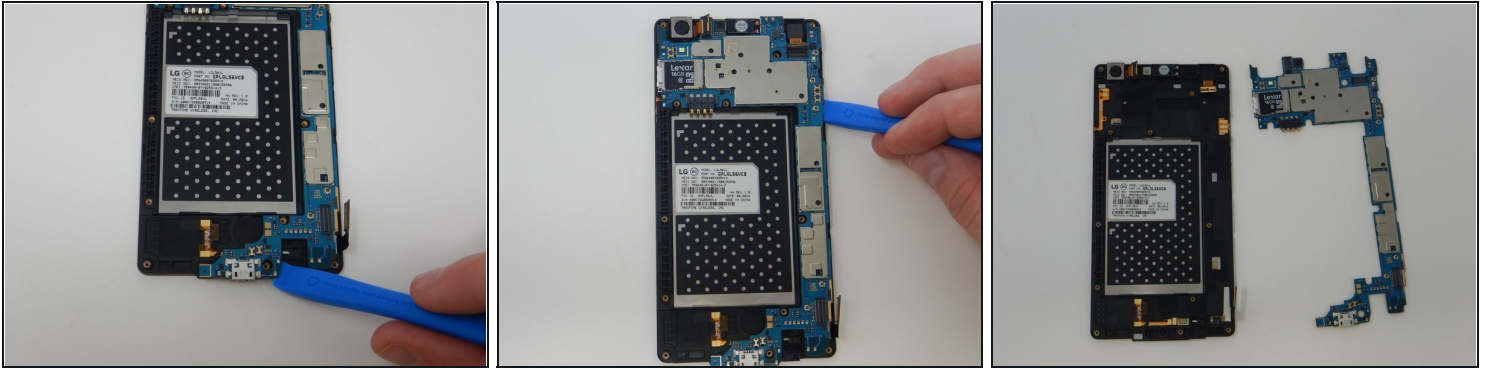

- Using the iFixit opening tool, remove the motherboard from the screen by inserting the opening tool under the edge of the motherboard and lifting up.

## Step 7 — Top Speaker

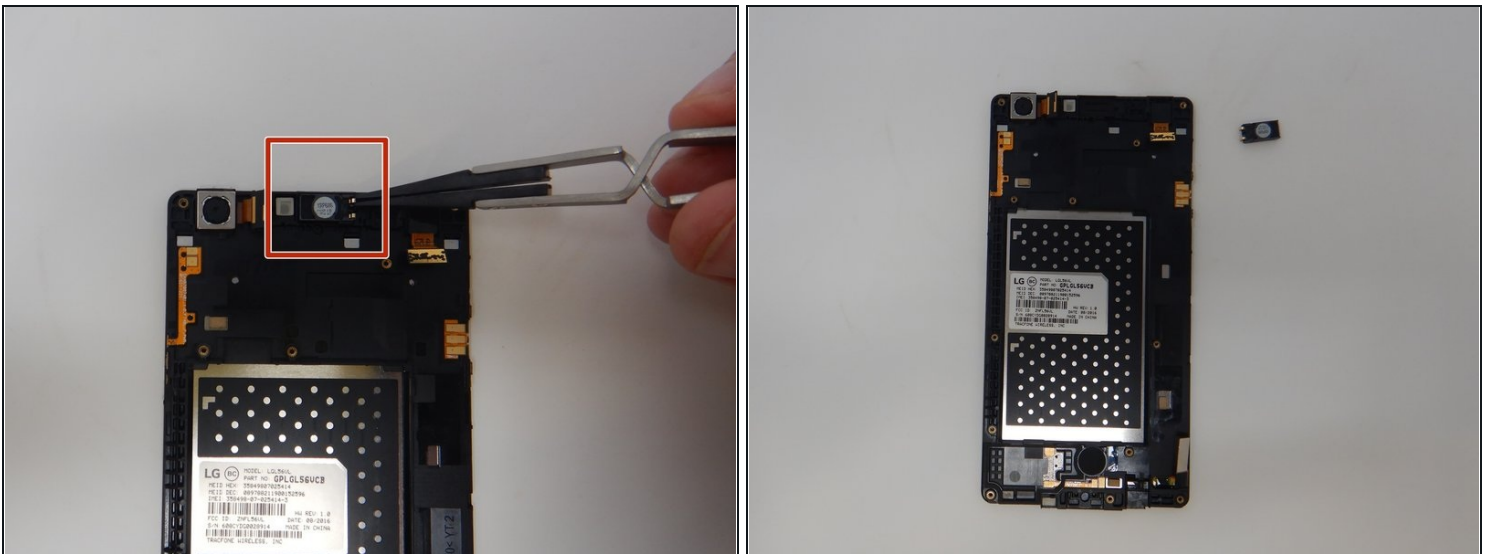

- Use the nylon-tip reverse tweezers to remove the front facing speaker.

To reassemble your device, follow these instructions in reverse order.