


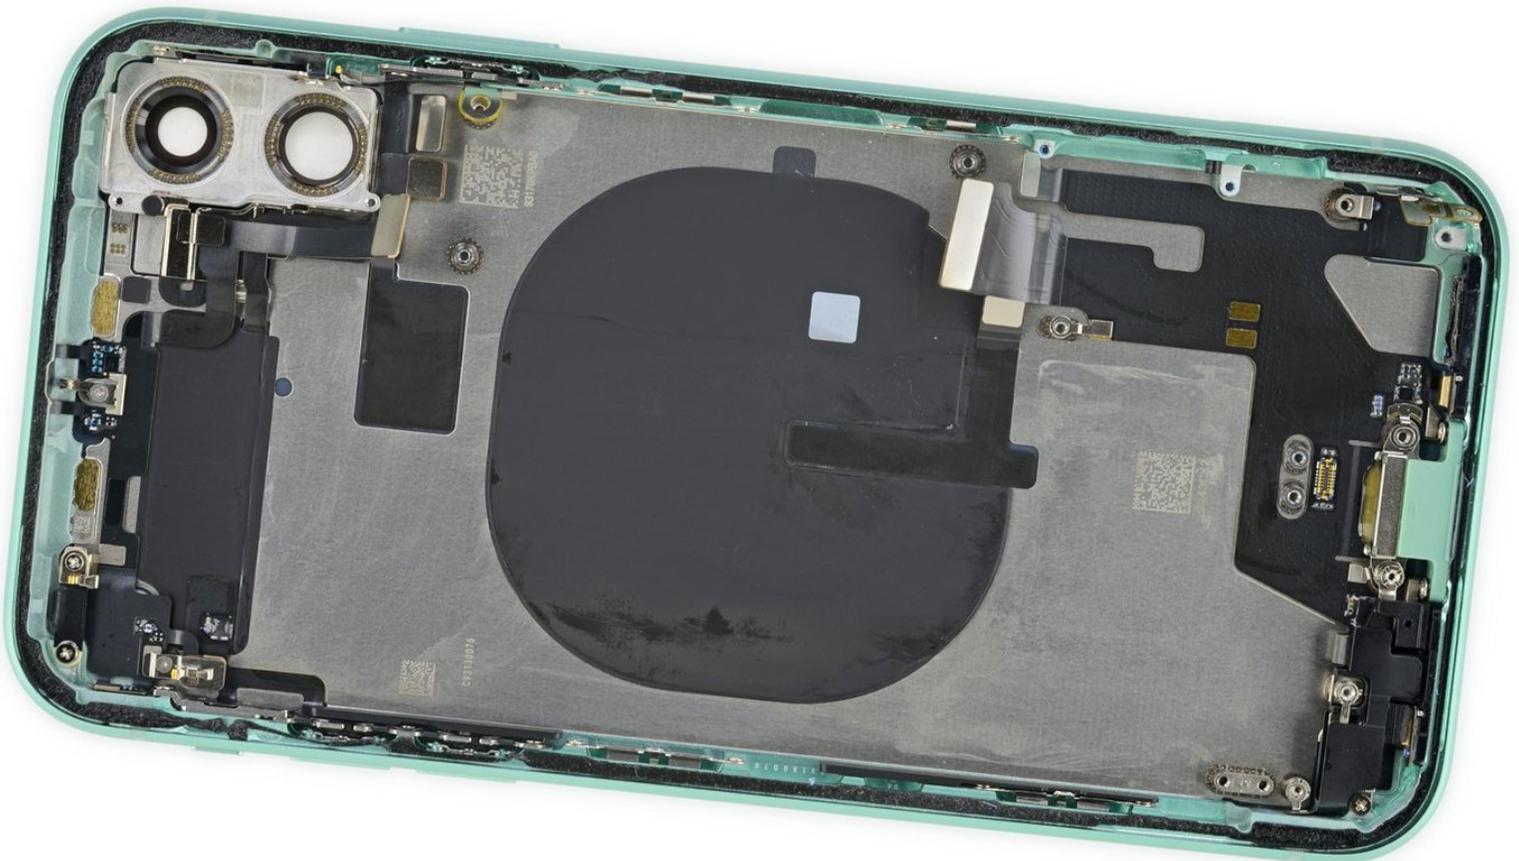

# iPhone 11 Rear Case Replacement

Use this guide to remove all components from the rear case of your iPhone 11

Written By: Arty



## INTRODUCTION

[video: <https://www.youtube.com/watch?v=49bbhKiEf2g>]

Use this guide to remove all components from the rear case of your iPhone 11. This guide will show you how to remove speaker, cables, taptic engine, battery, logic board, and button covers so you can replace a dented or bent cover.

### TOOLS:

- [Standoff Screwdriver for iPhones](#) (1)
- [P2 Pentalobe Screwdriver iPhone](#) (1)
- [Tri-point Y000 Screwdriver](#) (1)
- [Phillips #000 Screwdriver](#) (1)
- [Tweezers](#) (1)
- [Suction Handle](#) (1)
- [Spudger](#) (1)

### PARTS:

- [iPhone 11 Rear Case](#) (1)
- [iPhone 11 Display Assembly Adhesive](#) (1)
- [iPhone 11 Battery Adhesive Strips](#) (1)

To reassemble your device, follow these instructions in reverse order.