


# Clarke Floor Sander 07012A 2012 Fan Belt Replacement

This guide will show you how to replace the fan belt in a Clarke EZ-8 floor sander.

Written By: Taylor Dixon

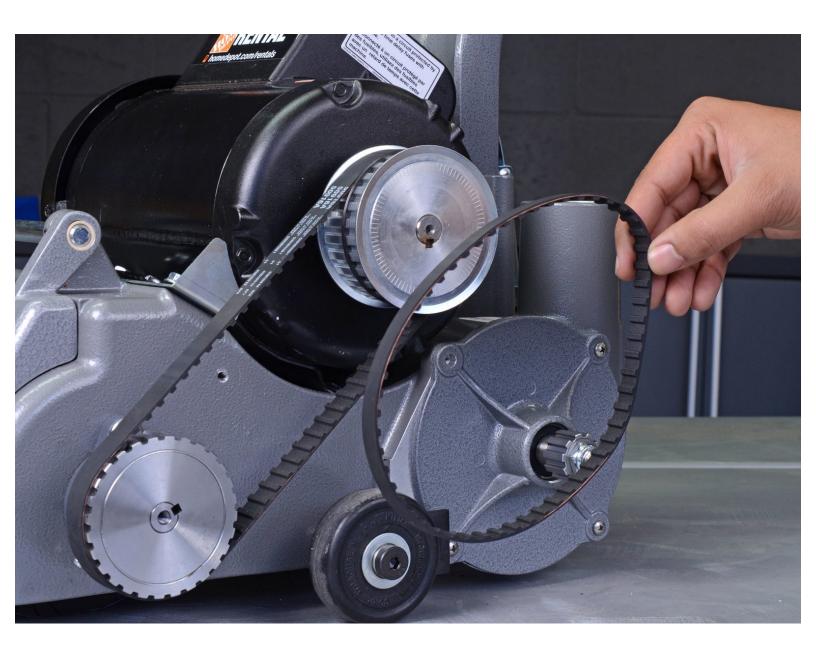

This document was generated on 2020-11-28 07:50:08 AM (MST).

#### **INTRODUCTION**

This guide will show you how to replace the fan belt in a Clarke EZ-8 floor sander.



## **TOOLS:**

- Phillips #2 Screwdriver (1)
- Socket Wrench (1)
- 1/2" Wrench (1)
- 6" Socket Extension (1)
- 1/2" Socket (1)



## **PARTS:**

• Clarke Belt, Fan 50917A (1)

#### Step 1 — Disconnect all power cables



⚠ Before you begin your repair, disconnect all power cables to reduce the risk of short circuits and electric shock.

#### Step 2 — Remove the dust bag





- Pull on the dust bag to remove it from the dust tube.
  - if the dust bag doesn't slide off easily, gently twist it back and forth while pulling to free it from the tube.

#### Step 3 — Remove the dust tube



 Pull up on the dust tube to remove it from the sander.

#### Step 4 — Remove the belt guard screws



- Use a long Phillips #2 screwdriver to remove the two screws securing the belt guard:
  - One 1/4-20 x 18 mm screw
  - One 1/4-20 x 30 mm screw

#### Step 5 — Remove the belt guard






Remove the belt guard.


#### Step 6 — Remove the dust shoe plate



- Carefully tilt the floor sander onto its side, exposing the sanding drum and the dust shoe plate.
- Use a Phillips #2 screwdriver to remove the four screws on the underside of the sander securing the dust shoe plate.
- Remove the dust shoe plate.


## Step 7 — Loosen the motor mount nuts

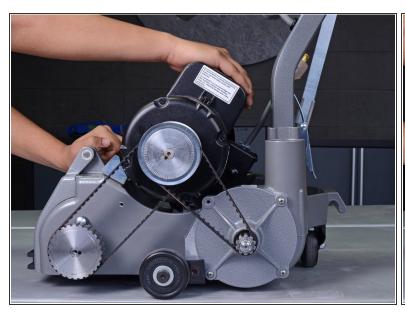

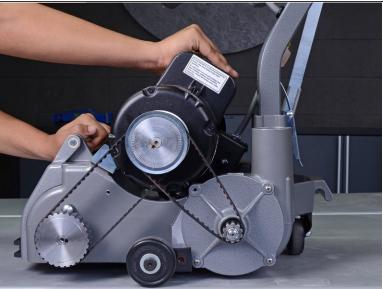


- in the following steps you will loosen the nuts that hold the motor in place on the frame of the sander to release the tension on the fan belt.
- For the purposes of this repair, there is no need to fully remove any of the nuts in the following steps. Just loosen them enough to allow the motor to slide back and forth.

### Step 8

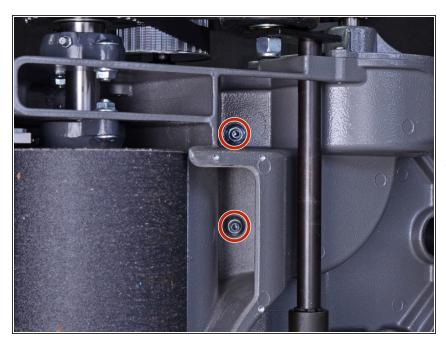


- Use a socket wrench with an extension and a deep 1/2" socket to loosen the two nuts behind the dust shoe plate.
- The nuts may be very tight. Use a breaker bar or impact driver if necessary.


# Step 9

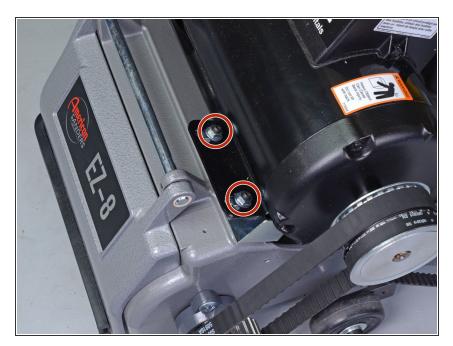

 Use a 1/2" wrench to loosen the other two nuts securing the motor.

#### Step 10 — De-tension the fan belt

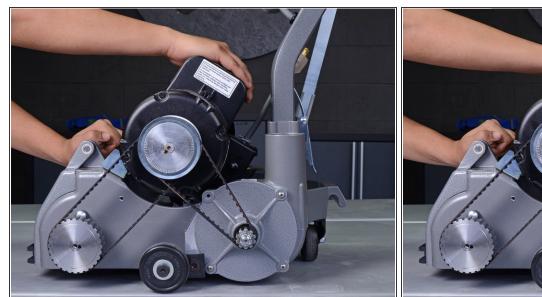

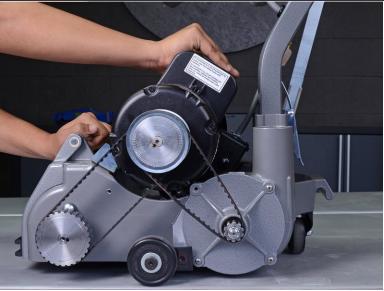

- Slide the motor along its mounting slots toward the back of the sander until the fan belt is detensioned.
- During reassembly, slide the motor back to its original position before tightening the four motor mount nuts. Check that both belts are properly tracked and tensioned before securing the belt guard back into place.

## Step 11 — Remove the fan belt







Remove the fan belt.

To reassemble your device, follow these instructions in reverse order.