




iPhone 11 Pro Lower Speaker Replacement

Use this guide to replace the primary loudspeaker at the bottom of the iPhone 11 Pro

Written By: Arty

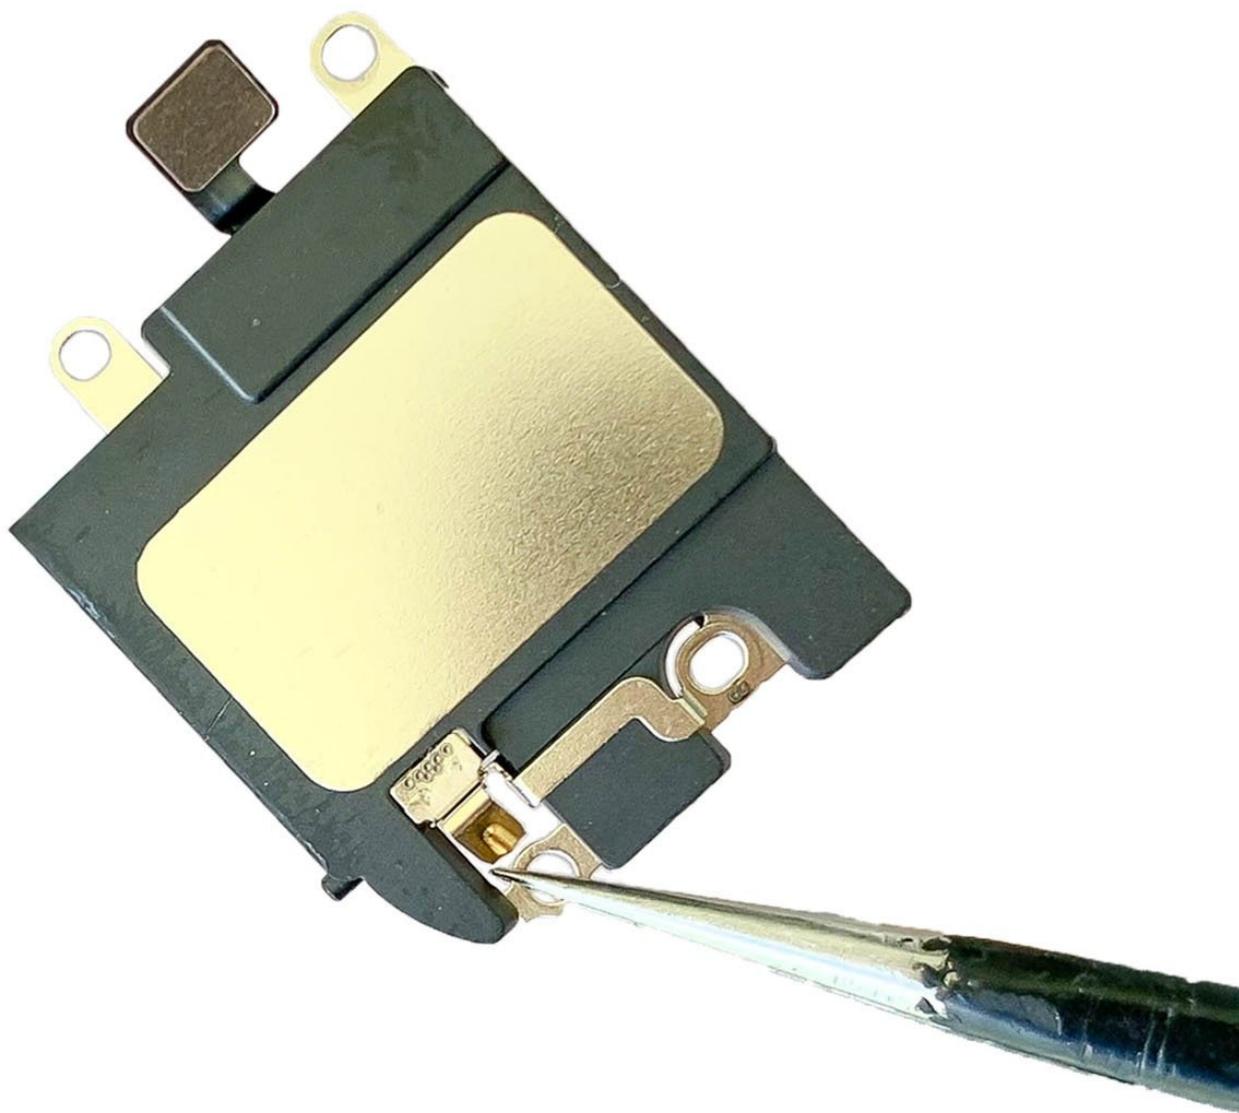

INTRODUCTION

[video: <https://www.youtube.com/watch?v=APxtvBv9sRc>]

Use this guide to replace the primary loudspeaker at the bottom of the iPhone 11 Pro. Replacing this speaker can help resolve issues such as loss of sound, poor sound quality, and distorted sound.



TOOLS:

- [P2 Pentalobe Screwdriver iPhone](#) (1)
- [Phillips #000 Screwdriver](#) (1)
- [Tri-point Y000 Screwdriver](#) (1)
- [Spudger](#) (1)
- [Tweezers](#) (1)
- [iFixit Opening Picks \(Set of 6\)](#) (1)
- [Suction Handle](#) (1)
- [Standoff Screwdriver for iPhones](#) (1)



PARTS:

- [iPhone 11 Pro Loudspeaker](#) (1)

To reassemble your device, follow these instructions in reverse order.