



# American Sanders EZSand Orbital Sander 07163A 2017 Sandpaper Disc Replacement

Remove or replace a hook-and-loop sandpaper disc on a Clarke Floor Sander 07163A.

Written By: Adam O'Camb



## INTRODUCTION

Use this guide to replace the hook-and-loop sandpaper disc on a Clarke Floor Sander 07163A 2017.

This guide shows the removal of just one disc, but the procedure for the other two discs is identical.

## Step 1 — Remove the sandpaper disc



- ⚠ Before you begin, be sure that the sander is unplugged and powered off.
- Carefully tilt the sander back and lay it down on its side, exposing the three sanding pads on the bottom.

## Step 2



- Peel the hook-and-loop sandpaper disc off of the driver assembly.

To reassemble your device, follow these instructions in reverse order.