



Dell Inspiron 15-5567 Back Cover Replacement

This guide helps you remove the back cover of the Dell Inspiron 15-5567 laptop.

Written By: Sattam Bakolka



INTRODUCTION

Removing the back cover is a fundamental step for cleaning, replacing, or repairing many other components inside the laptop. That's why this will serve as a pre-requisite task for most of the replacement guides of the Dell Inspiron 15-5567. You will only need a Phillips #0 screwdriver and the blue plastic opening tool to complete this guide.

TOOLS:

- [Phillips #0 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Back Cover



- Orient the laptop with the back cover facing upward and the INSPIRON engraving reads legible (not flipped).
- Remove 13 M2.5x8mm screws using a Philips #0 screwdriver.
- Remove two M2x4mm screws using the same screwdriver.

Step 2



- Insert the blue plastic opening tool into the crease of the CD driver, and pop it open.
- Slide the rest of it out with your hand.

Step 3



- Remove three M2x2mm screws underneath the CD driver with the same Philips #0 screwdriver.
 - Place the blue plastic opening tool in the crease of the cover and push it upward to open the back cover.
 - Grab the corners of the cover firmly and lift it up.
- ⚠ Some parts are weaker than others; open it gently from corners.

To reassemble your device, follow these instructions in reverse order.